ggmgastro

ORANGE JUICER

CONTENTS

| Α | GENERAL INFORMATION | Page | 2 |
|----|-------------------------------------|------|----|
| A1 | PRODUCT DESCRIPTION | Page | 3 |
| A2 | TECHNICAL INFORMATION | Page | 3 |
| A3 | TRANSPORTATION | Page | 4 |
| A4 | UNPACKING | Page | 4 |
| В | INSTALLATION | Page | 4 |
| С | SAFETY INSTRUCTIONS | Page | 5 |
| D | OPERATION | Page | 6 |
| E | CLEANING & MAINTENANCE | Page | 7 |
| F | TROUBLESHOOTING | Page | 8 |
| G | SPARE PART LIST- EXPLODING DRAWINGS | Page | 9 |
| Н | ELECTRIC CIRCUIT SCHEMA | Page | 14 |



A GENERAL INFORMATION

Before installing the appliance, read operation and maintenance instructions carefully. Wrong installation and part changing may damage the product or may cause injury on people. These are not in our company's responsibility to damage the appliance intentionally, negligence, detriments because of disobeying instructions and regulations, wrong connections. Unauthorized intervention to appliance invalidates the warranty.

- 1. This instruction manual should be kept in a safe place for future reference.
- 2. Installation should be made in accordance with ordinances and security rules of that country by a qualified service personnel.
- 3. This appliance has to be used by trained person.
- Please turn off the appliance immediately in the event of malfunction or failure. The
 appliance should be repaired only by authorized service personnel. Please demand
 original spare part.



A1 PRODUCT DESCRIPTION

*Professional Orange Juicers ,that provides high efficiency has been designed to be used in industrial kitchens.

| Product Code | Dimensions (mm) | Weight (kg) | Packaging Dimensions (mm) |
|--------------|-----------------|-------------|------------------------------|
| OPE24O | 420x578x910 | 68 | 470x620x960 |
| UGOPE24O | 470x578x800 | 21 | 520x620x850 |
| OPE24E | 420x578x910 | 68 | 470x620x960 |
| UGOPE24E | 470x578x800 | 21 | 520x620x850 |

A2 TECHNICAL INFORMATION

| Product Code | Squeeze Capacity (piece/min) | Filling Capacity (kg-tour) | Reamer Motor Power (KW) | Operating Voltage (V) | Cable (mm²) | Fuse (A) |
|--------------|------------------------------------|----------------------------------|----------------------------------|--------------------------|----------------|-------------|
| OPE24O | 25 | 18 | 0,37 | 220-240 | 3x1,5 | 16 |
| UGOPE24O | Lower stand | | | | | |
| OPE24E | 25 | 18 | 0,37 | 220-240 | 3x1,5 | 16 |
| UGOPE24E | Lower stand | | | | | |



A3 TRANSPORTATION

*This appliance can not be moved by hand from area to area. It must be moved on pallet with forklift truck.

A4 UNPACKING

*Please unpack the package according to the security codes and ordinances of current country and get rid from the pack.Parts which contacts with food are produced by stainless steel.All plastic parts are marked by material's symbol.

*Please check that all the parts of appliance had come completely and if they are damaged or not during the shipping.

B INSTALLATION

*Please place the product to straight and sturdy ground, please take necessary steps against possibility of overturn.

*Technician who will serve for installation and service for the appliance must be professional on this subject and must have installation and service licenses by the company.

*Connection to Electric Power Supply must be done by authorized person.

*Please be sure that the voltage connected to appliance must be equal with the voltage which is on appliance's label.

This appliance must be connected to an earthed outlet in accordance with safet rules and standards.

*Appliance's earthing must be connected to earthing line on panel which is nearest to electric installation.

*Connection to the main fuse and leak current fuse must be done in accordance with the current regulations.



C SAFETY INSTRUCTIONS



*Do not use the appliance in insufficient lighted place.



*Do not touch the moving attachments while the appliance operates.



 $\ensuremath{^{\star}}\xspace\xspace\xspace\xspace$ on the presence of flammable or explosive materials.



*Do not operate the appliance when the machine is empty.



*Do not load so less or more than appliance's capacity.



*Do not attempt to use the appliance without suitable protective equipments.



*Because of any reason if there is a fire or flame flare where the appliance is used,turn off all gas valves and electric contactor switch quickly and use fire extinguisher .Never use water to extinguish the fire.



*All the damages because of not having earthing connection will not be on warranty.



D OPERATION

*Control Panel;



A: ON / OFF

*Operating;

- Before operating the appliance, clean the outer surface, reamer balls and residue filter with moist cloth.
- In order to operate the appliance plug in.
- If you dont place the appliance's front safety guard, it is not operated due to having magnetic sensor.
- Before puting the oranges into the tank, clean the oranges and wait all water particles to be lost. Otherwise water may get into the tank launcher and may damage ball bearings and seals.
- There is 1 switch for launcher and boring balls on the side of the device. Press the switch to operate the device's boring balls.
- The launcher and reamer balls are going to start at switch on.
- Put oranges that have 60-85 mm diameter and pay attention not to overload the appliance,
- The orange juice will flow from voidance orifice.
- After the operation completed switch (0) position and unplug the appliance.



E CLEANING & MAINTENANCE

> CLEANING AND MAINTENANCE AFTER EVERY USE

- Clean the residue filter under reamer balls after every use.
- Always turn off the appliance and disconnect from the power supply before cleaning.
- Clean the appliance's tank, residue filter and reamer balls with cleaning materials and rinse with water.
- Pay attention that the cleaning materials that are used to be hygienic.
- Do not use abrasive cleaning chemicals as these can leave harmful residues.
- Do not clean the appliance by spraying water directly, otherwise electric motor may get damaged.

PERIODIC CLEANING AND MAINTENANCE

- Maintenance should be done by qualified person.
- Get the periodic maintenance of the appliance once in every 15 days.
- According to frequency of use, clean the reamer balls with boiling water 2 times in a
 week.
- Maintenance of the appliance's contactor should be done by compressed air according to frequency of use.
- Check the gear system. If necessary lubricate with the help of grease nipple.



F TROUBLESHOOTING

| THE APPLIANCE DOESN'T OPERATE | Check if the appliance is plugged in. Check the electrical connections and voltage. |
|-------------------------------|--|
| | |
| | Check the launcher. |
| THE APPLIANCE IS NOISY | 2. If the motor is noisy, stop it and call |
| | authorized service. |
| | |
| | The appliance can stop due to low |
| | voltage.In this situation check the |
| THE APPLIANCE STOPPED | voltage. |
| | Check if there are oranges accumulated |
| | on the way of cutting tank. |
| | on the way of cutting tank. |


- If orange squeeze process is not done at suitable quality
- If any function of security doesn't work
 - Do not use the appliance.

^{*}If these problems are still going on,contact with our authorized services.

ggmgastro

ORANGE JUICER

G SPARE PART LIST- EXPLODING DRAWINGS

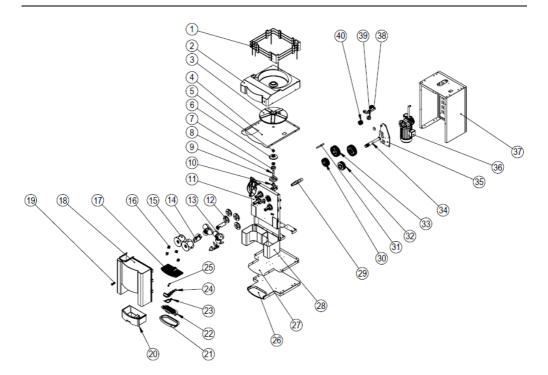

OPE24E OPE24O



G SPARE PART LIST- EXPLODING DRAWINGS

| PRODUCT CODE : OPE24E | | | | |
|-----------------------|--------------------------------|--------------|--|--|
| NO | PRODUCT NAME | P.CODE | | |
| 1 | WIRE CAGE | Y.OPE24E.001 | | |
| 2 | TOP PLASTIC (GRAY) | Y.OPE24E.002 | | |
| 3 | UPPER DRUM PLASTIC | Y.OPE24E.003 | | |
| 4 | TOP PLASTIC SHEET | Y.OPE24E.004 | | |
| 5 | BEARING SCREW PLASTIC | Y.OPE24E.005 | | |
| 6 | DRUM BEARING PLASTIC | Y.OPE24E.006 | | |
| 7 | DRUM BUSHING | Y.OPE24E.007 | | |
| 8 | TOP GEAR SHAFT | Y.OPE24E.008 | | |
| 9 | TRANSMISSION GEAR | Y.OPE24E.009 | | |
| 10 | CONNECTION BUSH | Y.OPE24E.010 | | |
| 11 | CHASSIS | Y.OPE24E.011 | | |
| 12 | BED FRONT PLASTIC | Y.OPE24E.012 | | |
| 13 | TOP PLASTIC | Y.OPE24E.013 | | |
| 14 | SHELL SEPARATOR | Y.OPE24E.014 | | |
| 15 | BORING BED PLASTIC | Y.OPE24E.015 | | |
| 16 | BORING BEARING SCREW PLASTIC | Y.OPE24E.016 | | |
| 17 | DRAWER DRAWER PLASTIC | Y.OPE24E.017 | | |
| 18 | FRONT COVER PLASTIC | Y.OPE24E.018 | | |
| 19 | GREEN LIGHTED METAL BUTTON | Y.OPE24E.019 | | |
| 20 | DRAWER PLASTIC | Y.OPE24E.020 | | |
| 21 | BOTTOM WATER CONTAINER PLASTIC | Y.OPE24E.021 | | |
| 22 | BOTTOM WATER CONTAINER STRAIN | Y.OPE24E.022 | | |
| 23 | TAP PLASTIC TOP | Y.OPE24E.023 | | |
| 24 | FAUCET PLASTIC BOTTOM | Y.OPE24E.024 | | |
| 25 | TAP PLASTIC MIDDLE | Y.OPE24E.025 | | |
| 26 | BASE PLASTIC | Y.OPE24E.026 | | |
| 27 | FLOOR SHEET | Y.OPE24E.027 | | |
| 28 | WASTE CONTAINER (GRAY) | Y.OPE24E.028 | | |
| 29 | BORING BEARING SHAFT | Y.OPE24E.029 | | |
| 30 | TRANSMISSION GEAR 2 | Y.OPE24E.030 | | |
| 31 | TOP GEAR SHAFT | Y.OPE24E.031 | | |
| 32 | TRANSMISSION GEAR 1 | Y.OPE24E.032 | | |
| 33 | TRANSMISSION GEAR 3 | Y.OPE24E.033 | | |
| 34 | REDUCER GEAR SHAFT | Y.OPE24E.034 | | |
| 35 | REDUCER CONNECTION SHEET | Y.OPE24E.035 | | |
| 36 | ELECTRIC MOTOR | Y.OPE24E.036 | | |
| 37 | MIDDLE STRUT SHEET | Y.OPE24E.037 | | |
| 38 | ALUMINUM TOP GEAR PART | Y.OPE24E.038 | | |
| 39 | TRANSMISSION GEAR 6 | Y.OPE24E.039 | | |
| 40 | TRANSMISSION GEAR 4 | Y.OPE24E.040 | | |

ggmgastro


ORANGE JUICER

G SPARE PART LIST- EXPLODING DRAWINGS

| PRODUCT CODE : OPE240 | | | | |
|-----------------------|--------------------------------|--------------|--|--|
| NO | PRODUCT NAME | P.CODE | | |
| 1 | WIRE CAGE | Y.OPE24O.001 | | |
| 2 | TOP PLASTIC (ORANGE) | Y.OPE24O.002 | | |
| 3 | UPPER DRUM PLASTIC | Y.OPE24O.003 | | |
| 4 | TOP PLASTIC SHEET | Y.OPE24O.004 | | |
| 5 | BEARING SCREW PLASTIC | Y.OPE24O.005 | | |
| 6 | DRUM BEARING PLASTIC | Y.OPE24O.006 | | |
| 7 | DRUM BUSHING | Y.OPE24O.007 | | |
| 8 | TOP GEAR SHAFT | Y.OPE24O.008 | | |
| 9 | TRANSMISSION GEAR | Y.OPE24O.009 | | |
| 10 | CONNECTION BUSH | Y.OPE24O.010 | | |
| 11 | CHASSIS | Y.OPE24O.011 | | |
| 12 | BED FRONT PLASTIC | Y.OPE24O.012 | | |
| 13 | TOP PLASTIC | Y.OPE24O.013 | | |
| 14 | SHELL SEPARATOR | Y.OPE24O.014 | | |
| 15 | BORING BED PLASTIC | Y.OPE24O.015 | | |
| 16 | BORING BEARING SCREW PLASTIC | Y.OPE24O.016 | | |
| 17 | DRAWER DRAWER PLASTIC | Y.OPE24O.017 | | |
| 18 | FRONT COVER PLASTIC | Y.OPE24O.018 | | |
| 19 | GREEN LIGHTED METAL BUTTON | Y.OPE24O.019 | | |
| 20 | DRAWER PLASTIC | Y.OPE24O.020 | | |
| 21 | BOTTOM WATER CONTAINER PLASTIC | Y.OPE24O.021 | | |
| 22 | BOTTOM WATER CONTAINER STRAIN | Y.OPE24O.022 | | |
| 23 | TAP PLASTIC TOP | Y.OPE24O.023 | | |
| 24 | FAUCET PLASTIC BOTTOM | Y.OPE24O.024 | | |
| 25 | TAP PLASTIC MIDDLE | Y.OPE24O.025 | | |
| 26 | BASE PLASTIC | Y.OPE24O.026 | | |
| 27 | FLOOR SHEET | Y.OPE24O.027 | | |
| 28 | WASTE CONTAINER (ORANGE) | Y.OPE24O.028 | | |
| 29 | BORING BEARING SHAFT | Y.OPE24O.029 | | |
| 30 | TRANSMISSION GEAR 2 | Y.OPE24O.030 | | |
| 31 | TOP GEAR SHAFT | Y.OPE24O.031 | | |
| 32 | TRANSMISSION GEAR 1 | Y.OPE24O.032 | | |
| 33 | TRANSMISSION GEAR 3 | Y.OPE24O.033 | | |
| 34 | REDUCER GEAR SHAFT | Y.OPE24O.034 | | |
| 35 | REDUCER CONNECTION SHEET | Y.OPE24O.035 | | |
| 36 | ELECTRIC MOTOR | Y.OPE24O.036 | | |
| 37 | MIDDLE STRUT SHEET | Y.OPE24O.037 | | |
| 38 | ALUMINUM TOP GEAR PART | Y.OPE24O.038 | | |
| 39 | TRANSMISSION GEAR 6 | Y.OPE24O.039 | | |
| 40 | TRANSMISSION GEAR 4 | Y.OPE24O.040 | | |



G SPARE PART LIST- EXPLODING DRAWINGS

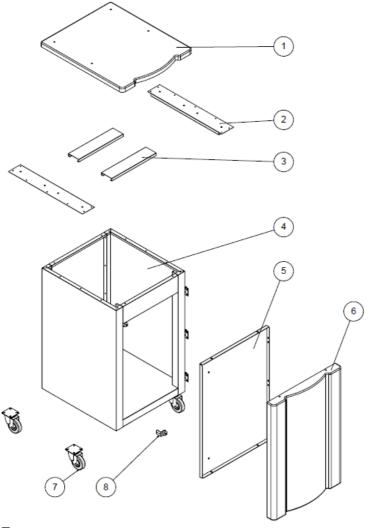

UGOPE24E UGOPE24O




G SPARE PART LIST- EXPLODING DRAWINGS

| PRODUCT CODE : UGOPE240 | | | | |
|-------------------------|-------------------------------------|----------------|--|--|
| NO | PRODUCT NAME | P.CODE | | |
| 1 | BOTTOM STAND TOP PLASTIC | Y.UGOPE24O.001 | | |
| 2 | TOP SUPPORT SHEET | Y.UGOPE24O.002 | | |
| 3 | TOP SUPPORT CENTER SHEET | Y.UGOPE24O.003 | | |
| 4 | CHASSIS | Y.UGOPE24O.004 | | |
| 5 | COVER INSIDE SHEET | Y.UGOPE24O.005 | | |
| 6 | BOTTOM STAND COVER PLASTIC (ORANGE) | Y.UGOPE24O.006 | | |
| 7 | PLAYING WHEEL WITHOUT BRAKE | Y.UGOPE24O.007 | | |
| 8 | MAGNET NUT | Y.UGOPE24O.008 | | |

| PRODUCT CODE : UGOPE24E | | | | |
|-------------------------|-----------------------------------|----------------|--|--|
| NO | PRODUCT NAME | P.CODE | | |
| 1 | BOTTOM STAND TOP PLASTIC | Y.UGOPE24E.001 | | |
| 2 | TOP SUPPORT SHEET | Y.UGOPE24E.002 | | |
| 3 | TOP SUPPORT CENTER SHEET | Y.UGOPE24E.003 | | |
| 4 | CHASSIS | Y.UGOPE24E.004 | | |
| 5 | COVER INSIDE SHEET | Y.UGOPE24E.005 | | |
| 6 | BOTTOM STAND COVER PLASTIC (GRAY) | Y.UGOPE24E.006 | | |
| 7 | PLAYING WHEEL WITHOUT BRAKE | Y.UGOPE24E.007 | | |
| 8 | MAGNET NUT | Y.UGOPE24E.008 | | |



H ELECTRIC CIRCUIT SCHEMA

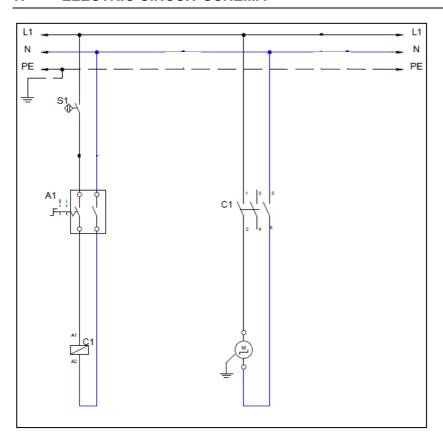

| A1 | C1 | S1 | M1 |
|---|--------------------------|---------------------------|---------------------------------|
| C1 Contactor Switch Large Lighted | Lower Motor Contactor | Magnetic Safety Sensor | Lower Motor 0,37 KW-1500 rpm |