

# HIGH PERFORMANCE MILK SHAKE MACHINE



**MODEL: SPMET2**

**READ AND SAVE THESE INSTRUCTIONS**

## **IMPORTANT SAFEGUARDS**

- 1, Read all instructions.
- 2, To protect against risk of electrical shock, do not put motor base in water or other liquid.
- 3, Under adult supervision is quite necessary when appliance is used by or near children.
- 4, Unplug the power cord from the wall outlet when the machine is not in use, before putting on or taking off parts, and before cleaning other than washing the container.
- 5, Never contact moving parts.
- 6, Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or in dropped or damaged in any manner. Call service at once for possible replacement, test and repairing, electrical or mechanical adjustment.
- 7, Do not use outdoors.
- 8, Do not let the power cord hang over edge of table or counter, or touch hot surfaces.
- 9, Keep hands and utensils out of the container while motor is running to prevent the possibility of severe personal injury and / or damage to the blender(Milk shake machine). A rubber scraper may be used, but only when the blender is stopped.
- 10, Please take off the cup after you make sure the blending blade is stopped entirely.

## **FEATURES:**

- 1, High speed industrial motor for better mixing.
- 2, Variable speed regulation to satisfy your requirement.
- 3, Good quality and durable blades.
- 4, Stainless steel blending cup for long time use.
- 5, For commercial and household use.

## **OPERATION INSTRUCTION:**

### **MILK**

- 1, Add some material : water, sugar and pure milk (powdered milk).
- 2, Put the blend cup on the bracket of the blender after putting all well prepared materials in the cup.
- 3, Connect the electric power source, turn on the switch.
- 4, About 5 seconds later the milk will be fine blended.

Attention: when putting materials, please be with proper capacity of water.

## **ATTENTION:**

- 1, Never put any metal things in the cup such as knife, fork, spoon, etc.
- 2, Please make sure it is power off when take the cup off for cleaning in order to preventing from injury or other danger.
- 3, Never use it for cutting some ting in pieces or blending some solid food that is insoluble in water.
- 4, Please make sure the cup is safely placed on the bracket first before starting to work.
- 5, When it starts to work, please hold the top cover slightly because of the vibration due to the high speed of the motor.
- 6, Please do not put into too much things into the cup for blending to avoid overflowing when it is blending.
- 7, Please be sure the switch is turned off and the motor is stopped completely when you take off the cup.
- 8, Please be always attention whether you touch the switch careless before or after the machine works.

## **MAINTAINANCE:**

- 1, When maintaining or cleaning, please make sure the outlet is unplugged, and the switch stays at “off”
- 2, Please clean the cup by sponge or cloth carefully.

### **TROUBLESHOOTING:**

When it does not work, please check:

- 1, If the outlet is unplugged?
- 2, If the switch is turned on?
- 3, If the power is off?

If none of above found, please send it to repair, do not handle it by yourself!

### **SPECIFICATION:**

Voltage: 230V


Frequency: 50Hz

Power of motor: 2X300W

Dimension: 330x160x500mm

Weight: 6kgs

### **CIRCUIT DIAGRAM:**

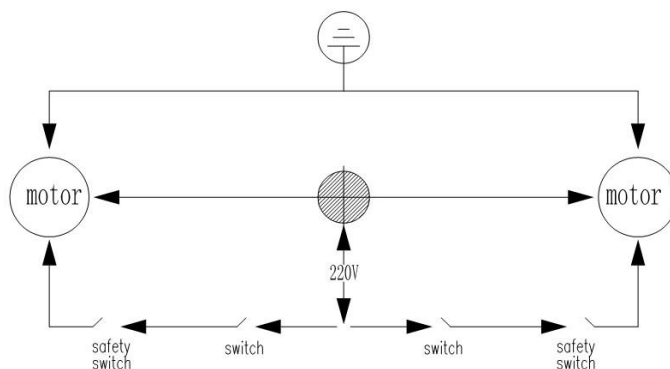

### **EXPLODED DRAWING:**

