

COMMERCIAL ELECTRICAL AND SAND COFFEE COOKER

USER MANUAL



MODEL: TKKSRM Manual EN



1.PRESENTATION

Dear user;

Our best thanks to you about you to choose our product and trust in us. Our products are used in lots of domestic cities like your choice. Our product is manufactured according to the standard rules. We kindly remind that you to read the user manual carefully for having the best performance against your expectations from the product and using for long time and be sure the other users read it, too. Please care about the rules written below before calling the service.

2.WARNINGS

Please read this manual carefully and be sure the other users read it, before the product is installed and operated for first. The product will be out of warranty if you operate the device without reading the user manual. The user manual should be written carefully to install, use and the maintenance of the product that you have bought. The electrical circuit that you will plug in your product, should be suitable for the legislations. The faults are in your responsibility which are occurred by your electrical circuit. Please call the authorized service to have more information about the subjects that you have doubts or misunderstand. We wish you to have the best performance from the product. You will be charged when you want service next to you about this product.

3.DESCRPTION AND PURPOSE OF THE PRODUCT

The device is produced to cook coffee on the special sand in it and the device is used in the industrial kitchen services (collective food services, restaurants, touristic places, buffets and etc.)

4. SAFETY DETAILS

- The device works with 220-230 Volt ~ 50-60 Hz electricity.
- If the electrical cable is damaged please contact with the service.
- The device should be switched off before plugged into the electricity.
- The all flammable solid and liquid materials (cloth, alcohol kinds, petrochemical materials, wooden materials, plastic materials and curtain) should be removed from the area that the device is operated.
- Do not clean the product under flowed and pressured water.
- The device can be used together with our other products in the same product serie. There has to be at least 30 cm between the each product.
- The device should be located and operated in a suitable for legislation and well aired place. Please check the instructions before locating and operating the device.
- The device is produced to use for industrial purposes and should be used by the well educated person.
- Noone should try to fix the device except the producer and the authorized service.
- If any flame occurs next to the device in the close location, please shut down the gas valves and the circuit breaker with out any panic. Use fire extinguisher. Never use water to extinguish the flame.
- The device should be plugged into the grounded socket out. Be sure that you have grounded line in your electricity circuit.
- All user should read the user manual.
- Keep away from the children.
- Do not use the device out its main purpose.
- Do not close the air flow holes of the device.
- The device should be located on a non-flammable surface.
- Do not operate it next to the hot machines.
- It has to be operated in a well aired place.
- Do not operate it under the sunlight directly.
- Do not drain any water on the sand when it is hot.
- Operate the device on a non-flammable surface.
- Please just use the original sand with the device.
- Please use heat resistant glove against its hot surfaces.

5. USING THE DEVICE

5.1. FIRST USE:

- Unpack the device from its box and check if it is damaged or not. Do not operate it if it is damaged..
- Take out the protection bands if there is.
- Clean the device with dish detergent and dry it. Do not let the water touches to the electrical parts.
- Do not clean the device in a dish washer.
- For the first use, some smoke can be seen. That smoke comes from the isolation material and that is so normal and usual event for this device.

5.2. USAGE:

- Plug in the device to the electricity socket out.
- The sand should be spreaded on the resistance
- Turn on the switch if there is on the device (based on model)
- Set the thermostat as 200- 250°C. It takes time about 30 minutes according to the capacity.
- The thermostat indicator light turns off when it reaches to the cooking temperature and you can cook at this temperature.
- Prepared coffee in the coffee pot should be put on the hot sand and cooked.
- Do not drain any water on the hot sand.
- If the heat is not enough to cook, please set the thermostat higher value.
- The thermostat can be set as 150°C after cooking ends to save energy.
- Please switch off the thermostat after the service ends.
- Please plug out the device from the electricity socket out when it is out of use.
- Operate the device on flat surface.
- Operate the device on a non-flammable surface.

5.3. CLEANING:

- Plug out the device from the electricity socket before cleaning.
- If there is any residual coffee on the device that should be cleaned.
- Do not flow water inside of the device. Clean the main body with a wet cloth.
- Do not clean the main body under flow water.
- The device should be clean well and repacked if it will be out of use for a long time.

5.4. CARRYING AND MOVING

- Plug out the device from the electricity socket before carrying.
- It can be carried by human power.
- Do not bump or drop the device while you carry it.

5.5. MONTAGE:

- The under set desk should be parallel with the ground and have adjustable legs when the device is use on it.
- The electricity circuit should be checked by authorized person and has to be connected to the circuit breaker that located at least 170 cm height.
- The electricity circuit should have a leakage current breaker as 30 mA.
- The device should be used with grounded electricity circuit.

5.6. EFFICIENCY USE

- Switch off the device when it is out of use.
- Always keep the device clean.
- Please obey the directives written in the user manual.
- At 24 °C, you can have the best performance from the device.
- The device can work between -5 and +40 °C.

6. CLEANING AND MAINTENANCE

6.1. CLEANING:

- Clean the out surface with a sponge via using dish detergent and dry it out after every end of service beginning the first use.
- Do not use nitric acid or any kind of CHEMICAL MATERIALS to clean the device.

6.2. MAINTENANCE:

- Before any maintenance plug out the device from the electricity socket.
- Worn off parts should be replaced with the original exparts.
- The periodical maintenance should be done by the user.
- We recommend to maintenance for about per every 2 months according to the using frequency.
- It will be charged to user for maintenance even the device is warranty.

6.3. LIFE OF THE DEVICE

The life of the device is about 10 years if it is used according to the recommendations in the user manual.

6.4. FAULTS AND FAULT SOLUTIONS

1- The device is connected to the electricity socket out but it is not working!

- Check the main circuit breaker,
- Check the electric cable of the device,
- Check the thermostat,
- If the problem still continuous please call the authorized service.

Do not struggle to fix it by your self.

7. TECHNICAL PROPERTIES AND THE LABELS

	ÜRÜN ÖLÇÜSÜ <i>Product Dimensions</i>	AĞIRLIK <i>Weight</i>	GÜÇ <i>Power</i>
	330*410*155mm	8 kg	6000 Kcal
	330*410*155mm	8 kg	6000 Kcal

ELEKTRİKLİ KUMDA KAHVE MAKİNASI		CE
ÜRÜN KODU MODEL: KUMDA KAHVE / COFFEE WARMER WITH SAND		
VOLTAJ / Voltage: 220 - 230 V 50-60 Hz		
AKIM / Nominal Current: 5 A		
GÜÇ / Power: 1100W		
ÜRÜN SINIFI / Product Class: I / IP 20		
AĞIRLIK / Weight: 8 KG		
EBAT / Dimensions: 330x410x155 mm		
SERİ NO:		



HOT SURFACE

WARNING! GROUNDLED ELECTRICITY CIRCUIT