

Parts list



AX8



BX8



DX1



HX2



EX2




FX2



GX4



Nx4

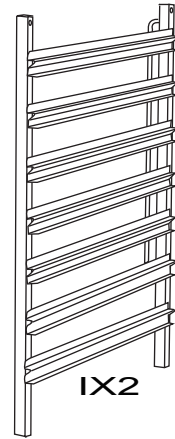


IX2




JX1


1

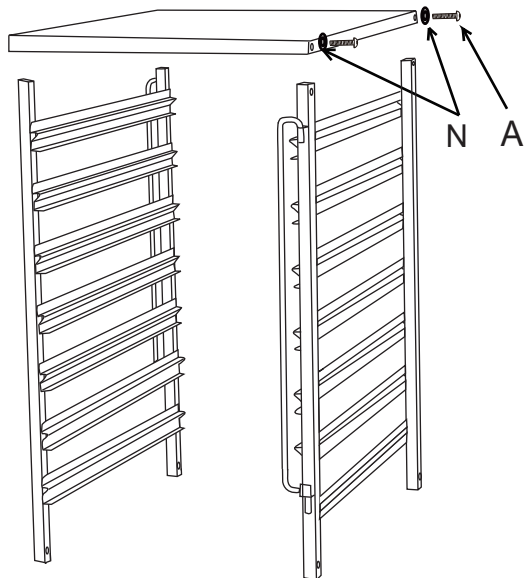

2

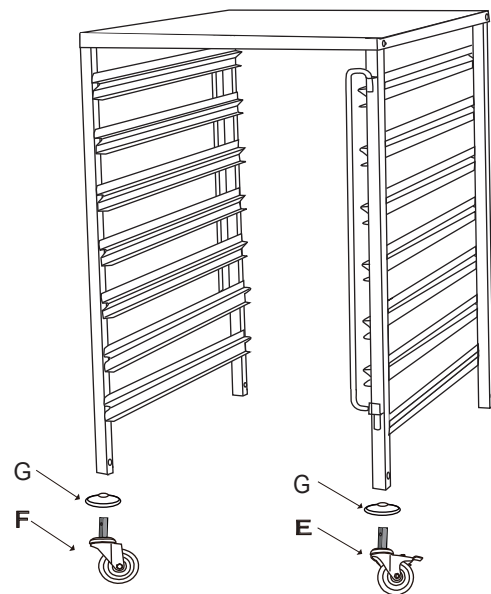

3

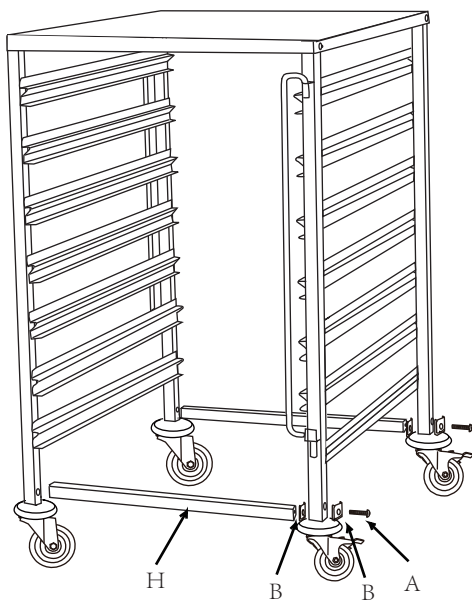

4

