 


ggmgastro

USER MANUAL

DISPENSER HEATER WITH INDUCTION

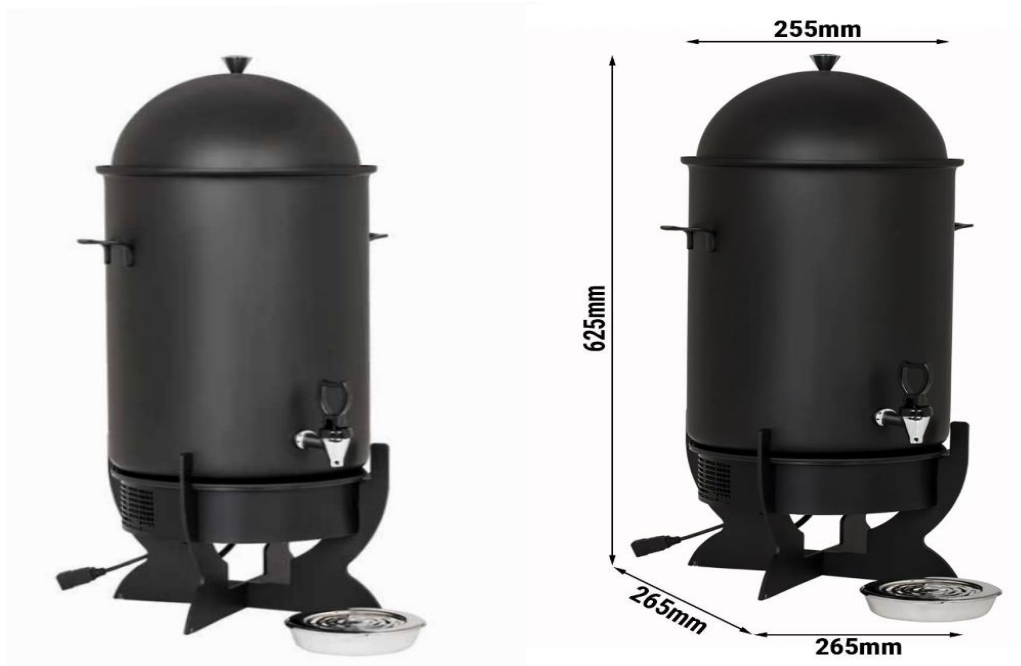 


No: 5
Receptacle
of
Induction
Heater




→ No:1 Cover


→ No:2 Body

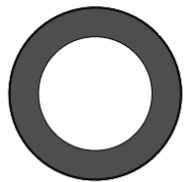


No:3 Leg

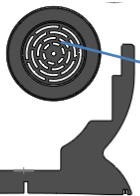 

No:4 Leg

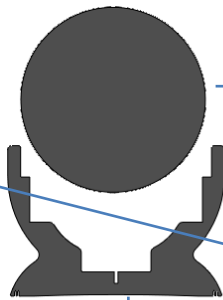 

→ No:6 Induction Heater

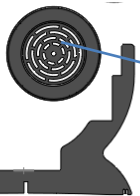 

→ No:7 Droptank

SETUP: Throw in two legs (No:3 + No:4). Place inside to receptacle of induction heater (No:5) and Induction heater (No:6).

Merge body (No:2) and cover(No:1). Than put metal body on the legs. Use the droptank (No:7) to prevent hot drop.

USE FOR: You should use it by putting water/tea/milk into it.

HYGIENE : You can clean the body inside by washing it. It cannot be put in the dishwasher. Wipe the metal parts.

Instructions to use the induction plate is below:

I .Specification

- 1). Item No.: 54010101
- 2). Power Rate: 500W -1000W
- 3). Voltage: 220-240V~50 / 60Hz 1000W

II .Cautions

- 1). Do not plug with wet hands.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- 4). Do not modify the parts, or repair the unit by yourself.
- 5). Do not use the unit near flame or wet places.
- 6). Do not use where children can easily touch the unit, or allow children to use the unit by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the unit when the pot or the pan is on it.
- 9). Do not heat the pot empty or overheat the pot.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, switch off and take to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the unite near to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
- 18). The power cord must be replaced by qualified technicians.

III.How to Use

- 1). Place suitable cooking utensils in the center of the top plate and plug in, the power light will shine
- 2). Pressing ON/OFF button, the cooker will be work, Set the cooker at desired power by directly pressing to adjust the from 1 to 10 or 10 to 1.
- 3). The appliance is equipped with an overheat protection, If the pot or pan is getting to hot, the appliance will switch off power, a buzzer sounds and on the display occurs "E2". Should this happen, wait for some minutes and cool the appliance down. After that, the appliance works without problems.
- 4). This appliance is liable to get hot during use.

IV.Usable and Non-usable Utensils

 
- 1). Usable Pans

Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 12 to 26cm.



2). Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.

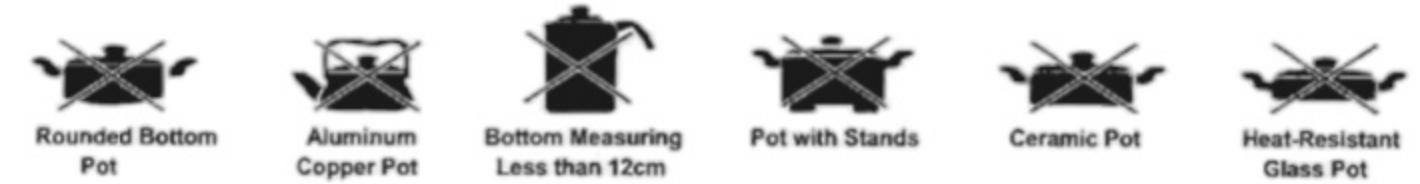

V.How to Clean

- 1). Disconnect plug and wait until the unit is cooled down completely. Clean after using every time.
- 2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.
- 3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Wipe using dish washing agent and damp cloth.
- 5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Never run water over the unit (Water gets inside may cause malfunction).