


**ggmgastro**  
INTERNATIONAL

**Straight Kebab Slicer**  
ORIGINAL INSTRUCTION


**Elektrischer Dönerschneider**  
MANUEL D'UTILISATION

**Schneidemesser & Netzteil**  
ORIGINAL-BEDIENUNGSANWEISUNG

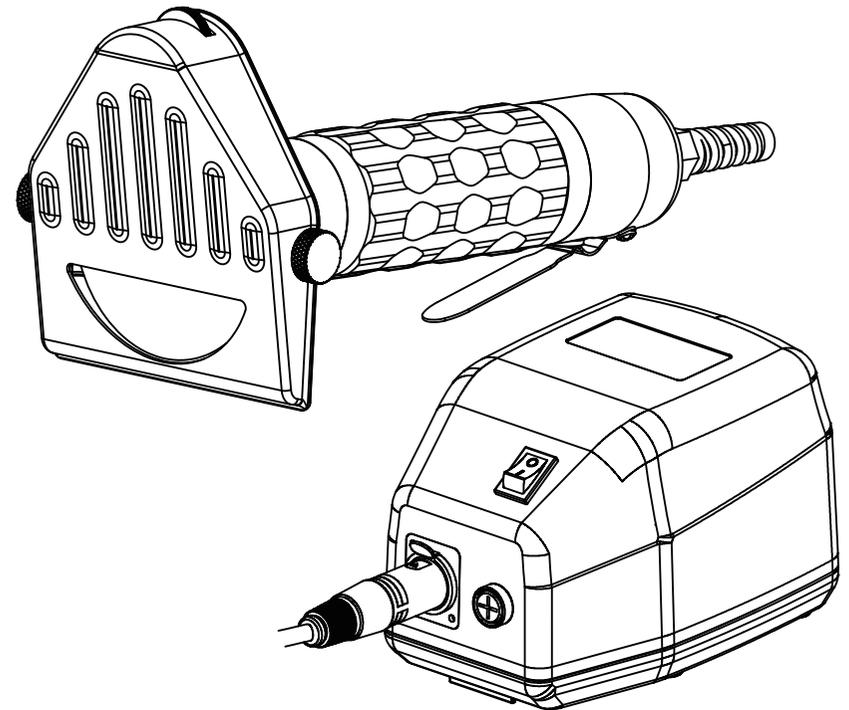


Read through carefully and understand these instructions before use.

## PRODUCT DESCRIPTION

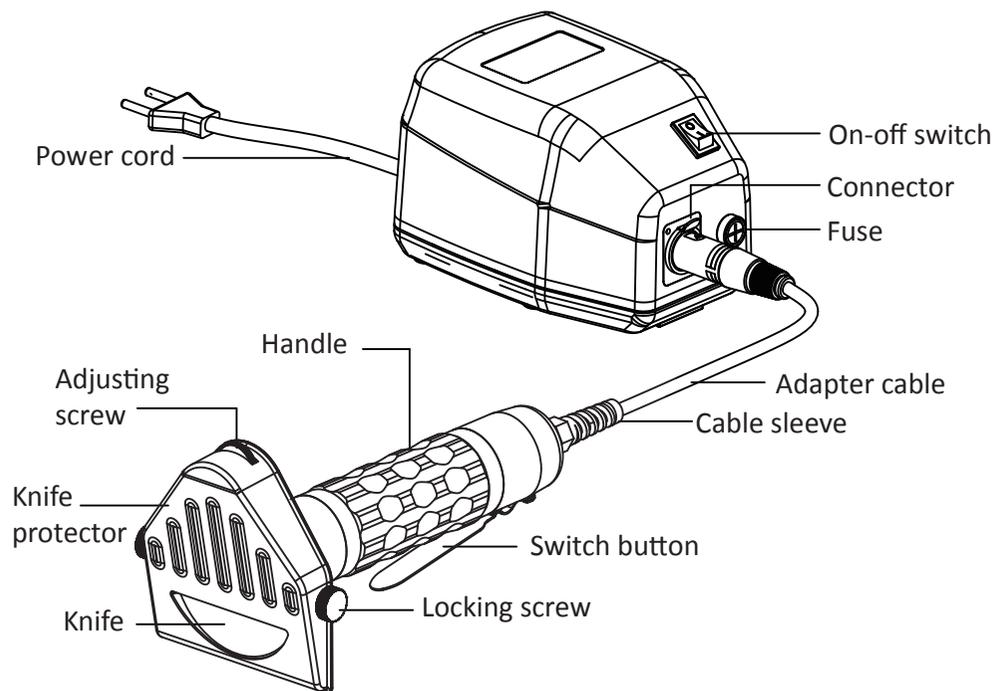

## MAIN TECHNICAL PARAMETERS

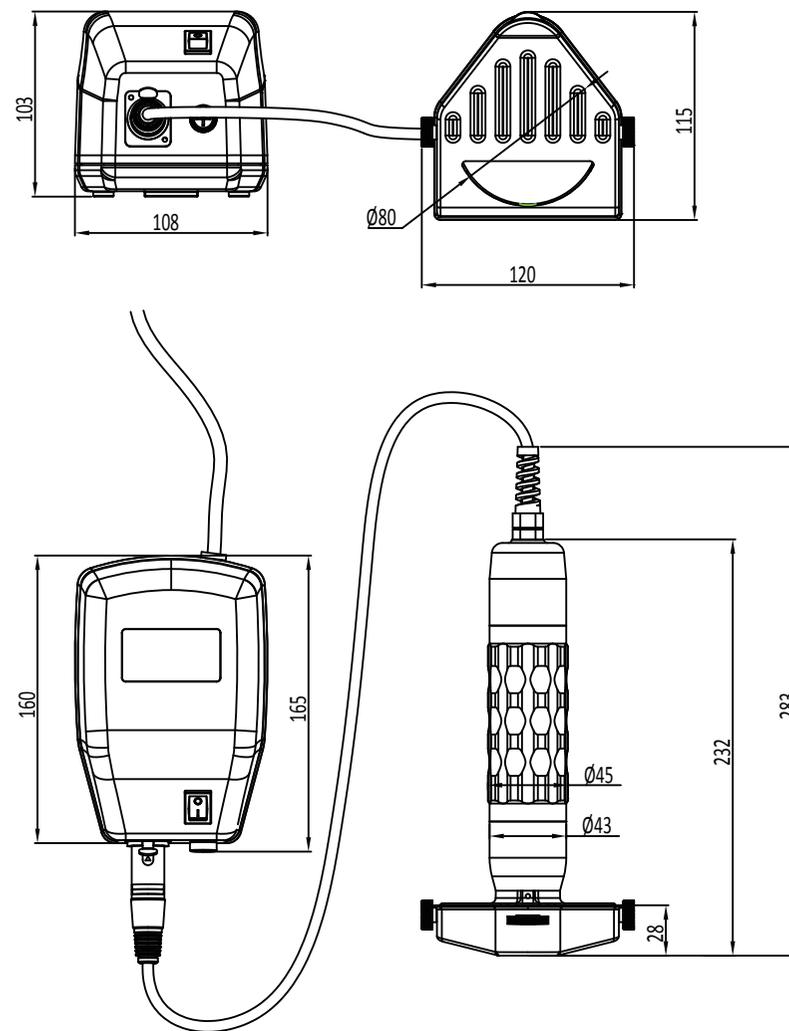

Unit: mm

MODEL	VOLTAGE	POWER	KNIFE SIZE	CUTTING THICKNESS	MEASUREMENT
DSA80S	100-120V~ 60Hz 220-240V~ 50/60Hz	80W	Dia. 80mm	0~6mm	320x230x125mm

## SAFETY INSTRUCTIONS

- Ensure the power supply comply with the voltage marked on the rating label. Failure to do so may result in fire or serious damage on the device.
- Switch off the device and disconnect from the supply when there is any emergency.
- Avoid the finger and other part of body contact with the working area.
- The manufacturer will not be responsible for any damages or injuries caused by repair by unauthorized persons.
- The manufacturer will not be responsible for any damages or injuries caused by mishandling the device, abuse the device, modify the device or damage the device by accident, operate the device against the user manual.
- DSA80S kebab slicer is exclusively intended for cutting the grilled meat. The DSA80S is designed for professional user in catering and must not be operated by Children.
- Use only Use only accessories recommended by the manufacturer for DSA80S. Any other accessories may create a risk of injury.
- Never operate the DSA80S when the cable is damaged.
- Never immerse the device in water, it may result in electric shock or electrical components damage.
- Switch off the device and disconnect from supply when not in use
- Switch off the device and disconnect from supply before clean or maintain the device.
- Stop operating the device when the device works unusual.
- Regularly inspect the knife and other part and ensure they are properly tightened and no damage.
- Keep the user manual. Transfer the manual together when transfer the device.
- Contact with the local dealers when the user manual is missing.
- Contact with the local dealers or manufacturer for any issue do not show in the manual.
- Clean the device before use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



## CAUTION!

Non-Compliance with the following instructions may cause electric shock, fire and serious injury.

All instructions must be read.

Keep these instructions in a safe place.

## WORKPLACE

1. Keep your workplace clean and tidy.
2. Position the adapter APT80S a sufficient distance away from gas flames or other heat sources, in order to prevent the casing or cable from melting.
3. Observe the hygiene regulations that are valid in your country.

## ELECTRICAL SAFETY



1. Unmodified power plugs and matching sockets reduce the risk of electric shock. The power plug of the DSA80S must match the socket. Never modify the power plug in any way.
2. There is increased risk of electric shock when your body is earthed. Avoid body contact with earthed surfaces, such as pipes, radiators, stoves and refrigerators.
3. Do not expose DSA80S to rain or wet conditions. Water entering an electrical device increases the risk of electric shock.
4. Do not abuse the cable. Never use the cable for carrying, pulling or unplugging the DSA80S. Keep cable away from heat, oil, sharp edges or moving parts. Only have damaged power cable replaced by the manufacturer or authorized service technicians

## APT80S ADAPTER ESSENTIAL INFORMATION

- 1, The external flexible cable or cord of this transformer cannot be replaced; if the cord is damaged, the transformer shall be scrapped.
3. for associated transformers and IPX4 transformers, an informative note shall indicate that a 10 % over or under voltage may appear in the supply and the rated output of the transformer shall be selected accordingly;



## SAFETY OF PERSONS

### WARNING! Cutting hazard!!

The knife is very sharp. Always work carefully. Observe the instructions.

1. Only use the knife with a correctly mounted knife protector. Do not use the DSA80S with a defective knife protector. Remove the power plug from the socket before carrying out adjustments to the device, changing accessories or putting the DSA80S away.
2. Many accidents are caused by poorly maintained electric tools. Maintain the KS80S with care. Check whether moving device parts function faultlessly and do not jam, whether parts are broken or so damaged that the functioning of the DSA80S is impaired.
3. Have damaged parts repaired prior to using the DSA80S. Keep original packaging for safe storage and safe transport.
4. Wash hands before and after touch the food. There might be bacteria on unwashed hands. Maintain the device in good condition with care. Replace the damaged device immediately.

## SERVICE

Only have your DSA80S repaired by qualified service personnel and only with original spare parts.



## REPLACEMENT OF KNIFE

### WARNING!

Prevent unintentional starting.

Unintentional starting may lead to injury.

Disconnect the plug from supply when not in use



### WARNING!

### RISK OF INJURY!

The knife is sharp. Deep cuts can be caused.

## Remove the knife

1. Remove the lock screw (pic.1)
2. Remove the knife protector (pic.2)
3. Insert the pin stick into the hole of the knife.

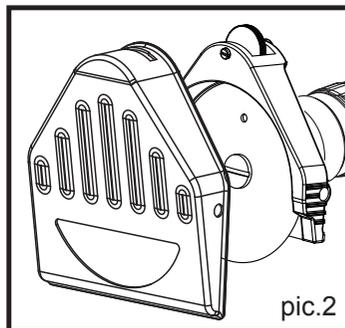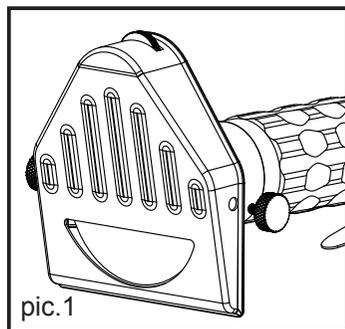


to fix the knife, and then loose the screw to remove the knife (pic.3)

## Install the knife

1. Put a new knife in position, and then insert the pin stick into the hole of knife to fix the knife, tight the lock screw. (pic.3) Remove the pin stick.
2. Put the knife protector in position and then tight the lock screw.



### Attention:

Incorrect installation of the knife prevents correct functioning of the DSA80S. Always install the knife with the sharpened side toward the motor.

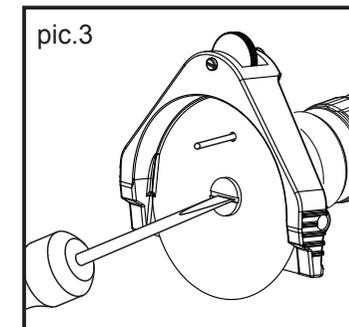

## OPERATION

1. Always put the adapter on a stationary flat surface. The worktable should be able to hold the device steady.
2. The supply should comply with the rated voltage and frequency of the device.
3. Inspect the device before use. Connect the DSA80S to the adapter and open it. (pic.4) Turn it on to run 1 minute to inspect whether the device runs correctly.
4. Adjust the cutting thickness. Loose the knife protector locking screw, turn the adjusting screw from the left (larger) to right (smaller) and then tight knife protector locking screw (pic.5)
5. The cutting thickness range is 0mm to 6mm.
6. Turn on the adapter, press the DSA80S switch button, the DSA80S runs.
7. Loose the switch button, turn off the adapter, and turn the adjusting screw to "0" position after use.

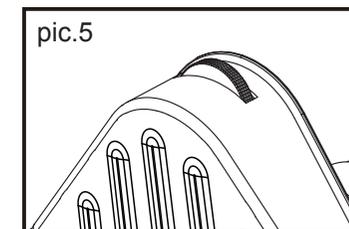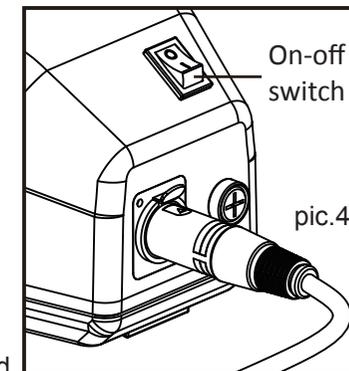



8. Position the cut grilled meat well.

## CLEANING PROCEDURE


1. Switch off the device and disconnect from supply before clean. Turn the adjusting screw to "0" position to avoid cutting injury.
2. Never clean the device by chemicals, or it may result in damage the device surface or the part of device.
3. Loose the locking screw, remove the knife protector, and then clean the knife protector.
4. Notice when clean the knife:
  - a. Must wear the protective gloves
  - b. Do not touch the blade.
  - c. It is dangerous. Be careful.
5. Clean the device by sponge and soft brush. Clean the knife and knife protector by wash detergent.
6. Spray all surfaces with fat solvent.
7. Spray on disinfectant and allow it to take effect for 5 minutes at least.
8. Clean the wash detergent left on the knife and knife protector.
9. Run the device 2 minutes after clean.
10. NOTICE: NEVER put the device into water. This device is not in waterproof design.

## MAINTENANCE

1. Avoid the knife getting rusted.
2. Wipe the knife with dry soft cloth after daily use or replacing the knife.
3. Wipe the knife blade with dry soft cloth by edible oil.
4. Sharpen the knife every day.
  - (1) Position the grinding stone at the bottom of knife. Sharpen the knife 1-2 seconds in the flat angle. (pic.6)
  - (2) Remove the burr on the knife by grinding stone. (pic.7)

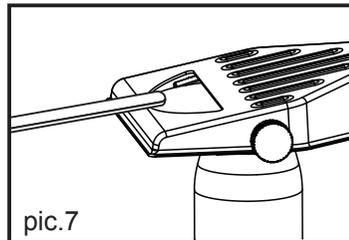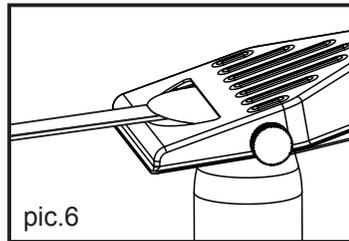


## DSA80S EXPLODED VIEW

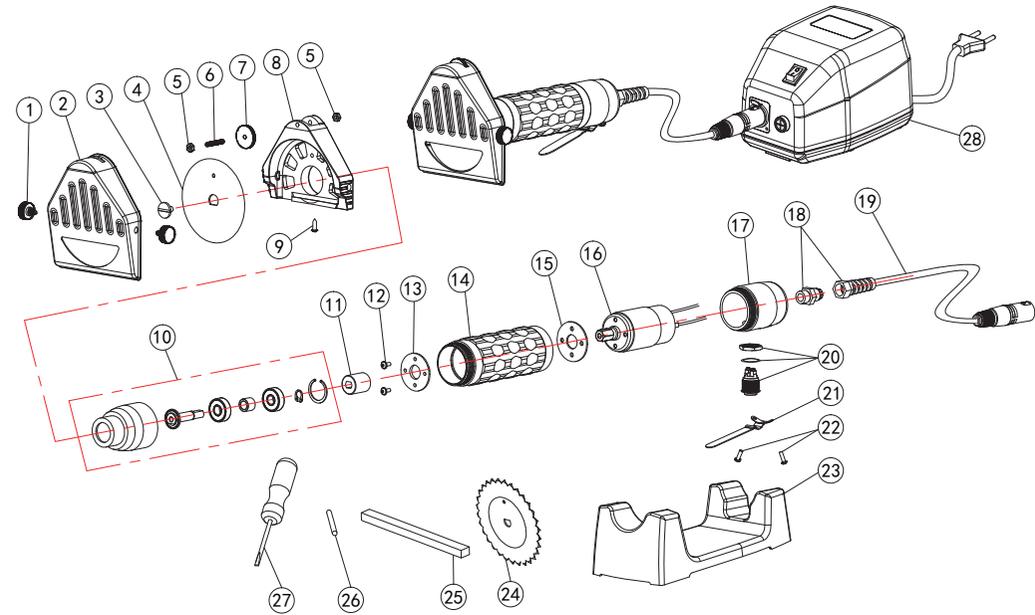

## DSA80S SPARE PARTS LIST

No.	Name	No.	Name	No.	Name
1	Locking screw	11	Sleeve	21	Switch button
2	Knife protector	12	Screw	22	Screw
3	Fastening screw	13	Motor fixed plate 1	23	Support bracket
4	Smooth knife	14	Handle	24	Serrated knife
5	Nut	15	Motor fixed plate 2	25	Sharpener stone
6	Screw	16	Motor	26	Pin stick
7	Adjustment screw	17	Rear cover	27	Screwdriver
8	Gear box	18	Cable clip	28	Adaptor
9	Screw	19	Adapter cable		
10	Front cover	20	Switch		

# APT80S EXPLODED VIEW SPARE & PARTS LIST

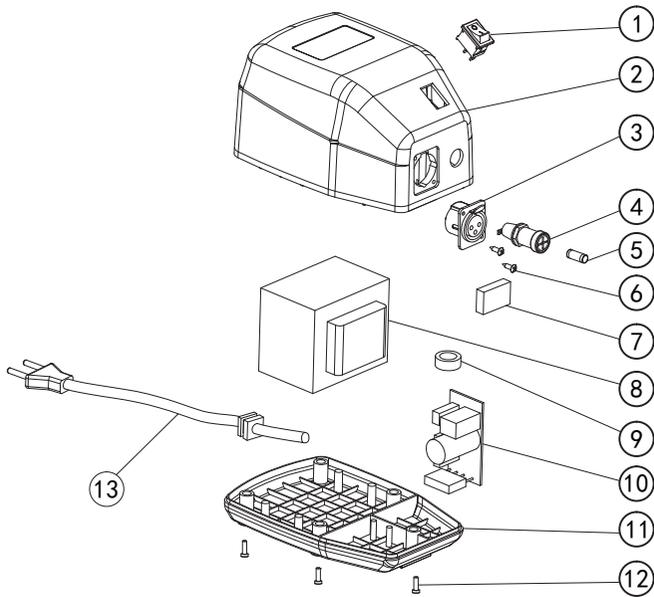

No.	Name
1	On-off switch
2	Upper housing
3	Connector
4	Fuse holder
5	Fuse
6	Screw
7	Capacitor
8	Transformer
9	Anti-interference filter ring
10	PCB panel
11	Base housing
12	Screw
13	Power cord

## CIRCUIT DIAGRAM

