



salamander

## **Installation and Operating Instructions**

**type : SMH45 SMH65**

---

For your convenience, the right to master the operation and use of this product, please use the product before you read this manual, not likely to cause accidents in accordance with the instructions in this manual! Failure to understand the contents of this manual, please contact the your boss contact, do not use the machine.

## content

spec .....	3
In stallion .....	3
operation .....	3
maintain .....	3
Circuit diagram.....	4

spec

1. Salamander embedded in horizontal and rugged mesa.
2. Connect the 220V ~ power supply (to give this product is equipped with a separate power switch), pay attention to the safety and protection of the coupling circuit, the power supply to be operated by a qualified electrician.
3. The device must be securely and reliably connected to ground.

**operation**


1. Turn on the power.
2. cooking needs, adjust the knob to the appropriate location of fire while working lights.
- 3 The work is completed the adjustment, firepower knob to the OFF position

**Maintain**

1. The power of access outlet shall professionals to ensure proper use of the equipment and personal safety.
2. do the cleaning work, you should turn off the power. Enclosure with a dry cloth, not washed with water to prevent water splashing into the circuit damage ..
3. When faced with failure, non-professionals do not disassemble, please contact the factory service personnel.
4. For each of the major components of equipment maintenance and repair shall be carried out in accordance with the following table of contents

item	maintain	every	12 mouth
body	clean	○	
Heater line	check		*
switch	check		*
light	check		*

# Circuit diagram

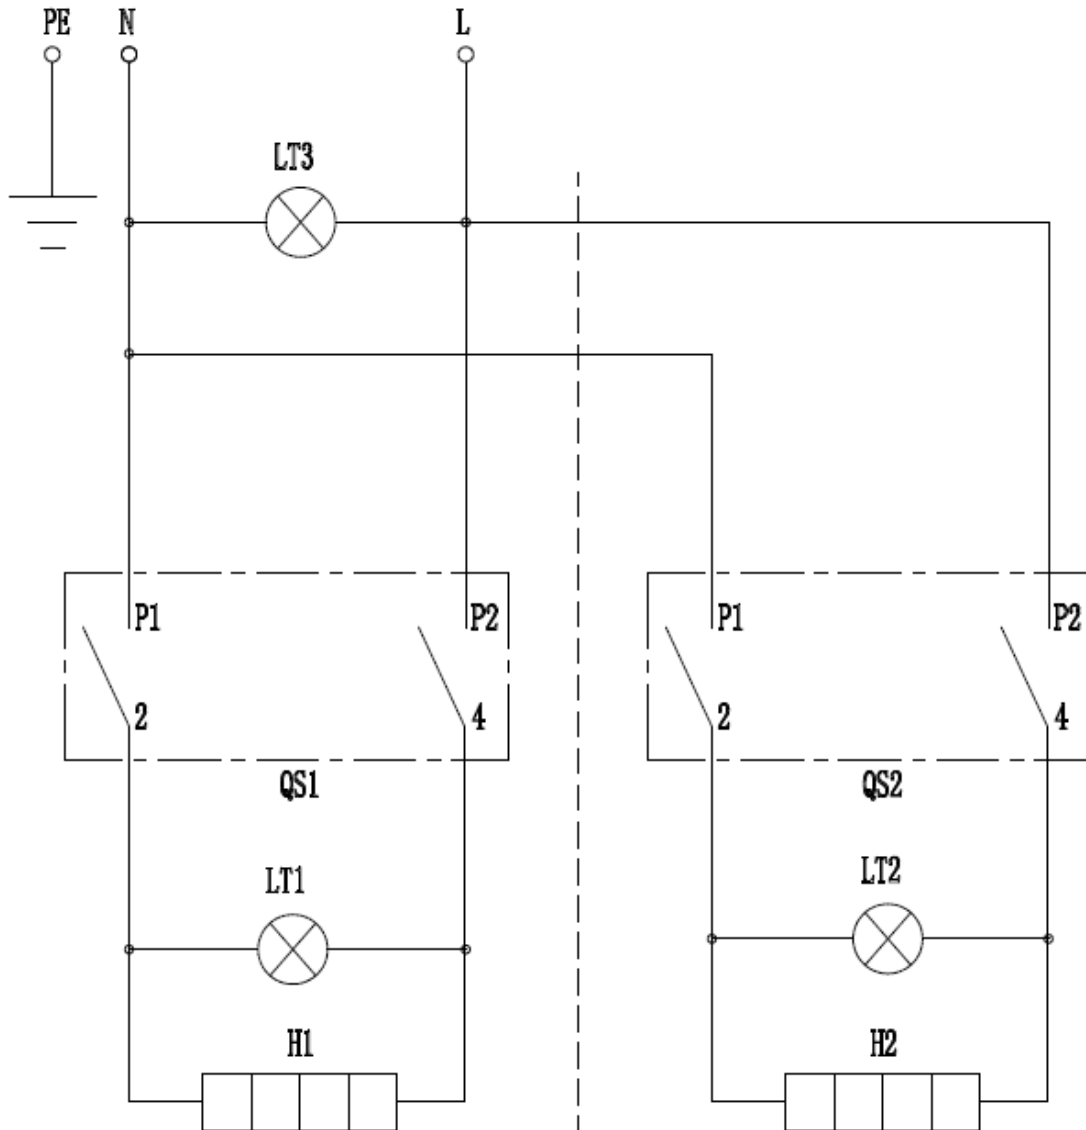

Notice: SMH45 have no The right side of the dotted line part

LT3	Orange power light		
QS1	Energy switch	QS2	Energy switch
H1	Heating Element	H2	Heating Element
LT1	Green work indicating lamp	LT2	Green work indicating lamp