

Refrigerators/Freezers

Instruction manual



G-HT200R/G-HT400R/G-HT600R/G-HT200F/G-HT400F/G-HT600F

G-HT200R S/S / G-HT400R S/S / G-HT600R S/S

G-HT200F S/S / G-HT400F S/S / G-HT600F S/S

**PLEASE READ THE OPERATION MANUAL BEFORE USING.
SAVE THIS MANUAL FOR LATER USE.**

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT use the appliance outside.
- DO NOT use this appliance to store medical supplies.
- DO NOT use electrical appliances inside the appliance (e.g. heaters, ice-cream makers etc.).
- DO NOT allow oil or fat to come into contact with the plastic components or door seal. Clean immediately if contact occurs.
- DO NOT store products on top of the appliance.
- Bottles that contain a high percentage of alcohol must be sealed and placed vertically in the refrigerator.
- Always carry, store and handle the appliance in a vertical position and move by holding the base of the appliance.
- Always switch off and disconnect the power supply to the unit before cleaning.
- Keep all packaging away from children. Dispose of the packaging in accordance with the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a agent or a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your product.

Pack Contents

The following is included:

- Refrigerator / Freezer
- Shelves – 2 big+1 small(200)
- Shelves – 3 big+1 small(400/600)
- Keys x2
- Spacers x 2
- Instruction manual

Prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your dealer immediately.

Installation



Note: If the unit has not been moved or stored in an upright position, let it stand upright for approximately 12 hours before operation. If in doubt allow the appliance to stand.

1. Remove the appliance from the packaging. Make sure that all protective plastic film and coatings are


thoroughly removed from all surfaces.

2. Maintain a distance of 2cm (0.7 inches) between the unit and walls or other objects for ventilation. Increase this distance if the obstacle is a heat source.

△ Note: Before using the appliance for the first time, clean the shelves and interior with soapy water.

Operating Instructions

TO OPERATE THE ELECTRONIC THERMOSTAT

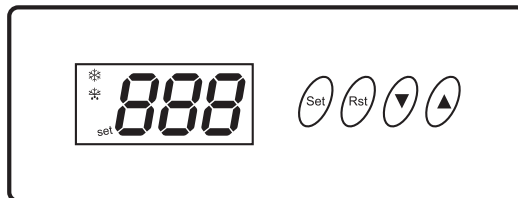

The thermostat has been pre-set, and in most cases it is not necessary to adjust the settings. When the unit is operating normally, the display will show the current temperature. To set a new temperature, press and hold the **Set** key for three seconds. The controller will display 'St'. Press **Set** again and the controller will display the set temperature value. Press the **▲** or **▼** keys to select a new value, then press the **Set** key to confirm the new temperature.

INDICATOR LIGHT STATUS DESCRIPTION

Indicator light	Symbol	Status	Meaning
Setting	Set	ON	Parameter setting
		OFF	Status of temperature measuring and controlling
Refrigeration	❄️	ON	Refrigeration working
		OFF	Refrigeration stopped
		FLASH	Refrigeration time delay
Defrost	❄️	ON	Defrost working
		OFF	Defrost stopped

DEFROSTING

The unit defrosts automatically at preset intervals. If however the doors are opened too often, or if the unit is in a location with high humidity, or if the contents are changed more frequently, it may be necessary to defrost the unit manually.

CLEANING

The condenser and the compressor compartment **MUST** be cleaned quarterly in order to ensure appropriate temperature control and maintain energy efficiency. Use a vacuum cleaner fitted with a soft brush attachment to remove dust carefully from the condenser, the components and grilles. The external and internal surfaces of the unit should be cleaned regularly. Switch the unit off and disconnect the plug from the mains socket. Clean the external and internal surfaces of the unit with a mild soap solution, then wipe dry. Do NOT use cleansers containing chlorine or other harsh cleansing agents, as these can damage the stainless steel surfaces and components. Use mild soapy water to clean the gasket and seals.

Troubleshooting

If your appliance develops a fault, please check the following table before making a call to the Helpline.

Fault	Probable Cause	Action
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call agent or qualified Technician
	Fuse in the plug has blown	Replace the fuse
	Power supply	Check power supply
	Internal wiring fault	Call agent or qualified Technician
The appliance turns on, but the temperature is too high/low	Too much ice on the evaporator	Defrost the appliance
	Condenser blocked with dust	Call agent or qualified Technician
	Doors are not shut properly	Check doors are shut and seals are not damaged
	Appliance is located near a heat source or air flow to the condenser is being interrupted	Move the refrigerator to a more suitable location
	Ambient temperature is too high	Increase ventilation or move appliance to a cooler position
	Unsuitable foodstuffs are being stored in the appliance	Remove any excessive hot foodstuffs or blockages to the fan
	Appliance is overloaded	Reduce the amount of food stored in the appliance
The appliance is leaking water	The appliance is not properly leveled	Adjust the screw feet to level the appliance (if applicable)
	The discharge outlet is blocked	Clear the discharge outlet
	Movement of water to the drain is obstructed	Clear the floor of the appliance (if applicable)
	The water container is damaged	Call agent or qualified Technician
The appliance is unusually loud	Loose nut/screw	Check and tighten all nuts and screws
	The appliance has not been installed in a level or stable position	Check installation position and change if necessary

Technical Specifications

Model	Voltage	Power	Current	Temperature Range	Capacity (liters)	Refrigerant	Dimensions H x W x D (mm)	Weight (Kg)
G-HT200R	220-240V 50Hz	110	0.7	-2°C to 8°C	129	R600a/35g	600 x600 x855	44
G-HT200F	220-240V 50Hz	140	0.8	-10°C to -25°C	129	R600a/63g	600 x600 x855	44.5
G-HT400R	220-240V 50Hz	140	0.8	-2°C to 8°C	361	R600a/75g	600 x600 x1855	69
G-HT400F	220-240V 50Hz	170	0.9	-10°C to -25°C	361	R600a/90g	600 x600 x1855	71
G-HT600R	220-240V 50Hz	140	0.9	-2°C to 8°C	620	R600a/100g	777 x695 x1895	90
G-HT600F	220-240V 50Hz	140	1.4	-10°C to -25°C	620	R600a/150g	777 x695 x1895	94
G-HT200R S/S	220-240V 50Hz	110	0.7	-2°C to 8°C	129	R600a/35g	600 x600 x855	44
G-HT200F S/S	220-240V 50Hz	140	0.8	-10°C to -25°C	129	R600a/63g	600 x600 x855	44.5
G-HT400R S/S	220-240V 50Hz	140	0.8	-2°C to 8°C	361	R600a/75g	600 x600 x1855	69
G-HT400 F/S/S	220-240V 50Hz	170	0.9	-10°C to -25°C	361	R600a/90g	600 x600 x1855	71
G-HT600R S/S	220-240V 50Hz	140	0.9	-2°C to 8°C	620	R600a/100g	777 x695 x1895	90
G-HT600F S/S	220-240V 50Hz	140	1.4	-10°C to -25°C	620	R600a/150g	777 x695 x1895	94

Electrical Wiring

The plug is to be connected to a suitable mains socket. This appliance is wired as follows:

- Live wire (colored brown) to terminal marked L
- Neutral wire (colored blue) to terminal marked N
- Earth wire (colored green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

Products have been approved to carry the following symbol:



WARNING

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.



Caution: risk of fire

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision

The appliances are not intended to be operated by means of an external timer or separate remote-control system

Keep the appliance and its cord out of reach of children less than 8 years

- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

The appliance is for climate class 4, please use in ambient temperature about 32 degree

The max. Loading of shelves is 20Kg.

The appliance use flammable insulation blowing gase C5H10, disposal of the appliance shall in accordance with the regulations of local authorities.

The appliance use R290 refrigerant, when disposing of the appliance, please in accordance with the regulations of local authorities, and remove the door and lock assembly to avoid children accidentally becoming trapped inside the appliance.