



No.:	Code	Description
1	ELE404030078	Knob
2	ELE404060052	Instruction light (Green)
3	ELE404060051	Instruction light (Yellow)
4	ELE404030062	Knob plate
5	ELE404080211	Thermostat
6	E-DPX-11E-02	Front panel
7	HAR403060046	Feet
8	E-DPX-11E-06	Bottom cover panel
9	ELE404040004	Terminal
10	E-DPX-11E-10	Shelf
11	E-DPX-11E-09	Cover panel
12	E-DPX-11E-01	Skirt panel
13	ELE404130005	Wire sheath
14	ELE404130059	Power line
15	PBC407010112	Bottom grill
16	PBC407010112	Upper grill
17	ELE404010027	Upper heater
18	E-DPX-11E-07	Upper cover panel
19	HAR403170006	Handle
20	HAR403020009	Spring
21	HAR403010012	Copper billet
22	E-DPX-11E-04	Upper cover panel
23	E-DPX-11E-03	Back cover panel
24	HAR403170078	Plastic handle
25	HAR403180355	Inline pipe
26	ELE404010028	Bottom heater
27	E-DPX-11E-08	Bottom cover panel
28	E-DPX-11E-05	Drop pan