



NO.	Coding	Description
1	ELE404030078	Knob
2	ELE404060052	Instruction light (Green)
3	ELE404060051	Instruction light (Yellow)
4	ELE404030062	Black knob negative
5	ELE404080188	Thermostat
6	E-DPX-13-02	Front panel
7	HAR403060046	Feet
8	E-DPX-13-06	Bottom cover
9	ELE404040004	Porcelain terminal
1 0	E-DPX-13-10	Terminal bracket
1 1	E-DPX-13-09	Cotton press board
1 2	E-DPX-13-01	Apron
1 3	ELE404130005	Outlet sheath
1 4	ELE404130059	Power cord
1 5	HAR403180353	Right inlet pipe
1 6	PBC407010113	Whole grooved Grill
1 7	PBC407010113	Whole grooved Grill
1 8	ELE404010025	Upper heater
1 9	E-DPX-13-07	Heater upper cover
2 0	HAR403170008	Handle
2 1	HAR403020034	Thick spring
2 2	HAR403010012	Copper block
2 3	E-DPX-13-04	Upper mold cover
2 4	E-DPX-13-03	Rear upper cover
2 5	HAR403170077	Plastic handle
2 6	HAR403180355	Left inlet pipe
2 7	ELE404010026	Lower heater
2 8	E-DPX-13-08	Heater lower cover
2 9	E-DPX-13-05	Oil tray