


Contact grill

(Electronic mode)

User manual


DKGJ432

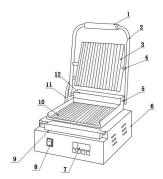

1:Handle 4:Axle centre 8:Switch 11:Line tube

2:Handle frame 3:Up molding board 5:Axle 6:Body 7:Electronic board 9:Oil box 10:Down molding board 12:Back board


DKGJ322

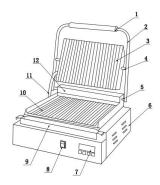

1:Handle 4:Axle centre 8:Switch 11:Line tube

2:Handle frame 3:Up molding board 5:Axle 6:Body 7:Electronic board 9:Oil box 10:Down molding board 12:Back board

DKGJ542

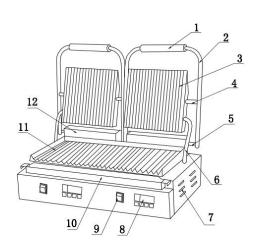

3:Up molding board 7:Body 2:Handle frame 1:Handle 4:Axle centre 5:Axle 6:Line tube 10:Oil box 8:Electronic board 9:Switch 11:Down molding board 12:Back board

Model	Voltage (V)	Power (KW)	Size (mm)	Switch
DKGJ432	220	1.8	410*310*210	2 sets
DKGJ322	220	2.2	435*410*210	2 sets
DKGJ542	220	3.6	570*410*210	2 sets

Thanks for your purchasing and using Contact Grill. For making full use of function of this product and reducing unnecessary damage and injure. Please read this manual carefully before using this machine and keep it well for future reference.

Contact Grill is designed and developed by the company with combination of the advantage of both foreign and domestic similar products and achieves advantages such as fashionable design, reasonable structure and convenient operation and maintenance and durability. The temperature of the griddle pan can be regulated in a certain scale according to different cooking requirements. Mainly used for grilling the beef of sandwich and also for other food, it is the first choice for the food industry enterprises such as western food restaurants, fast food restaurants, hotels and supermarkets and etc.

Features of Function and Structure

- 1. The upper and lower module plates are enameled and are easy to be cleaned.
- 2. One-headed and double-headed grilling pans can be chosen freely.
- 3. Independent temperature controlling system are convenient to handle and can achieve energy economy as well.
- 4. Internal temperature protector is reliable and safe.
- 5. Grilling temperature can be adjusted according to different requirements.
- 6. It is made by stainless steel and the drawer-style oil tray is also made of stainless steel.
- 7. It is easy to lift up and down and convenient to handle and maintain.

Transportation and Storage

Please handle the griller carefully and cautiously in transportation and do not turn it upside down to prevent any damage to the shell and interior. The packed griller should be stored in the storehouse ventilation and non-corrosive gas. Any weatherproof measures should be applied when temporary storage.

Notes

- 1. The working voltage of the equipment should match that of the power supply.
- 2. Suitable switch, fuse breaker and three-phase socket should be installed near the equipment.
- 3. There is an earth bolt at the back of the equipment. Please connect the earth wire in compliance with the safety regulations reliably with copper cable of no less than 2mm.
- 4. Before using user should check whether connection is firm and voltage is regular and earth connection is safe.
- 5. Do not put any object onto the upper module plate and shake the lift operation handle with sudden force.
- 6. Cut off power supply while cleaning. Do not use wet towel with corrosive cleanser and do not directly splash water on the equipment.
- 7. The adjustable temperature of the equipment is between $50^{\circ}200^{\circ}$ C. It is recommended that the maximum working temperature normally should be $200^{\circ}250^{\circ}$ C.
- 8. Do not store any flammable objects near the equipment. The environment temperature lower than 45° C, the humidity is under 85%.
- 9. The installation and maintenance of the equipment should be made by professional technicians.

Operation Instruction

1. Before using the machine, you must examine whether the installation of power supply is normal so as to ensure that the supply voltage coincides with the service voltage of the machine.

- 2. When the switch is on, the buzzer begin ring for three times. At the same time, the digital panel will show the time of set before. Then it's at the setting mode. If you now press "START/STOP", it will begin countdown according the showing time, till it become 0 and the buzzer ring again. SO you can press "START/STOP" again and it will stop ring and show the time before set.
- 3. Time set. If it's at temperature setting menu, you can press "SET" to time setting menu. Pressing "+" or "-" constantly, and pressing "START/STOP" at the same time, time will increase or reduce quickly. The range of time setting is 99 minutes 59 second to 0 minute 0 second.
- 4. Temperature setting. If now the menu is at time setting, you can press "SET" constantly and then press "START/STOP". When you press "+" or "-" once a time, the temperature will increase or reduce 1 degree. The range of temperature setting is 124° C to 230° C. If the set temperature is higher than the temperature the probe get, the element will begin heat, till it reach the set temperature and stop heating.
- 5. At time menu, if pressing "START/STOP", it will begin countdown till 0 and ring. Then you can press "START/STOP" again to stop it.
- 6. The electronic panel has memory. It saves the time and temperature you set before. Also, it can inspect the probe automatically. If it find the probe not working, it will stop heating and ring, "Err" will be shown.
- 7. You can study the suitable time and temperature according different flavor or material.

Cleaning and Maintenance


- 1. Cut off the power supply before cleaning in case of accident.
- 2. Do not use wet towel with non-corrosive cleanser to clean the module plate, the surface of the equipment and power cord. Direct wash by water is not permitted in case of any damage of the functions.
- 3. If do not use it at any time, please turn off temperature controller and main switch.
- 4. Please store the equipment in a ventilated storehouse without corrosive gas after cleaning when ceasing its work for a long time.

Breakdowns analysis and fixing

Fault phenomenon	Causes	Elimination methods
1. Module plates are out	1.Temperature	1. Change temperature
of heating when the	controller is broken.	controller.
power and heating	2. At least one of	2. Change the burned
indicator are both on.	heating wires is	heating tube.
	burned.	3. Dismantle the bottom
	3. Temperature	plate and use hand to
	protector works.	reset temperature
		protector.
2. When the power is on	1. Temperature	1. Change temperature
and temperature	controller is out of	controller.
controller is switched	order.	
and heating indicator is		
on and temperature can		
be not controlled.		
3. Indicator is not on	1. Indicator is broken.	1. Change temperature
when the power is on		controller.
and the heating process		
is normal.		
The indicator is out of	1. Abnormal power	1. Check power supply
order when the power is	supply or cut-off	and connection to make
on.	power supply.	power supply be normal.
	2. Fuse is burned.	2. Change fuse.

Aforementioned troubles are just for reference. If any fault occurs, please cease using and turn to professional technicians for check and repair.

DKGJ432/DKGJ322/DKGJ542

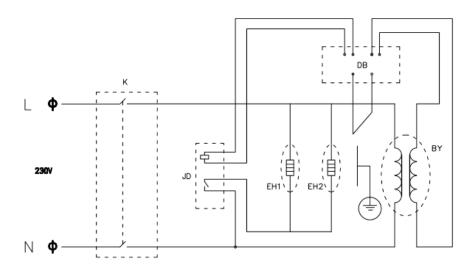

E **Ф**


Remarks: K- Power switch

JD- relay

DB- According to the control panel

BY- transformer

EH1、EH2 - Heating tube(650W)

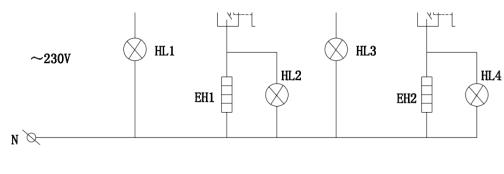

E Ø

 $\mathtt{WK1},\ \mathtt{WK2---Thermostat}$

HL1, HL3---Power light

HL2, HL4---Heating light

EH1, EH2---Element

GGM Gastro International GmbH Weinerpark 16, 48607 Ochtrup www.ggmgastro.com