

INSTRUCTIONS FOR USE RICE COOKER

RKF100

TECHNICAL DATA

MODEL	RKF100
DESCRIPTION	Rice cooker
POWER	1950 Watt
VOLTAGE	220-230V a.c
FREQUENCY	50 Hz
CAPACITY	5.4ltr

GUARANTEE

This device comes with a comprehensive warranty of 12 months from the date of purchase, which does not affect your legal rights. Proof of purchase is required.

The guarantee does not cover

- Accidental damage
- Damage caused by improper use (non-observance of these instructions for use) or incorrect installation.
- Unauthorized service work or product changes

The correct model and serial number must be provided in all communication with the supplier/manufacturer/customer service.

- Element failures are excluded from the warranty

Products are intended for commercial use as described in these instructions for use and operation manual. Our policy is to continuously improve product quality and design and therefore reserve the right to change the specifications of the models at any time.

COOKING RICE

- Wash the rice. Rice bran can add flavor to cooked rice and can give an unpleasant smell. To prevent this, wash the rice quickly and thoroughly.
- Make sure there are at least 4 bowls of cooked rice in the inner pot.
- To prevent the cooked rice from becoming dry, discolored and unpleasant, keep the outer lid and inner lid perfectly closed.
- Leave the rice spoon or other objects during the Keep warm cycle not in the inner pot.
- Do not use the keep warm function to reheat leftover rice.

CLEANING

- Always switch off the device, allow it to cool down and unplug the device before cleaning it.
- Do not use abrasive cleaning materials or liquids
- Do not use water jets for cleaning
- The inner pot and spatula are washable with soap and water.
- Use a soft cloth with warm water and a little dishwashing liquid to clean the body effectively.
- Remove the condensate container and clean it with soap and water.
- When cleaning, ensure that no water comes into contact with the electrical controls or connections.
- Rice grains or residue may stick to the heating plate, remove them with a soft sponge. Make sure the heating plate is free of residue.

OTHER SAFETY CONSIDERATIONS

- Be careful when lifting as the device is very heavy
- The external surfaces of the device may be very hot during operation.
- Make sure the device is unplugged and cooled down before moving/adjusting it.
- Do not use the device if it malfunctions or is damaged in any way.
- Do not dismantle any parts of the device or carry out any unauthorized maintenance work. We assume no liability if these instructions are not followed.
- If the power cord is damaged, it should be replaced by a qualified technician.
- This device should not be used by people with limited physical abilities.

SAFETY INSTRUCTIONS



WARNING!

Please read these instructions for use and keep them. Store with other manuals so they are easily accessible for future reference.

This manual contains basic safety information that you should follow. It must be followed to avoid injury. Make sure you read all instructions before use.

- This product must not be modified.
- Do not wash with a jet of water or immerse in water.
- Remove all packaging and plastic coatings and clean the product thoroughly before first use.

INSTALLATION / LOCATION

- Make sure the voltage stated on the nameplate is correct for your power supply.
- Make sure the device is on a level surface that can support the weight of the device.
- Make sure the device is not causing a blockage.
- Do not use this product outdoors
- Make sure the device is on a heat-resistant surface stands, e.g. stainless steel or Formica.
- Inform all personnel that the external surface of the electrical appliance is covered with a hat.
- Place the device in a well-ventilated place. Make sure that the device is not exposed to high temperatures or fats.
- Do not position the device in such a way that the airflow to the front or back is blocked.
- Make sure the device is not in close proximity to the air conditioning vent.
- For safety reasons, the plug must always be accessible.

ELECTRICAL SAFETY IN TRAINING

- This product is equipped with a 13 amp plug. To replace the plug, follow these instructions
- Green and yellow cable to E (earth)
- Blue cable to N (neutral conductor)
- Brown cable to L (power)

If in doubt, please contact a qualified electrician to change the wiring.

- This device must be grounded
- The power cord should reach the outlet without putting strain on the connectors.
- Do not drop lead/plug into water

TEFLEX CRYSTALLINE NON-STICK COATING

- Use wooden spoons or plastic spatulas
- Do not use abrasive cleaners to clean the inner pot to avoid scratches.
- The non-stick coating may become discolored after repeated use, but this does not affect its performance.


DISPOSAL

This symbol indicates that we as a supplier of electrical products Comply with WEEE regulations.



- This product must not be disposed of with other household waste.
- To avoid possible harm to the environment or human health, please recycle responsibly.
- Alternatively, you can also return the product to your retailer. He can recycle this product in an environmentally friendly manner.

HOW TO USE THE DEVICE

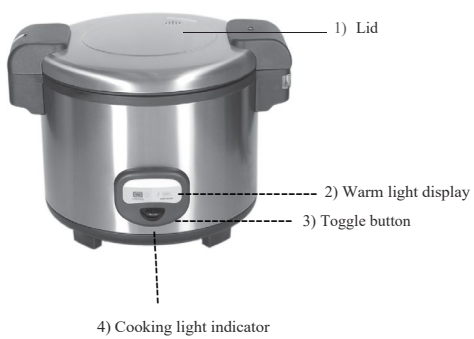

- Measure the desired amount of rice using the one provided measuring cup off.
 - Add the washed rice to the inner pot and then add water. For example, for 10 cups of rice, add water to level 10. Do not cook more than the maximum setting. Wipe the bottom of the inner pot, the amount of water may vary depending on the type of rice.
 - Wipe the bottom of the inner pot to remove any leftover rice before adding it to the cooker.
 - Insert the inner pot into the rice cooker and turn it slightly from left to right to ensure that the inner pot is correctly inserted into the heating plate. Level the rice.
 - Close the lid until it clicks into place. If the lid is not closed properly, the device will not work.
 - Plug in. Press the switch button down, the "Cook" indicator lights up.
 - After cooking is finished, the switch pops up and a tail sound sounds, the "Cook" indicator turns off and the "Warm" indicator lights up.
 - After cooking is finished, leave the lid closed for 15 minutes. The rice will then become fluffier.
 - Use the included spacula to avoid scratches.
 - There is a condensation water container on the side.
- This will wick excess moisture away from the rice. To remove, hold the sides and pull. To attach, align and press.