



Position of item	Code	Nr. of pieces	Description
2	31290600	4	WORKING THERMOSTAT (400° C)
3	22050300	4	FOUR-POLE FASTON SWITCH
4	22049800	1	4 POSITION SWITCH
5	22050300	1	FOUR-POLE FASTON SWITCH
6	30064900	1	THREE-PHASE WORKING THERMOSTAT (270° C)
7	38952800	4	KNOB BACKING FOR INDUCTION COOKER
8	38952400	1	KNOB BACKING FOR 2/1 GN ELECTRIC OVENS
9	38952300	1	KNOB BACKING 50°C - 270°C
10	38877600	6	KNOB PA66 PIN 6x4.6 180° SPACER - Models from 1/2010
11	31928000	4	ELEMENT 2250W - 380V FOR E7TP
12	35301400	1	THREE-PHASE SAFETY THERMOSTAT (360° C)
13	30169000	1	ORANGE BULB 230V Ø13mm T150°
14	30169100	1	GREEN BULB 230V Ø13mm T150°
15	30169200	1	ORANGE LIGHT LENS Ø13mm
16	30169300	1	GREEN LIGHT LENS Ø13mm
17	30169600	2	FIXING CROWN Ø13 FOR INDICATOR LIGHTS
18	31320000	3	TOP ELEMENT 0.99 kW 230V FE 7/900-K-
19	31320400	3	BOTTOM ELEMENT 1.5 kW 230V FE 7/900-K-
20	25185100	2	TERMINAL KIT 400 V3N~
21	31856800	1	OVEN GRILL 2/1 GN
22	31802500	2	OVEN HINGE ROLLER HOLDER - Models from 9/2008
23	31802000	1	OVEN DOOR LEFT HINGE - Models from 1/2000
24	31802100	1	OVEN DOOR RIGHT HINGE - Models from 1/2000
25	24684200	4	FOOT 1 ½" h125/h175 WITH PIN
26	32908300	1	PIASTRA non cablata per E7TP