 


HORIZONTAL CHICKEN ROTISSERIE WITH CHARCOAL

D OPERATION

* Control Panel:

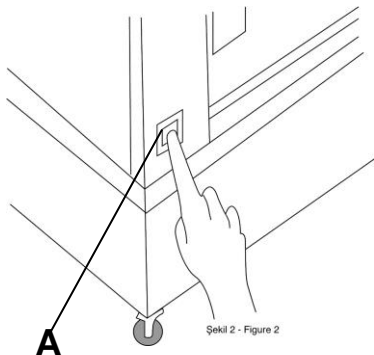

A : ON/OFF button

*Operating:

- Put sufficient amount of coal on the stone.
- Select accessories according to the product you want to cook and place them on the device.
- Manually burn the charcoal you have placed on the device.
- Wait for the coal to ignite and become embers.
- When the device reaches the desired temperature
- Place the meat to be cooked on the grill.
- Use tongs and similar equipment to turn the meat during cooking.
- After the cooking process is finished, take the grill and clean it.
- Wait for the coals in the ignition chamber to go out completely and then clean the chamber.
- Plug the device into the socket.
- You started the device by pressing the ON/OFF button of the device.

HORIZONTAL CHICKEN ROTISSERIE WITH CHARCOAL

E CLEANING & MAINTENANCE

To clean



Before disassembling a part be sure there is no heat remaining in the device.

 
Before every cleaning read carefully the cleaning products instructions and safety regulations. Do not clean with pressurised cleaning equipments. Always be carefull when touching the device and not get burning injuries.

To insert the plate, follow these steps



- Insert the horizontal plate such that the side slots match the pivots on both sides.
- Let the plate rotate freely.

Tensing the drive chain

To tense the drive chain, loosen the idler pinion screws (A) with a screwdriver and push the pinion slightly to the right until the chain is taut. Tighten the screw (A). Lubricate with molikote-type grease or similar (Figure 9)

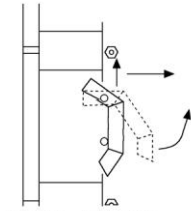

Şekil 8/A - Figure 8/A

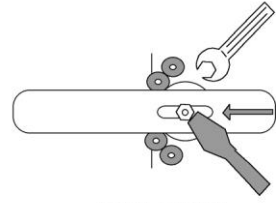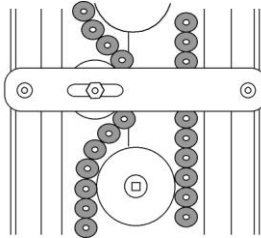  

Şekil 9 - Figure 9

E1 AFTER USE

- Clean the removable parts in hot water with detergent-oil solvent-disinfectant compatible with the material.
- Clean the outer surface of the device with a damp cloth.
- Do not use acid and derivative materials while cleaning the device.
- Do not wash the device with pressurized water. Otherwise, water may get into the charcoal drawer.
- Clean the cooking stone with a wire broom.

HORIZONTAL CHICKEN ROTISSERIE WITH CHARCOAL

F TROUBLESHOOTING

THE APPLIANCE DOESN'T OPERATE

1. Check if the appliance is plugged in.
2. Check the electrical connections and voltage.
3. Check if the fuse is on or off.



THE APPLIANCE STOPPED

1. The appliance can stop due to low voltage. In this situation check the voltage.

- If chicken rotisserie is not done at suitable quality
- If any function of security doesn't work,
 - Do not use the appliance.


***If these problems are still going on, contact with our authorized services.**

  G APPLIANCE DRAWINGS

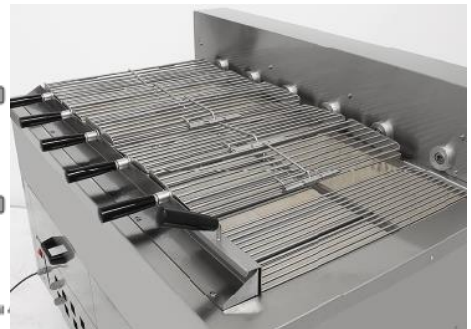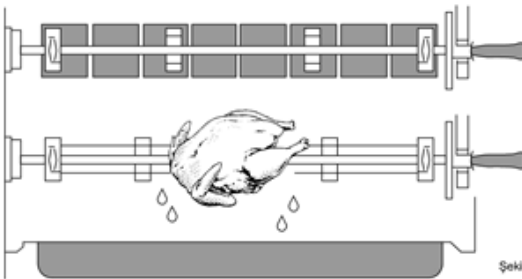

HORIZONTAL CHICKEN ROTISSERIE WITH CHARCOAL

 H SPARE PART LIST- EXPLODING DRAWINGS

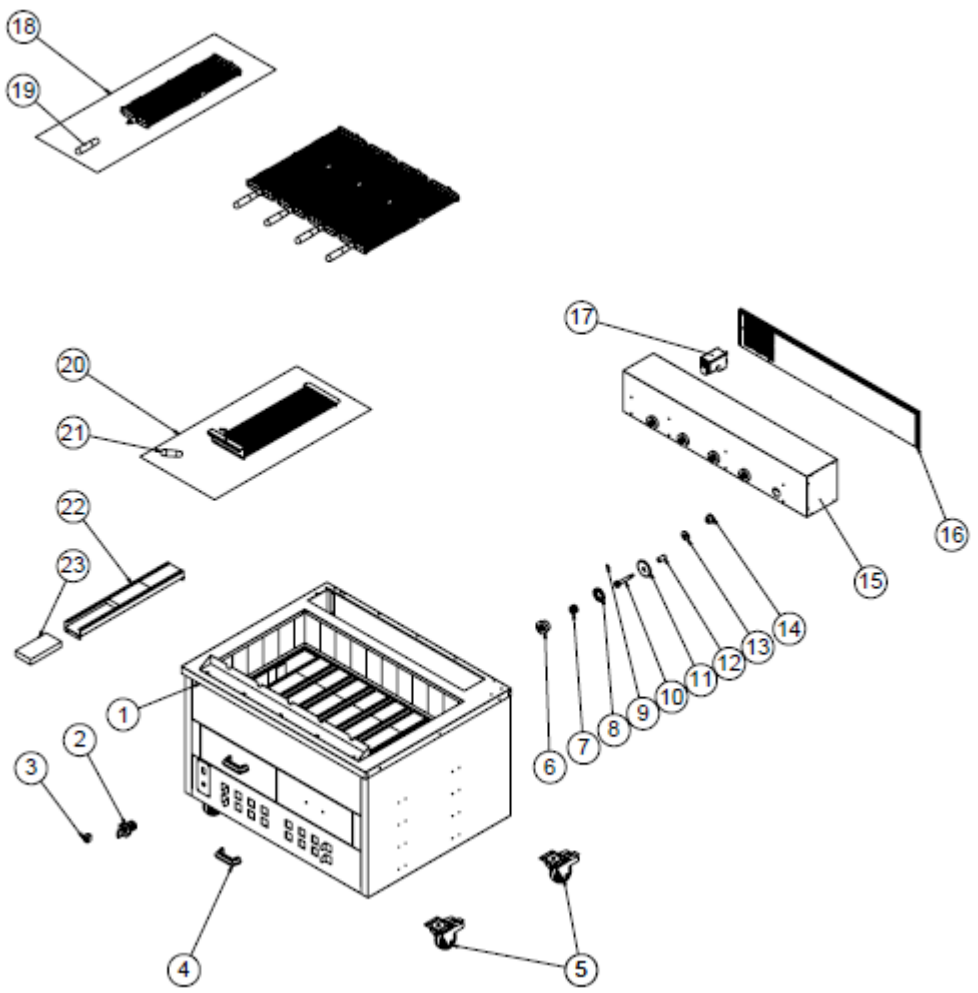


EMP.5YI

HORIZONTAL CHICKEN ROTISSERIE WITH CHARCOAL**H SPARE PART LIST- EXPLODING DRAWINGS**

PRODUCT CODE : EMP.5YI		
NO	PRODUCT NAME	P.CODE
1	CHASSIS	-
2	SWITCH THREE PHASE 3x20A SMALL	M.ELK-SLT-PKO-003
3	ILLUMINATED SQUARE KEY-RED	M.ELK-SLT-ANL-003
4	BAKALITE HANDLE (M6)	M.AKS-KLP-BKL-010
5	RUBBER BLACK WHEEL WITH PLATE BRAKE	M.AKS-TKR-KFS-001
6	SHAFT BEARING ALUMINUM	YTL-KNX.PLC-KS-0013
7	15x35x11 BEARING	M.RLM-ISI-012
8	NUT NUT	M.MUH-041
9	SPLIT PIN (5X20)	B-PIM-SYH-YAR-5X20
10	BEARING SHAFT SHORT	YTL-KNX.6YI-KS-0008
11	20 TOOTH GEAR	YSC-KNX.PLC-LZ-0014
12	BEARING BUSH 21x3 MM	YBR-KNX.6YI-KS-0002
13	TENSION DISC	YTL-KNX.PLC-KS-0008
14	ENGINE GEAR	M.MON-DSL-003
15	THREADED FRONT SHEET RIGHT COVER	YSC-KNX.5YI-PN-0011
16	THREADED COVER SHEET	YSC-KNX.5YI-PN-0007
17	230VAC RAP650 CHICKEN TURNER MOTOR	M.ELK-MTR-RMM-002
18	EMP.6 INTERMEDIATE SHAFT ASSEMBLY	ARA-KNX.6YI-0001
19	BAKALIT OVAL 11CM PEAR HANDLE	M.MUH-015
20	EMP.6I FIXED GRILL INTERMEDIATE MOUNT	ARA-KNX.6YI-0002
21	BAKALIT OVAL 11CM PEAR HANDLE	M.MUH-015
22	STONE BOTTOM SHEET	YSC-KNX.6YI-LZ-0011
23	SIDE STONE 20X10	M.TAS-MTS-ERK-002

HORIZONTAL CHICKEN ROTISSERIE WITH CHARCOAL

 H SPARE PART LIST- EXPLODING DRAWINGS

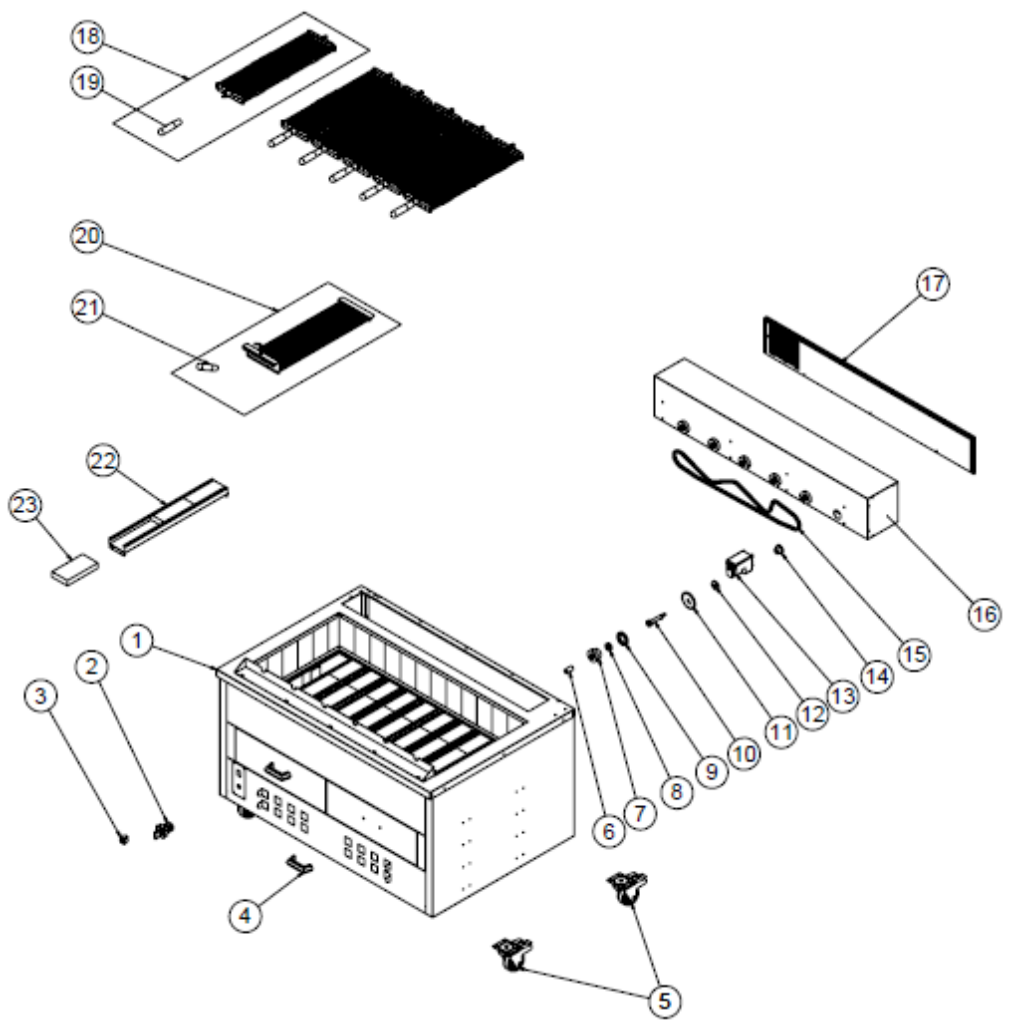


EMP.6YI

HORIZONTAL CHICKEN ROTISSERIE WITH CHARCOAL**H SPARE PART LIST- EXPLODING DRAWINGS**

PRODUCT CODE : EMP.6YI		
NO	PRODUCT NAME	P.CODE
1	CHASSIS	-
2	SWITCH THREE PHASE 3x20A SMALL	M.ELK-SLT-PKO-003
3	SQUARE KEY-RED	M.ELK-SLT-ANL-003
4	BAKALITE HANDLE (M6) NO 1	M.AKS-KLP-BKL-010
5	RUBBER BLACK WHEEL WITH PLATE BRAKE (SLS100 F18)	M.AKS-TKR-KFS-001
6	BEARING BUSH 21x3 MM 304	YBR-KNX.6YI-KS-0002
7	SHAFT BEARING ALUMINUM	YTL-KNX.PLC-KS-001
8	15x35x11 BEARING	M.RLM-ISI-012
9	NUT NUT	M.MUH-041
10	BEARING SHAFT SHORT	YTL-KNX.6YI-KS-0008
11	20 TOOTH GEAR	YSC-KNX.PLC-LZ-0014
12	TENSION DISC	YTL-KNX.PLC-KS-0008
13	230VAC RAP650 CHICKEN TURNER MOTOR	M.ELK-MTR-RMM-002
14	ENGINE GEAR	M.MON-DSL-003
15	HORIZONTAL GRILL CHAIN.	M.MUH-042
16	THREADED FRONT SHEET	YSC-KNX.6YI-PN-0009
17	THREADED COVER SHEET	YSC-KNX.6YI-PN-0010
18	SHAFT INTERMEDIATE ASSEMBLY	ARA-KNX.6YI-0001
19	BAKALIT OVAL 11CM PEAR HANDLE	M.MUH-015
20	FIXED GRILL INTERMEDIATE ASSEMBLY	ARA-KNX.6YI-0002
21	BAKALIT OVAL 11CM PEAR HANDLE	M.MUH-015
22	STONE BOTTOM SHEET	YSC-KNX.6YI-LZ-0011
23	SIDE STONE 20X10	M.TAS-MTS-ERK-002

HORIZONTAL CHICKEN ROTISSERIE WITH CHARCOAL

 H SPARE PART LIST- EXPLODING DRAWINGS

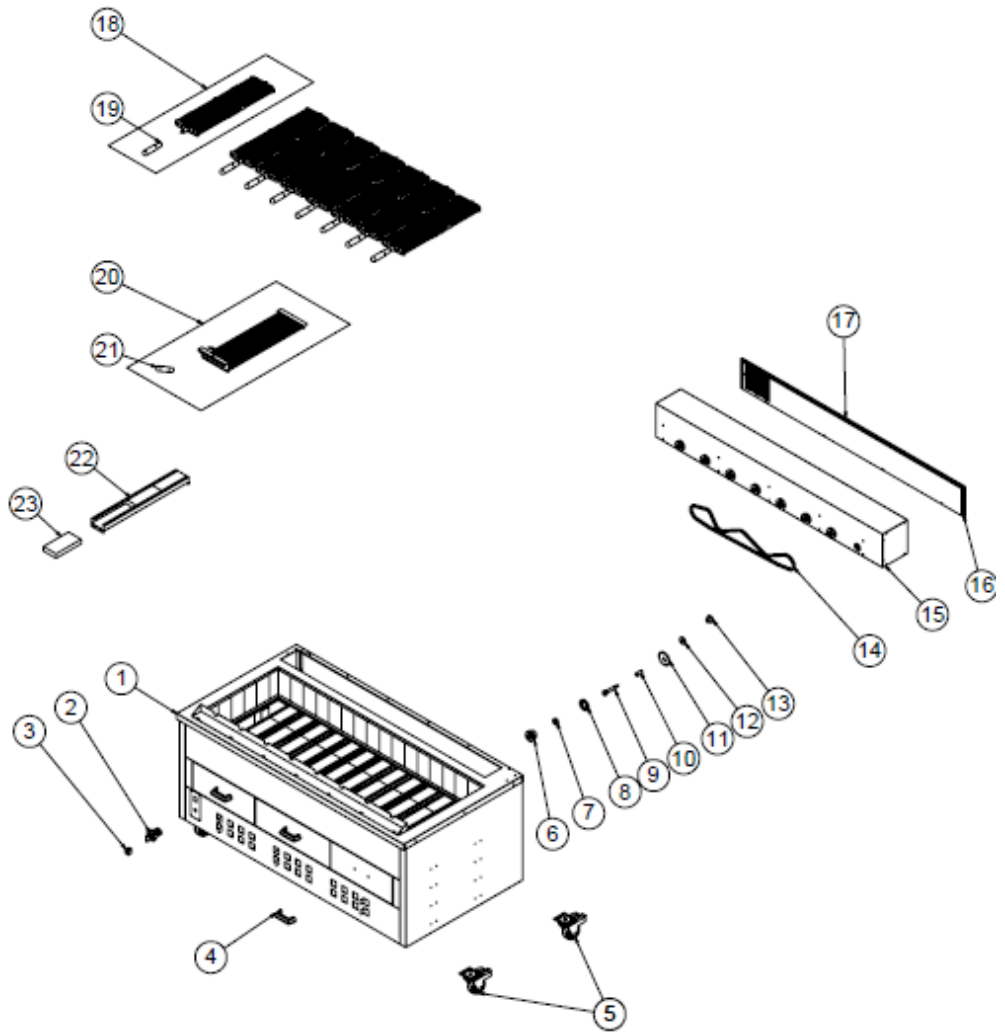

EMP.8YI

HORIZONTAL CHICKEN ROTISSERIE WITH CHARCOAL**H SPARE PART LIST- EXPLODING DRAWINGS**

PRODUCT CODE : EMP.8YI		
NO	PRODUCT NAME	P.CODE
1	CHASSIS	-
2	SWITCH THREE PHASE 3x20A SMALL	M.ELK-SLT-PKO-003
3	SQUARE KEY-RED	M.ELK-SLT-ANL-003
4	BAKALITE HANDLE (M6) NO 1	M.AKS-KLP-BKL-010
5	RUBBER BLACK WHEEL WITH PLATE BRAKE (SLS100 F18)	M.AKS-TKR-KFS-001
6	BEARING BUSH 21x3 MM 304	YBR-KNX.6YI-KS-0002
7	SHAFT BEARING ALUMINUM	YTL-KNX.PLC-KS-001
8	15x35x11 BEARING	M.RLM-ISI-012
9	NUT NUT	M.MUH-041
10	BEARING SHAFT SHORT	YTL-KNX.6YI-KS-0008
11	20 TOOTH GEAR	YSC-KNX.PLC-LZ-0014
12	TENSION DISC	YTL-KNX.PLC-KS-0008
13	230VAC RAP650 CHICKEN TURNER MOTOR	M.ELK-MTR-RMM-002
14	ENGINE GEAR	M.MON-DSL-003
15	HORIZONTAL GRILL CHAIN.	M.MUH-042
16	THREADED FRONT SHEET	YSC-KNX.6YI-PN-0009
17	THREADED COVER SHEET	YSC-KNX.6YI-PN-0010
18	SHAFT INTERMEDIATE ASSEMBLY	ARA-KNX.6YI-0001
19	BAKALIT OVAL 11CM PEAR HANDLE	M.MUH-015
20	FIXED GRILL INTERMEDIATE ASSEMBLY	ARA-KNX.6YI-0002
21	BAKALIT OVAL 11CM PEAR HANDLE	M.MUH-015
22	STONE BOTTOM SHEET	YSC-KNX.6YI-LZ-0011
23	SIDE STONE 20X10	M.TAS-MTS-ERK-002



HORIZONTAL CHICKEN ROTISSERIE WITH CHARCOAL

I ELECTRICAL CIRCUIT DIAGRAM
