



Position of item	Code	Nr. of pieces	Description
1	22037800	4	ROUND PLATE Ø220 2.6 kW 230V
2	22049900	4	ELECTRIC PLATE SWITCH
3	22050300	1	FOUR-POLE FASTON SWITCH
4	30064900	1	THREE-PHASE WORKING THERMOSTAT (270° C)
5	22049800	1	4 POSITION SWITCH
6	30169100	2	GREEN BULB 230V Ø13mm T150°
7	30169000	1	ORANGE BULB 230V Ø13mm T150°
8	30169300	2	GREEN LIGHT LENS Ø13mm
9	30169200	1	ORANGE LIGHT LENS Ø13mm
10	30169600	3	FIXING CROWN Ø13 FOR INDICATOR LIGHTS
11	38952000	4	KNOB BACKING FOR ELECTRIC PLATES
12	38952300	1	KNOB BACKING 50°C - 270°C
13	38952400	1	KNOB BACKING FOR 2/1 GN ELECTRIC OVENS
14	38877600	6	KNOB PA66 PIN 6x4.6 180° SPACER - Models from 1/2010
15	31320000	3	TOP ELEMENT 0.99 kW 230V FE 7/900-K-
16	31320400	3	BOTTOM ELEMENT 1.5 kW 230V FE 7/900-K-
17	35301400	1	THREE-PHASE SAFETY THERMOSTAT (360° C)
18	24684300	4	FOOT 1 ½" h125/h175 WITH BRACKET - Models from 4/2009 - untill
18	24684200	4	FOOT 1 ½" h125/h175 WITH PIN - Models from 1/2000 - untill 4/2009
19	25185100	1	TERMINAL KIT 400 V3N~
20	31856800	1	OVEN GRILL 2/1 GN
21	31858600	1	FIBREGLASS OVEN SEAL 2/1 GN - Models from 1/2003 - untill 7/2011
22	31802500	2	OVEN HINGE ROLLER HOLDER - Models from 9/2008
23	31802000	1	OVEN DOOR LEFT HINGE - Models from 1/2000
24	31802100	1	OVEN DOOR RIGHT HINGE - Models from 1/2000