



Position of item	Code	Nr. of pieces	Description
1	22037400	4	2600W-240V SQUARE PLATE
2	30064900	1	THREE-PHASE WORKING THERMOSTAT (270° C)
3	22050300	1	FOUR-POLE FASTON SWITCH
4	22049900	4	ELECTRIC PLATE SWITCH
5	22049800	1	4 POSITION SWITCH
6	38877600	6	KNOB PA66 PIN 6x4.6 180° SPACER - Models from 1/2010
7	38952000	4	KNOB BACKING FOR ELECTRIC PLATES
8	38952300	1	KNOB BACKING 50°C - 270°C
9	38952400	1	KNOB BACKING FOR 2/1 GN ELECTRIC OVENS
10	24684300	4	FOOT 1 ½" h125/h175 WITH BRACKET
11	35301400	1	THREE-PHASE SAFETY THERMOSTAT (360° C)
12	31320000	3	TOP ELEMENT 0.99 kW 230V FE 7/900-K-
13	31320400	3	BOTTOM ELEMENT 1.5 kW 230V FE 7/900-K-
14	30169100	1	GREEN BULB 230V Ø13mm T150°
15	30169600	1	FIXING CROWN Ø13 FOR INDICATOR LIGHTS
16	30169300	1	GREEN LIGHT LENS Ø13mm
17	30169200	1	ORANGE LIGHT LENS Ø13mm
18	30169600	1	FIXING CROWN Ø13 FOR INDICATOR LIGHTS
19	30169000	1	ORANGE BULB 230V Ø13mm T150°
20	25185100	1	TERMINAL KIT 400 V3N~
21	31856800	1	OVEN GRILL 2/1 GN
22	31859000	1	OVEN RUBBER SEAL 2/1 GN - Models from 9/2008
23	31802000	1	OVEN DOOR LEFT HINGE - Models from 1/2000
24	31802500	2	OVEN HINGE ROLLER HOLDER - Models from 9/2008
25	31802100	1	OVEN DOOR RIGHT HINGE - Models from 1/2000