

# Manual Book



**KMHK7500**

**Ride-on Floor Sweeper**

Please read this manual carefully before operation/please properly keep it.

## Preface

This instruction manual contains all the information that you need to use and maintain the machine. Please read it carefully before getting started. Only with correct operation and regular maintenance can the machine be kept in its best working condition.

This instruction manual is an important part of the product and should be kept together with the machine.

If this manual is lost, please contact us immediately and we will be glad to provide you with a new one. All technical details included in this manual are property of Seller.

In this manual we use illustrations to show the components and functions of the machine. It is possible that some of them contain details that are slightly different from those of yours. However, all the instructions presented here still apply to your product and should be followed strictly during the operation.

Some components of the product may be harmful or dangerous and we have tried our best to include them in this manual. **It is the user's obligation to pay special attention to them during the work.** However, since it is impossible for us to point out all potential dangers, we expect you to be extremely cautious during the work so as to protect the machine, yourself and other people in the working area.

Only accessories from the original manufacturer can be used on the machine. Using accessories from other sources may lead to low working efficiency or even accidents in extreme cases.

We usually modify or improve our products to meet the latest market demand. However, this is **NOT** suitable for machines that have been sold. We will **NOT** be responsible for any injury or loss caused due to the user's improper operation either.


If you have any question, complaint or suggestion, please feel free to contact us and we will be at your service with all our knowledge and enthusiasm.

We wish you a pleasant experience with our product!

# Contents

|  |       |
|--|-------|
| <b>Components and technical parameters</b>                           | 1~2   |
| <b>Chapter 1 General description</b>                                 | 3~6   |
| 1.1 Contents and purposes  |       |
| 1.2 General instructions   |       |
| 1.3 Safety requirements for the batteries                            |       |
| 1.4 General safety requirements                                      |       |
| 1.5 Fuse introduction  |       |
| <b>Chapter 2 Operating the machine</b>                               | 7~9   |
| 2.1 Buttons and pedals of the machine                                |       |
| 2.2 Operation process of the machine                                 |       |
| 2.3 Cautions during the operation                                    |       |
| <b>Chapter 3 Regular inspection and replacement of damaged parts</b> | 10~13 |
| 3.1 Regular inspection   |       |
| 3.2 Replacement and adjustment of the main brush                     |       |
| 3.3 Replacement and adjustment of the side brush                     |       |
| 3.4 Removal and installation of the garbage can                      |       |
| 3.5 Maintenance of the batteries                                     |       |
| 3.6 Maintenance of the water valve filter element                    |       |
| <b>Chapter 4 Common problems and solutions</b>                       | 14    |
| <b>Chapter 5 Maintenance</b>   | 15    |
| 5.1 Operating conditions   |       |
| 5.2 Maintenance timetable  |       |
| <b>Chapter 6 After-sale services</b>                                 | 16    |
| <b>Warranty card</b>   |       |


# Components

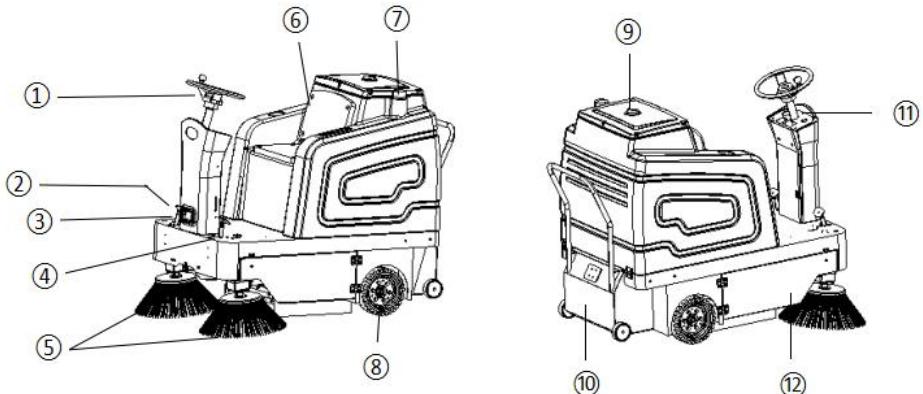

- ① Steering wheel
- ② Accelerator pedal
- ③ Brake pedal
- ④ Front baffle rubber strip lifting pedal

- ⑤ Side brush
- ⑥ Leather seat
- ⑦ Alarming light
- ⑧ Main wheel

- ⑨ Water tank
- ⑩ Garbage can
- ⑪ Controlling panel
- ⑫ Inspection cover

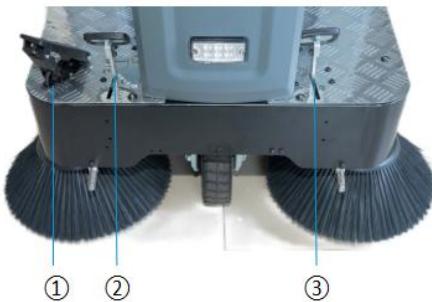

- ① Accelerator pedal
- ② Brake pedal (Note: adjust the two position to control the machine fixed brake or normal brake)
- ③ Front baffle rubber strip lifting pedal (step on this pedal when the machine face a baffle/Rubbish which height is more than 1cm)



## Technical parameters

| Category                    | Parameter | Category             | Parameter         |
|-----------------------------|-----------|----------------------|-------------------|
| Cleaning width (mm)         | 1,150     | Side brush motor (W) | 90 * 2            |
| Water tank capacity (L)     | 28        | Vacuum motor (W)     | 250               |
| Debris tank capacity (L)    | 70        | Traction motor (W)   | 650               |
| Charging time (h)           | 8-10      | Walking speed (km/h) | 0-10              |
| Working time (h)            | 2-3       | Grade ability (%)    | ≤15               |
| Battery capacity (V/Ah)     | 48/59     | Total weight (kg)    | 339               |
| Cylindrical brush motor (W) | 600       | Product size (mm)    | 1,550*1,250*1,250 |

\*The parameters may differ from the actual measured values, and the manufacturer reserves all rights of interpretation.

# Chapter 1 General description

## 1.1 Contents and purposes

 Potential risks concerning the use of the machine are listed in the following sections. Since most accidents take place when safety rules are ignored, it is necessary that you read them carefully and take precautions before getting started. The best guarantee against any accident is a careful and cautious user, which might be better than other precautions available. When using the machine, pay special attention to the people in the working area, especially children.

## 1.2 General instructions

-  Before any maintenance and repair, turn off the power and remove the key from the general switch.
-  The machine can only be operated by qualified personnel. Children and disabled people are strictly forbidden to use it.
-  Keep the battery away from sparks, flames and smoke.
-  Do **NOT** use the machine in places with dangerous, flammable or explosive gases, liquids or water vapor.
-  The machine can be used to clean regular garbage. It must **NOT** be used to clean silk ropes, belts, high-temperature sundries, accumulated water, or flammable, toxic and harmful materials, so as to avoid entanglement and burning of the brushes.
-  Keep loose clothing, hair, fingers and other parts of your body away from the air vent and any moving part of the machine.
-  Turn off the power if you do not use the machine.
-  Do **NOT** use the machine in slopes with an inclination larger than the fixed value.
-  Do **NOT** smoke when charging the battery.
-  Do **NOT** use the machine in very dirty places. Repeat the sweeping if there is too much garbage.
-  The machine should be stored at a temperature between -10 °C and 40 °C.
-  The temperature of the working area should be between -10 °C and 40 °C, and the humidity should be between 30% and 95%.
-  Do **NOT** use the machine as a means of transportation.
-  When the machine is not moving, stop the brushes to avoid damage to the ground.
-  In the event of a fire, use a **POWDER** extinguisher rather than water.

- ☞ When a failure is produced, make sure that it is **NOT** due to the lack of regular maintenance.
- ☞ If some spare parts need to be replaced, you can purchase them from the original manufacturer or an authorized distributor.
- ☞ To make sure that the machine is in the proper operating and safety condition, the user or service center must abide by what is stated in Chapter III and Chapter V.
- ☞ Attention must be paid even when the machine is about to be dismantled and scrapped. Since some harmful substances (such as batteries, waste oil, etc.) have met the required standards, they should be sent to a specific center for treatment.
- ☞ The machine works by using a suction motor to draw surface debris and dust into the rear dust bin. Therefore, the correct way to use the water spray dust suppression function is to first spray water to suppress dust, then turn off the water spray function and wait a moment later, then turn on the suction motor. Otherwise, too much water condenses into clumps when it comes into contact with dust. It will clog the suction motor's filter. Another important point: do not use the machine in rainy weather, as excessive water can burn out the suction motor.

### 1.3 Safety requirements for batteries

- ☞ The battery must **NOT** be in a low voltage state; charge the battery **as soon as possible** when the voltage is below **42 V**; Due to the characteristics of lead-acid batteries, prolonged low battery levels or failure to recharge in time can cause irreparable damage to the battery. The seller shall not be held responsible for the resulting consequences.
- ☞ For safer transportation: The manufacturer will disconnect the battery cable before the machine leaves the factory. Consumers should reconnect the battery before use. (Battery under the plastic tank)




- ☞ To avoid electric leakage, keep the battery dry and clean;
- ☞ Do **NOT** put metallic objects (such as tools) on the battery to prevent it from being short-circuited and burned;
- ☞ The charging room should be well ventilated;
- ☞ When the key switch is in the position “ON”, do **NOT** install or remove the battery;
- ☞ Before installing or removing the battery, disconnect first the negative wire (-) and then the positive wire (+). When rewiring, pay special attention to the polarity of the battery, as wrong connection would probably damage electrical components;
- ☞ Avoid direct contact between the positive and the negative electrodes, because it would cause a large current short circuit, high heat or even a fire.

#### 1.4 General safety requirements

- ☞ In addition to what is mentioned in this manual, the general safety requirements must also be observed. Even if you have used a similar product before, we recommend that you read this manual carefully so that you can save much time as well as take precautions to protect the machine and yourself. It is vital that you become familiar with all the accessories and components before turning on the machine. Read our instructions carefully so that you will not be confused when you get started.

#### 1.5 Fuse introduction

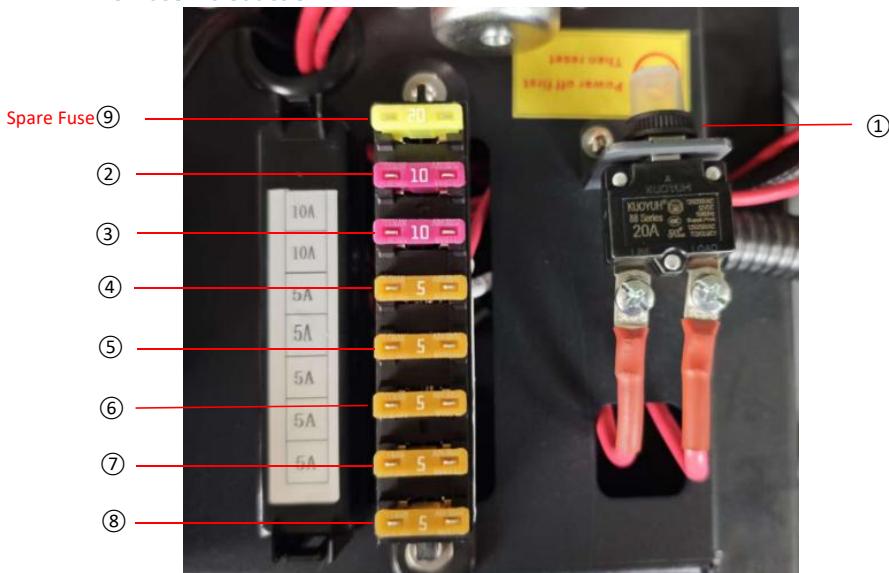

|                           |                                  |
|---------------------------|----------------------------------|
| ① Cylindrical brush reset | ⑤ Head Light 5A                  |
| ② Vacuum motor 10A        | ⑥ Vacuum filter dust vibrator 5A |
| ③ Side brush 10A          | ⑦ Linear actuator 5A             |
| ④ Sprinkler 5A            | ⑧ Power 5A                       |

**Note:**There is a spare fuse marked 20A placed ⑨, this fuse has no function.

## Chapter 2 Operating the machine

### 2.1 Buttons and pedals of the machine

#### 2.1.1 Key controlling buttons of the machine

- ① Horn button
- ② Sprinkler button
- ③ Main light button
- ④ Voltmeter (the current voltage of the batteries is shown; charge the batteries immediately when the voltage is lower than 42V)
- ⑤ Vacuum Filter vibrator button
- ⑥ Sweeping and Vacuum button
- ⑦ Forward/ backward button
- ⑧ Emergency stop switch



#### Attention:

1. The sweeping button has three gears:

**The front gear:** the main brush, the side brushes and the vacuum motor are started; the main brush and the side brushes will descend and the machine is ready for work.

**The middle gear:** the main brush, the side brushes and the vacuum motor are stopped; the main brush and the side brushes do not rise, and the operator can adjust the height of the brushes.

**The rear gear:** the main brush and the side brushes stop working and ascend.

#### Sprinkler valve:

Before turning on the sprinkler button, make sure that the sprinkler valve is open; when the sprinkler button is turned off, close the valve to prevent leakage.



## 2.1.2 Charging the batteries

- ☛ A socket with a minimum diameter of 6 mm is required.
- ☛ If you need to stop charging the batteries, disconnect directly.

## 2.1.3 Adding water to the water tank

- ☛ Before using the machine, add clean water to the clean water tank. Pay attention to the water quality so that the pipe will not be blocked.

## 2.2 Operating the machine

### 2.2.1 Before the operation

- ☛ Before getting started, make sure that no doors or covers are open and the garbage can is correctly closed. If the machine does not work after transportation, check every part first.

### 2.2.2 Power display

- ☛ Insert the start key in the control panel and turn the start switch clockwise to the "ON" position. The current voltage of the battery will be displayed in three seconds. If the voltage is lower than 42 V, charge the battery first.

### 2.2.3 Starting the machine

- ☛ Be seated on the driver's seat.
- ☛ Step on the brake pedal and turn the start key to the "ON" position.
- ☛ Move the machine to the work area using the steering wheel and the forward/backward button.
- ☛ The moving speed can be adjusted from 0 to the maximum value by step on the accelerator pedal.
- ☛ Press the sweep button to start work, and use the steering wheel, accelerator pedal and forward/backward button to move the machine.
- ☛ The garbage can must be closed during the sweeping work.
- ☛ The sweeper applies automatic and one-button operation. When the sweeping button is turned on, all motors (including the main brush motor, side brush motor, and vacuum motor) will automatically start as well as the main brush and side brushes will automatically descend.

### 2.2.4 Stopping the machine

- ☛ Easing off the accelerator pedal to stop the machine.
- ☛ Press the stop button and all sweeping functions are stopped, and the main

brush and side brushes will ascend.

-  Turn the start switch to the "OFF" position.

## 2.3 Cautions

### 2.3.1 General instructions

-  When the brushes are rolling, do **NOT** leave the machine in the same place for a long time, because this would leave unnecessary marks on the ground.
-  If you need to suction large light garbage, you can lift the front baffle rubber strip so that the garbage can be suctioned into the garbage can. Note that when the front baffle is lifted, the suction efficiency of the machine will be reduced.
-  In order for the machine to achieve its best cleaning effects, the filter screen should be vibrated regularly: stop the machine, press the dust-vibrator button to start the dust-vibrator motor and keep it operating for seconds.
-  During the work, the filter screen should be vibrated every 30 minute on average (depending on the working area)
-  The machine cannot collect garbage when the filter screen is blocked or the garbage can is filled. Do **NOT** use the machine on the damp ground to prevent the filter screen from being damaged.
-  The garbage can must be discharged every time when the work is finished.

### 2.3.2 Discharging the garbage can

-  Stop the machine.
-  Open the buckle of the garbage can.
-  Pull the garbage can downward, drag it out and take out the garbage.
-  Put the garbage can back in the machine and fasten the buckle.

### 2.3.3 Push/drag of the machine

-  Push/drag the machine when it is turned off or when there is a fault.
-  Make sure that the speed is not greater than 5km/h.
-  Press the button to the forward gear when drag the machine forward , and to the backward gear when drag it backward.

### 2.3.4 Storage of the machine

-  If the machine is not about to be used within 30 days, please disconnect the battery and store it in a clean and dry place.


## Chapter 3 Regular inspection and replacement of damaged parts

### 3.1 Regular inspection

| Regular inspection items |  | Time interval (h) |    |     |     |     |
|--------------------------|--|-------------------|----|-----|-----|-----|
|                          |  | 4                 | 50 | 100 | 200 | 500 |
| 1                        | Battery power  |                   |    |     |     |     |
| 2                        | Carbon brushes of the motors                           |                   |    |     |     |     |
| 3                        | Is the main brush entangled?                           |                   |    |     |     |     |
| 4                        | Are there particles and/or crystals in the water tank? |                   |    |     |     |     |
| 5                        | Buttons on the control panel and electronic components |                   |    |     |     |     |
| 6                        | Are the brushes worn?                                  |                   |    |     |     |     |
| 7                        | Is the filter blocked?                                 |                   |    |     |     |     |
| 8                        | Does the sprinkler joint leak?                         |                   |    |     |     |     |



### 3.2 Replacement and adjustment of the main brush(cylindrical brush)

- Before replacing the main brush, place the machine on the flat ground and make sure that it is power-off.
- Open the left side cover board of the machine, use an open-end wrench to remove these red circle screws.(see below photo)
- Take out the old brush and replace it with a new one (first install the sealing plate nuts, then the baffle bracket nuts and finally the rocker arm nuts).
- Turn on the sweeping button and check whether the main brush works normally; if not, use the rocker arm to adjust it.

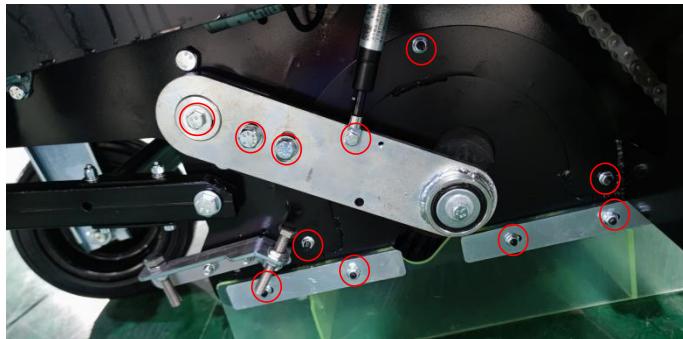

#### 🔧 Adjustment of the main brush(Cylindrical brush):

Open the both side cover board of the machine(**both sides need to be adjust at same level**).

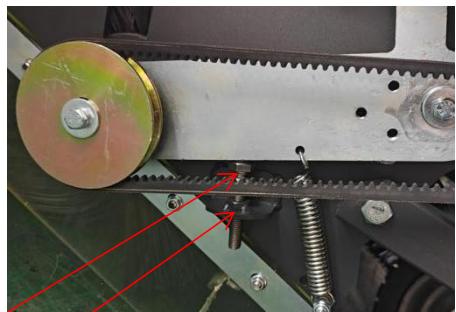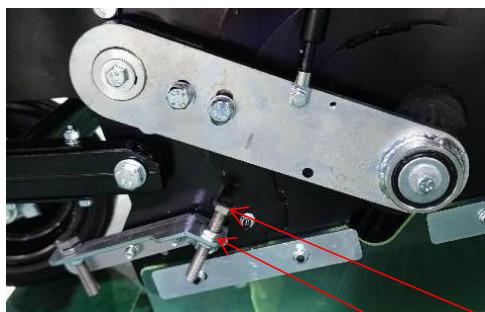

②

①

First step: Release the #1 nuts a little(turn right)

Second step: Turn right the #2 screw with a wrench is for ascend the main brush, Turn left with a wrench is for descend the main brush.

### 3.3 Replacement and adjustment of the side brushes

🔧 Before replacing the side brushes, place the machine on the flat ground and make sure that it is powered-off.


🔧 Use an Allen wrench to loosen the bolts of the side brushes, and press the side brushes with your hands, and then the side brushes can be removed.

🔧 Push up the flange keyway of the new side brush, fasten it on the side brush motor, tighten the screws and make sure that the side brushes do not fall out when your hands leave them.



☞ Adjustment of the side brush(Both side need to be adjust):

Open the both side cover board of the machine.

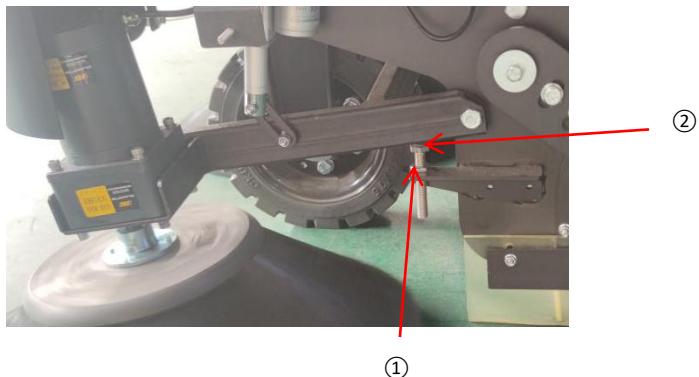

First step: Release the #1 nuts a little (turn right)

Second step: Turn right the#2 screw with a wrench is for ascend the main brush,Turn left with a wrench is for descend the main brush.

### 3.4 Removal and installation of the garbage can

- ☞ Make sure that the machine is powered-off.
- ☞ Open the buckle of the garbage can, pull the garbage can downward, drag it out and take out the garbage.
- ☞ Align the mouth of the empty garbage can with the sweeper, and slowly push it forward.
- ☞ Fasten the buckle.



### 3.5 Maintenance of the batteries

The sweeper is powered by four batteries of 12 V and the total system voltage is 48 V. The instructions below should be followed when maintaining the batteries.

- ☞ During the work, the battery voltage will gradually decrease; when the last bar of the voltmeter is flashing, please charge the batteries immediately.
- ☞ Before maintaining the batteries, please wear gloves to avoid contact with acid substances.
- ☞ Check regularly whether the battery cables are worn or loose, and replace them when necessary.

⚠ The ends of the batteries should be kept clean, and there should be no dust on the battery surfaces, or the batteries may be burnt.


- ⚠ In order for the batteries to have a long service life, charge them immediately after using the machine; deep discharge is strictly prohibited, as it would reduce the capacity of the batteries and shorten their service life.
- ⚠ When charging the batteries, first insert the female mating -plug into the charging port onboard , then connect the male plug with the socket; when the batteries are fully charged, first cut off the plug in the socket, and then pull them out of the machine.
- ⚠ If you do not need to use the machine for a long period of time, please charge the batteries fully and disconnect the positive pole.

### 3.6 Cleaning of the water filter screen

⚠ Remove the filter cover, take out the filter screen and wash it with clean water.



First open this plastic cover

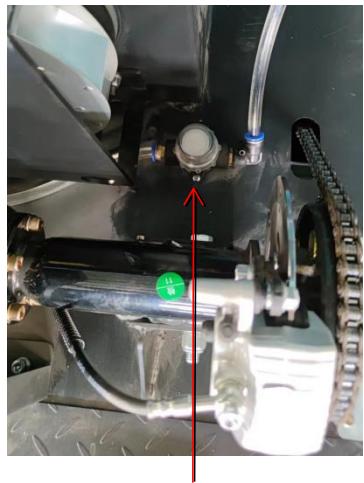

Second unscrew this transparent filter

## Chapter 4 Common problems and solutions

| Problems   | Causes   |  | Solutions   |
|--|--|--|---|
| The machine is out of power                          | The main fuse is blown                         |  | Replace the main fuse   |
|  | The batteries have no power output             |  | Charge the batteries (Charge the batteries once a month if the machine is not going to be used for a long time)<br>Replace the broken batteries |
| The machine moves abnormally                         | The driving motor runs well                    | The chains have fallen out             | Reinstall the chains  |
|  |  | The gearbox is broken                  | Replace the gearbox   |
|  | The driving motor runs abnormally              | The driving motor is broken            | Replace the driving motor   |
|  |  | The driving motor controller is broken | Replace the driving motor controller  |
|  |  | The accelerator panel is broken        | Replace the accelerator panel   |
| The main brush does not work                         | The fuse is blown                              |  | Replace the fuse  |
|  | The belt of the main brush is broken           |  | Replace the belt of the main brush  |
|  | The main brush motor is broken                 |  | Replace the main brush motor  |
| The side brushes do not work.                        | The fuse is broken                             |  | Replace the fuse  |
|  | The side brush motor is broken                 |  | Replace the side brush motor  |
| The brushes do not rise or fall                      | The fuse of the pushing rod is blown           |  | Replace the fuse  |
|  | The relay is broken                            |  | Replace the relay   |
|  | The pushing rod motor is broken                |  | Replace the pushing rod motor   |
| The cleaning effects are not good                    | The brushes are worn                           |  | Replace the worn brushes  |
|  | The brushes are entangled                      |  | Remove the entanglements  |
|  | The baffle are worn                            |  | Replace the worn baffles  |
|  | The machines moves too fast                    |  | Reduce the speed  |
|  | The ventilator has a fault                     | The ventilator works                   | Start the dust-vibrating button   |
|  |  | The ventilator does not work           | Replace the ventilator  |
| Leaves or large garbage cannot be cleaned completely | The brushes are too high                       |  | Adjust the height of the brushes  |
|  | The brushes are entangled                      |  | Remove the entanglements  |
|  | The machines moves too fast                    |  | Reduce the speed  |
| Dust or fine ashes cannot be cleaned completely      | The filter element is blocked                  |  | Clean or replace the filter element   |
|  | The baffles are broken                         |  | Replace the broken baffles  |
| The garbage moves forward                            | The front baffle is broken                     |  | Replace the front baffle  |
| The brushes become worn very quickly                 | The brushes are pressed too tightly            |  | Adjust the height of the brushes  |
|  | The ground is too rough                        |  | No solution available   |
| The garbage can leaks                                | The sealing strip of the garbage can is broken |  | Replace the sealing strip of the garbage can  |
| The batteries cannot be charged                      | The batteries are broken                       |  | Replace the broken batteries  |
|  | The charger is broken                          |  | Replace the charger   |
|  | The battery connecting cables are loose        |  | Tighten the loose battery connecting cables   |
| The batteries discharge too quickly                  | The batteries are not well charged             |  | Charge the batteries  |
|  | The batteries are broken                       |  | Replace the broken batteries  |

## Chapter 5 Maintenance

Regular maintenance is necessary in order for the machine to be in its best condition, as well as to extend its service life and ensure the operator's safety. The time interval of maintenance can be changed under certain circumstances, but this must be determined by a professional technician.

When performing maintenance, make sure that the machine is turned off and the key is removed from the switch.

### 5.1 Operating conditions

- Temperature: -10 °C ~ 40 °C
- Relative humidity: 5%~70%
- No electricity-conductive and explosive gases or dust are presented
- No corrosive gases or vapor are presented
- Well ventilated indoor environment

### 5.2 Maintenance timetable

| Items                                 | Upon receiving | Every 10 h | Every 50 h | Every 100 h | Every 200 h | Every 500 h |
|---------------------------------------|----------------|------------|------------|-------------|-------------|-------------|
| Height of the brush plates            |                |            |            |             |             |             |
| Are the brush plates entangled?       |                |            |            |             |             |             |
| Belt of the main brush                |                |            |            |             |             |             |
| Dust suction motor and filter element |                |            |            |             |             |             |
| Baffles                               |                |            |            |             |             |             |
| Dust-vibrator motor                   |                |            |            |             |             |             |
| Are all nuts and screws tightened?    |                |            |            |             |             |             |
| Degree of wear of the brake           |                |            |            |             |             |             |
| Degree of wear of the brushes         |                |            |            |             |             |             |
| Are all the driving chains tightened? |                |            |            |             |             |             |

## Chapter 6 After-sale services

### 6.1 General description

- ⌚ one-year warranty for the whole machine, 6-month warranty for damaged parts, and no warranty for consumables (calculated from the next day after receiving the machine).
- ⌚ The delivery receipt and purchase invoice are certificates for warranty and must be kept properly.

### 6.2 Contents of warranty

| Category           | Contents  | Warranty period |
|--------------------|---|-----------------|
| The entire machine | Sheet metal parts, batteries, motors, controllers, accelerator pedal, relay, charger, spray gun, high-pressure pump, brake assembly | 1 year          |
| Easy damaged parts | Shock attenuator, inner springs, wheels, nozzles, lights, bearings, universal wheels, fuses   | 6 months        |
| Consumable parts   | Side brush, main brush, filter element, baffle, conveyor belt, sealing strip, high pressure water pipe                              | No warranty     |

### 6.3 Cases not covered in the warranty

- ⌚ The operator fails to perform maintenance according to the instruction manual, resulting in damage or failure.
- ⌚ The surface and/or the structure of the machine are obviously damaged due to improper operation.
- ⌚ Disassembly or modification not approved by the original manufacturer.
- ⌚ Damage due to weather or force majeure.
- ⌚ The warranty is expired or the machine has been used for more than 1,500 hours.

# Warranty Card

|                             |  |               |  |
|-----------------------------|--|---------------|--|
| User's name                 |  | Tel           |  |
| Address                     |  | Bill No.      |  |
| Date of purchase            |  | Serial number |  |
| Type of product             |  | Date          |  |
| Accessories to be replaced: |  |               |  |
| Fault description:          |  |               |  |