

ggmgastro

SHOE POLISHER



MODEL NO: SPMFE


230V~ 50Hz 120W

Instruction Manual

Shoe cleaning machine

Description

1. Metal housing
2. ON/OFF switch
3. Dispenser cabinet
4. Polishing brush(right)
5. Polishing brush(left)
6. Cleaning brush(middle)
7. Motor
8. Mat

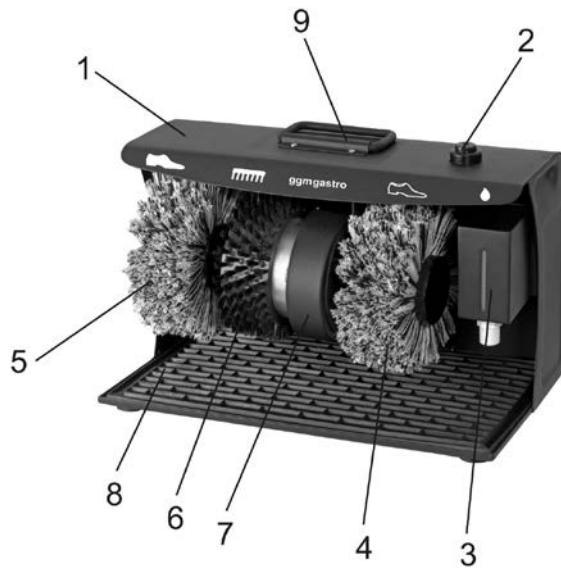

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precaution should always be followed including the following:

1. Read all instruction before using the appliance.
2. This appliance is not for use by children.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
4. Unplug from outlet before cleaning.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, mechanical or electrical adjustment.
6. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
7. Do not use outdoors.
8. Do not use in washroom or in wet areas.
9. The appliance is not suitable for installation in area where a water jet could be used.
10. The appliance must not be cleaned by a water jet.
11. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard.
12. Do not use appliance for any other intended use.

Manual for the shoe cleaning machine

SAVE THESE INSTRUCTIONS

Note:

This model is a household shoe polishing machine and works with an intermittent duty motor. The duty cycle of the motor is designed to run for 5 minutes continuously and then 5 minutes off before restarting again. The motor has an automatic overload thermal cutoff which stops the appliance in case of excessive force which may cause over-heating. In case the overload is tripped, you have to wait for approximately 10-15 minutes before resuming regular operation. (This depends on the ambient temperature.)


How to use your shoe polishing machine

1. Press the ON/OFF button on the top of the housing to start the machine. This button is pressed once for ON and again for OFF.
2. To apply polishing cream to your shoe, lift your shoe and stroke the tap of the dispenser gently. Natural color shoe cream can be used for any colored shoes.
3. It is strongly recommended that one of the polishing brushes is used for shoes applied natural color cream and another one, for colored cream. Do not mix use of these two brushes, or otherwise, it will affect the polishing result occasionally.
4. When polishing is done, press the ON/OFF button again to switch the machine off.

Refill the shoe cream

1. By looking through the wax box indication slot, you can notice when the shoe cream should be refilled.
2. Unlatch the dispenser and have it move outward to open the dispenser cabinet.
3. Take the bottle out, loose the tap and fill in cream of the same kind. Put the spring and steel ball in proper position before recapping the tap tightly. Also, make sure the exhaust hole on top of the bottle is open. Or otherwise, shoe cream will not flow out smoothly when tap is stroked. Actually, you can take the blocking pin out from the exhaust hole and throw it away at the first time you have your bottle filled.
4. Put the cream bottle back into the cabinet and latch it in proper position on the machine.

Manual for the shoe cleaning machine

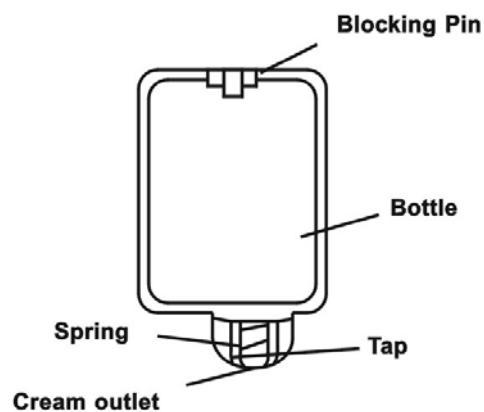

Cleaning and maintenance

1. Unplug the unit before cleaning and maintenance.
2. Do not clean the machine with water jet.
3. Dust and mud on the mat can be cleaned by simply taken it out from the machine and have it washed or cleaned by vacuum cleaner. It is a good practice and important for safety to have the mat dry thoroughly in cool area before putting it back to the machine. Do not dry the mat under strong sunshine nor in hot area.
4. When changing brush is seemed necessary, unscrew the fixing screw on the brush and pull it sideway to take it out from the shaft. Replace the brush following the reversed procedure. Remember to have the screw fixed on the flat D-cut surface of the motor shaft.