

ICE CREAM DISPLAY

OPERATION INSTRUCTIONS



EAVNR67N

EAVNR87N

Thank you for choosing and purchasing our product.Please carefully read the operation instructions before use for a correct application and satisfactory effect. This appliance compliance with the requirement of directive 2006/42/EC.

Contents

- 2 General
- 2 Structure and Parts
- 3 Handle and Erection
- 3 Handle and Erection
- 4 Preparation and Power Supply
- 4 Preparation and Power Supply
- 5 Use and Caution
- 7 Maintenance
- 7 Trouble Shooting
- 8 Principle of Refrigeration System and Electric Circuit Diagram
- 9 Major Parameters

Note

1. The electric circuit diagram and parameters on the product nameplate are final

ones if they have been changed.

2. The design might be improved without notice.



WARNING: Refrigerant is facility burning of R290, please protect against fire.



Meaning of crossed out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

Major Parameters

Model	EAVNR87N	EAVNR67N
Coolant and injection quantity(g)	R290(50)	R290(65)
General Rated input power(W)	210	220
Kind of weather	4	4
Refrigeration temperature($^{\circ}$ C)	≤-18	≤-18
Electric shock protection class		I
Rated voltage(V~)	220-240	220-240
Rated Frequency(Hz)	50	50
Rated Current (A)	1.6	1.6
Total effective volume(L)	77	77
Net weight(kg)	44	45
Foaming agent:	Cyclopentane	Cyclopentane
Overall dimension (mm)	867x735x377	867x735x446
Lamp Power(W)	14(LED)	14(LED)

General

1. Top brand fully enclosed compressor is used on the refrigerator. The refrigerant R290 is of an environmentally friendly agent.

Direct-cooled refrigeration system is used which ensures that the temperature is very even throughout the ease.

- 2. Double hollow transparent glasses are used on door and body. It features an artistic and elegant appearance, perfect perspective and easy access.
- 3. It has a wide application in department store and house as well as the meeting room and sitting room.

 
Structure and Parts



Handle and Erection

Handle with care Unplug the wall socket first. Never tilt it over 45 degree during handling.





Drv place

Well ventilation



Sufficient space

The distance from both sides and back of refrigerator to wall or other substance must be less than 10cm. The refrigeration capability might be decreased if its surround space is too small to circulate air.






Always locate the refrigerator at a

place with fine ventilation. For the

first time use, wait for 2 hours after

Handle and Erection

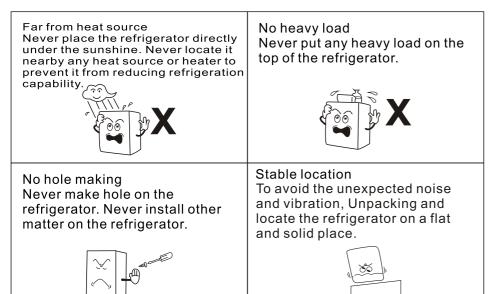


Note

Following phenomena are not troubles


The murmur of water is heard when the refrigerator is working. It is a normal phenomenon as the coolant is circulating in the system.

In wet season, condensation might be found on the outside of the refrigerator. It is not a trouble, which is caused by high humidity. Simply use cloth to wipe it.

Principle of Refrigeration System and Electric Circuit Diagram

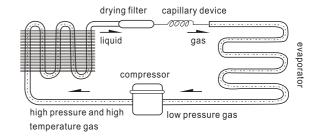

Circuit Diagram

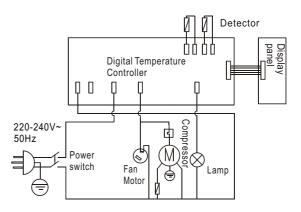

Maintenance

1. Notice

Often keep the refrigerator clean and periodical maintenance is necessary.

Always unplug the socket before maintenance.

Never use damaged plug or loose socket to prevent from electric shock or short circuit. Never flush the refrigerator.Never use alkali detergent,soap,gasoline,acetone or brush.

2. Clean outside

Dip soft cloth in neutral detergent(tableware detergent)to clean the outside of the refrigerator and then wipe it with dry soft cloth.

3. Clean inside

Take rack out for cleaning with water.

Use soft cloth to wipe the box.

4. Shut down refrigerator for a long time

Take all food out and unplug the wall socket.

Clean both inside and outside of the refrigerator thoroughly and open the door for sufficient dry.

The glass breaks easily.Keep the glass far from children.

5. This product is a direct cooling refrigerator, also named as frost freezer. When the frost thickness in the refrigerator is more than 5mm, It will seriously affect the cooling effect, and the running time of the compressor will be prolonged accordingly. In the process of use, manual defrosting regularly were requested.

Defrosting method:

a. Unplug the refrigerator or turn off the power switch. Please open the door of refrigerator if there is door.

b. Take out all food from the refrigerator.

c. According to ambient temperature, defrosting time is about 2-12 hours. Turn on the refrigerator until the frosting completely melts.

d. When defrosting, do not use sharp tools to contact the cooling system or inner tank.

Trouble Shooting

Trouble	Cause and Remedy	
	Is the plug in socket well?	
No refrigeration	Is the fuse broken?	
	Is there no power?	
	Is it under the sunshine?Is there any heat source nearby?	
	Is the surrounding ventilation bad?	
Unsatisfactory refrigeration	Does the door close well?Does door open for a long time?	
	Is the door seal strip deformed or damaged?	
	Is food congested or too much?	
	Does food block the air suction or outlet?	
	Regulate the temperature controller.	
Much noise	The refrigerator does not level.	
	The refrigerator contacts wall or other matter.	
	There is loose part in refrigerator.	
Contact local service agent for he	p if simple trouble shooting does not solve the problems.	

Preparation and Power Supply

Exclusive power socket Normally,the power supply should be 220-240V single phase AC with exclusive single phase three pin receptacle(250V,10A) and fuse (6A). The power receptacle must have a reliable earth connection.



No share on socket Never let the refrigerator share the common socket with other appliance, other wise the cable becomes hot and fire might be resulted



Protect cables


Never break or damage the cables otherwise current leakage and fire might be resulted.



No water flushing Never giver the refrigerator surface a flush otherwise current leakage might be resulted.



Preparation and Power Supply

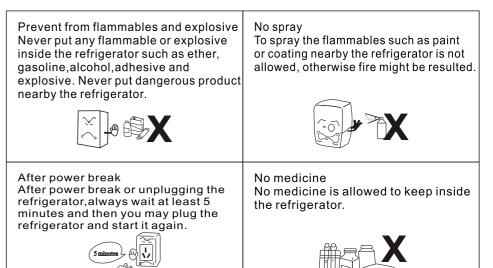


Use and Caution

1. Before use:

Plug the refrigerator on 220-240V~ exclusive socket.

After the refrigerator running, put hand on the air suction to confirm it is sufficient cold. Then you may put food inside the cold box.

 2.Digital temperature controller



It is a mini-sized and integrated intelligent controller and applicable to the compressor of one Hp.

The main fuctions are :Temperature Display/Temperature Control/Manual,automatic defrost by turning off/illumination Control/Value Storing /Self Testing /Parameter Locking

Front panel operation

1、Set temperature

Press E button, the set temperature is displayed.

Press 🛋 or 💌 button to modify and store the displayed value.

Press m button to exit the adjustment and display the cold-room temperature.

- If no more button is pressed within 10 seconds, the cold-room temperature will be displayed.
- 3 Manual start/stop defrost: Press 🗟 button and hold for 6 seconds to defrost or stop defrost.
- 4、 Refrigerant LED: During refrigeration, the LED is on; When the cold room temp. is constant, the LED is off; During the delay start, the LED flashes.
- 5、 Defrost LED: during defrosting, the LED is on; When is stops defrosting, the LED is off, During the delay display of defrost, the LED flashes.
- 6、Digital controller reset

When display shows "Disorder", press " button for 2s until buzzer rings, quickly press " button for 6s until buzzer rings again, the display will flash for 3s and it restores factory setting.

3.Cautions

Shorten the door open time and reduce open frequency is good to keep a cold temperature inside the refrigerator.

Never block the air suction and outlet. Keep air circulation and refrigeration capability. Do not make food congested as it will influence the cooling effect.

Adjust the rack height for proper food storage.

Cool the hot food down to room temperature before you put it into the refrigerator.

Try to reduce the open times and keep refrigerator inside cold in case the power is cut off. Only skilled service man is allowed to repair the damaged power cable with special tools. Never touch compressor to avoid from scald.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance. The operation manual are not suitable for the persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

During normal operation, the emission noise level does not exceed 70dB(A). The maximum loading of the Shelf does not exceed 18kg.

The climatic class of the appliance is 4, the Units are suggested to be used at $16^{\circ}C-32^{\circ}C$ ambient temperature.

To avoid damages or other problems, this product can not be put or stored with any corrosive food .

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices of other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Caution: This equipment shall be manually defrosted while the thickness of ice exceed 5mm, and please check the ice conditon everyday if in the wet season.