Operation Manual



Warning: Please read this manual carefully before using.

1. Description

The product is the cooling facility special designed for hotel, restaurant, supermarket, cake house to show cake, soft drink, food etc.

It has handsome appearance quality material, vacuum movable door, transparent glass and inner light. Cooling system adopted famous brand of whole close cooling compressor and all kinds of spare parts.

Therefore, the product has the strongpoint of handsome appearance, rational design, quick cooling, electric saving, low noise, no frost and suitable temperature.

2. Main Technical Parameters

Туре	temperatu re	Voltage/ Frequency	Input total power	Refrigerant	Dimensions(mm)
KTG107-SF		220~240V 50Hz	450W	R290	1000×730×1200
KTG157-SF			550W		1500×730×1200
KTG207-SF			650W		2000×730×1200
KTGSF107S			450W		1000×730×1200
KTGSF157S			550W		1500×730×1200
KTGSF207S			650W		2000×730×1200
TKVG66-SFN	2~8°C		160W	R600a	660×530×730
TKVG90-SFN			200W		900×530×730
TKVG120-SFN			320W		1200×530×730
SKAVG513N			180W		1340×420×315
KTG107W			825W	R290	1000*740*1900
KTG127W			995W		1200*740*1900
KTG157W			1255W		1500*740*1900
KTG187W			1520W		1800*740*1900
WKRN220N			980W		700*670*1900

3.Safety attention

- (1) You must use single-phase three poles power socket, its grounding E must be grounded reliably.
- (2) Forbid stocking volatile, erosive, radioactive, flammable, explosive, poisonous and polluted dangerous food.
- (3) Please don't put power wire on aisle to prevent heaving pressure and edge tool from creepage accident.
- (4) Don't wash the showcase by water to prevent from short circuit and creepage
- (5) Please cut off power socket when repairing or replacing light.

4. Operation attention

(1) Please put the showcase lightly when moving and gradient isn't more than 45°.

- (2) Please put it in ventilated and dry place and be away from heat source and dust to prevent from affecting cooling effect.
- (3) If the socket don't have grounding device, please make the hull ground to prevent from creepage accident.
- (4) The power capacity shouldn't be less than 200V, please check circuitry and capacity before operation. If the power isn't coherent with power requirement, please add manostat whose capacity is more than 1000W before reusing.
- (5) The thermostat has been adjusted to best place before out of factory. You shouldn't adjust it.
- (6) The time between turn off and turn on again can't be less than 3 minutes.
- (7) Please don't put too much or overhot food.
- (8) Please assure the inner and surface of showcase is clean.
- (9) It has water plate, you should get rid of the water in the plate periodically.

5. Maintenance

- (1) If found special situation, please don't dismantle parts and should invite professional technician.
- (2) The time between turn off and turn on again should be more than 3 minutes.
- (3) Please get rid of dust and oil pollution periodically to improve cooling effect.
- (4) If you stop operating the showcase for a long time, you should cut off power, make it clean and put it in dry and ventilated place. Please check the electrical wire strictly by technician before operation again.

6. Familiar trouble and salvation

Phenome	Po	ossible reason	Check content	Solvation	
na					
	Compressor	Power has	no electric	Check by	Connect
	doesn't work			multimeter	power
		Socket i	s loose	examine	Tight socket
		Thermostat f	oot is loose	Check by	Jointing or
Indicator				multimeter	tighten it
doesn't	doesn't		Relay foot is loose		Tighten it
work				dismantled	
				cover	
	Compressor is	Indicator doesn't work		Dismantle	Replace
	working			indicator	indicator
		Indicator foot is loose		examine	Tighten foot
		Evaporator	Cooling fan	Check by	Replace fan
	Inner temperature is too high	wing is	doesn't	multimeter	
Compress or is working		blocked by	work		
		ice	Temperatu	examine	adjust
			re is too		
			low		
		Opening door	too often		Opening
					door as few

					as possible
		Stock is too la	Stock is too large		Take out
					some food
		Environment temperature		Test by	Improve
		is too high		temperature	environment
				meter	temperature
		Cooling fan	Cooling fan	Check by	Replace fan
		doesn't work	is bad	temperature	
			Foot is	examine	Tighten foot
			loose		
	Inner			Check	Replace
	temperature	Thermostat is bad		thermostat	thermostat
	has been				
	achieved				
High noise	Show	/case isn't put fl	at	examine	Make flat
	Fan/com	pressor foot is	loose	examine	Tighten
					screw

7. Guarantee

We are responsible for maintenance for 1 year in the case of operation according to the user's manual. If the spare parts is bad caused by our bad quality, we are responsible for replace and repairing (expect glass)


You should pay rational fee after repairing the trouble caused by reasons as follows:


- (1)The trouble caused by disobeying requirements on user's manual.
- (2) The trouble caused by using spare parts by yourself.
- (3) The trouble caused by bad capacity fluctuate value or other natural factor.


8. Other

There's something with product.

- (1)1 copy of user's manual.
- (2) Principle picture

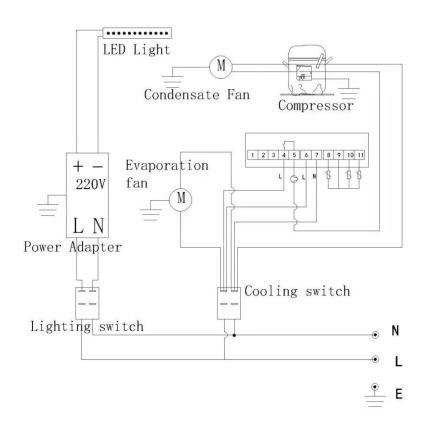

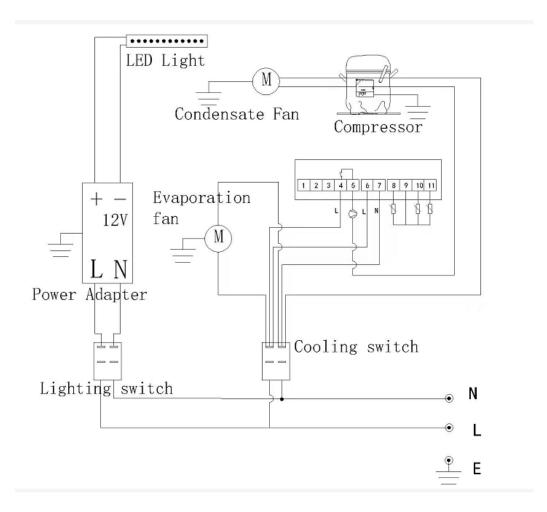

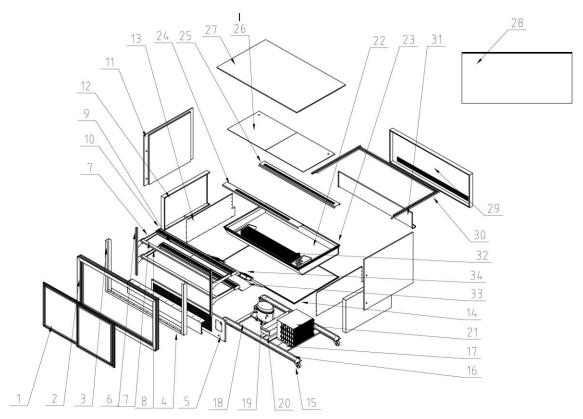

1	Hollow glass door door	13	Foamed frame side	25	Return air grille
	Hollow glass door Hollow		sealing plate		
	glass door				
2	Doorframe	14	Foamed frame bottom shell	26	Bottom plate
3	Column side panel	15	2 inch universal wheel	27	Roof glass
4	Doorframe	16	Under frame support	28	Front baffle glass
	crossbandbottom		plate		
5	Switch panel	17	Condenser support plate	29	Foamed frame front
					plate
6	Ladder	18	Compressor support	30	Glass bottom
			plate		frame(PVC)
7	Bracket	19	Compressor	31	Foamed frame front
					sealing plate
8	Shelf back crossbar	20	Water receiving box	32	Evaporator
			(PVC)		
9	Lampshade	21	Condenser	33	Fan plate
	(aluminium alloy)				
10	Lampshade end cap(PVC)	22	Inner tank component	34	Evaporator fan
11	Sideboard glass	23	component(PVC)		
12	Foamed frame sideboard	24	Air outlet		