

Hot Pot / Food Warmers

OPERATION MANUAL



Keep this instruction manual Ready to hand

at the product !

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all Instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. Preserve this manual safely. When passing on/selling the device to a third party, the manuals must be handed over along with the device.
4. Every person using the device must act in accordance to the manuals and under consideration of the safety advice.
5. The device is to be used indoors only.
6. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, in water or other liquid.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn off any control, then remove plug from wall outlet.
9. Do not use appliance for other than intended use.
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
11. Children shall not play with the appliance
12. Cleaning and user maintenance shall not be made by children without supervision
13. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
14. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

Intended use

Safe operation is only guaranteed when using the device for its intended purpose.

Any technical interventions, as well as assembly and maintenance are to be made by a qualified customer service only.

The food warmer is for **keeping foodstuffs hot**, using appropriate dishes.

Do not use the **food warmer** for:

- heating interior spaces;
- heating easily flammable liquids or materials or substances otherwise dangerous to health.

CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.


The operator is liable for all damages resulting from inappropriate use.

Technical data

Model number:	BHPV35-1	BHPV35-2	BHPV35-3
Rated voltage:	220-240V ; 50/60Hz	220-240V ; 50/60Hz	220-240V ; 50/60Hz
Rated power:	150W	150W x2	150W x3
Rated capacity:	3.5Lx1	3.5Lx2	3.5Lx3
Model number:	BHPV35-4	BHPV65-1	BHPV65-2
Rated voltage:	220-240V ; 50/60Hz	220-240V ; 50/60Hz	220-240V ; 50/60Hz
Rated power:	150W x4	200W	200W x2
Rated capacity:	3.5Lx4	6.5Lx1	6.5Lx2

We reserve the right to make technical changes!

User panel

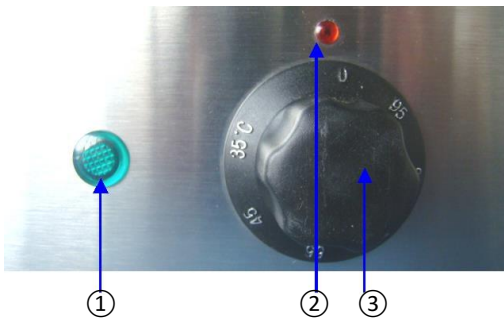

- ① Heater indicator (green)
- ② Temperature setting point
- ③ Temperature dial (0°- 95°C), (0 - 205°F)

Operating

- Prior to first use, wash the food warmer with a soft, damp cloth. Wipe dry.
- Connect the unit to an appropriate socket outlet.
- Turn the food warmer on. After turning it on, the green control light will come on.
- Set the temperature dial to the desired temperature (0 to 95°C). (0 to 205°F).
- When the unit reaches the desire temperature, the green light will go off. When the food warmer cools, the green light will come on again and the pot will begin heating.

WARNING! Hot surface!

The surface of the unit is very hot when in use.

Do not touch the hot surface with bare hands.

- Place warm foodstuffs in cooking pot. The temperature will be kept at the desired level.

CAUTION!

The food warmer is not suitable for direct cooking.

CAUTION!

Do not move the food warmer when containers with foodstuffs are on it; remove them first! When removing a container from the food warmer, wear gloves!

- If the unit will remain unused for a longer time, remove the plug from the socket.

Cleaning and maintenance

Safety advice

Before beginning with repair or cleaning works make sure the device has been disconnected from power socket (pull the power plug!!!) and has cooled down.

Do not use any acid agents and make sure no water ingresses the device.

To protect yourself from electric shock, **never** immerse the device, its cables and the plug in water or other liquids.

CAUTION!

The device is not suited for direct washing via water jets. Therefore, you must not use any kind of pressure water jet for cleaning the device!

Cleaning

Clean the device after each use.

Wash removable cooking pot in warm, soapy water. Rinse and dry thoroughly. Clean the food warmer with a soft, damp cloth and wipe dry.


Never use abrasive substances, nor bleaches or substances containing alcohol.

Use soft cloth only and make sure you **never** use any kind of abrasive agents or pads, which could scratch the surface.

After the cleaning procedure you should use a soft and dry cloth to wipe dry and polish the surface.

Before storing the device in a dry place you should make sure it has been cleaned properly.

Correct Disposal of this product

	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>
---	---



GGM Gastro International GmbH
Weinerpark 16
D-48607 Ochtrup

www.gmgastro.com info@gmgastro.com
+49 2553 7220 0