

MANUAL OF ELECTRIC CHAFING DISH

Before using the machine, please read this manual carefully and operate as in the instruction.

Specification: Model: CDH11100E
Capacity: 1/1x100 GN container
220V 50Hz 1200W

Please use this machine only to heat up food or soup! Therefore use these instructions and features:

1) Switch and indicate light:

The switch is designed with six steps: "0" – "5". When you turn the switch to "1", the machine will start to work and the indicate light will go on. When you turn the switch to "0", the power and the indicate light will go off.

2) Thermostat and indicate light of working.

The purpose of the thermostat is to control the water temperature in the water tank. When you turn the switch to "1", the heating element will start to work and the light will go on.

When the temperature of water reaches the set, the switch will turn off. The indicate light will go off at same time. When the temperature goes down about 10 °C of the set, the switch will turn on again and the indicate light will go on, too. This machine will work automatic and will keep the food at the moderate temperature.

When you turn the thermostat to the maximum, the heating element will heat the water to 90°C (±10°C) in about 20 minutes. There will be some steam coming out of the edge of the food pan.

This machine is equipped with a protection of over-heating function. If the temperature of the heating element is over 118°C, the protection of over-heating will cut off the power. When the temperature of the heating element is cooled down to the safety limit, the machine will start to work again automatically.

3 Limited water line

Before operating, please add enough water to the water tank. The water tank is marked with lines: minimum and maximum.

Caution:

- 1) Only use this machine to heat up food. Do not use it to cook food!
- 2) Can not put this machine into the water, it's dangerous and will damage the machine.
- 3) Please put this machine on a flat surface. Do not move the machine when working.
- 4) Ensure that this unit is unplugged when it is not in use, when filling and when being cleaned.
- 5) The machine must be earthed and can not be used to work outside.
- 6) If the machine offers any problem, please contact your distributor.

