



Please read this guide before using!

Dear customer, thank you for using GGM GASTRO product. We want our product which is produced with high quality and technology, to offer you the best efficiency. Because of that please read carefully all this guide and document before using product and hide it for reference source. If you give this product to someone, give the user manual at the same time. Comply with the instructions, taking into account all the information and warnings in the user manual.

Techniquial Datas

Current: 220 – 240V

Power consumption: 200 W

Producer can do technical and design changes on product.

1. Panoramic plexi cover
2. Holding eggs
3. Heated pool
4. Thermostat Heat Adjustment Button

1.Important safety and environmental instructions

This section contains safety instructions to help prevent the risk of injury or property damage. Failure to follow these instructions will void any warranty.

2.General Safety

- This device complies with international safety standards.
- This appliance is not suitable for children and ; It cannot be used by persons with reduced physical, perceptual and mental abilities or lack of experience and knowledge.
- Childrens mustn't play with device.
- Cleaning and user maintenance should be done by authorized person.
- This device is designed for industrial / commercial use.
In staff kitchens of shops, offices and other working environments, in farmhouses,
 - By customers in hotels, motels and other accommodation places;
It is used in hostel type places.
- Your mains power supply must comply with the information on the type plate of the device.
- Use the device in a grounded socket.
- The device must be powered via a residual current device (RCD) whose rated residual operating current does not exceed 30mA.

- Do not use the device with an extension cord.
- To prevent the power cord from being damaged, avoid pinching, kinking or rubbing it against sharp edges.
- Do not touch the plug of the device if your hands are damp or wet while the device is connected to the mains.
- Do not pull on the cable when unplugging the device from the socket.
- Protect the product against splashing water / liquids on the electrical part. Make sure that the product is always dry and clean.
- Use and store the device on a stable and flat surface..
- Only use original parts or parts recommended by the manufacturer.
- Unplug the appliance before cleaning and dry it completely after cleaning.
- Do not immerse the device or power cord in water.
- Do not use the device in or near explosive or flammable atmospheres and materials.
- Do not touch the surfaces of the product before it has cooled.

3.Installation and use

- Prepare the cable located on the back of the base unit. Place the device on a flat surface.
- Turn on the thermostat button.
- When the lamp is on, the resistance is activated
- Place the eggs in the egg holder
- Set the thermostat to the requested temperature

4.Cleaning

Warning: Do not use gasoline, solvents, abrasive cleaners, metal objects or hard brushes to clean the exterior of the device.

Warning: There are electrical components in the box under the chamber of the device. Never immerse the Base Unit or the power cord in water or any other liquid.

Warning: Turn off the device and unplug it from the socket. Wait for the device to cool completely.

- Clean the outer surface of the device with a damp cloth in a small amount.

6. Preservation

- If the device is not used for a long time, please carefully store it.
- Make sure the device is unplugged and completely dry.
- Store the device in a cool and dry place.
- Make sure that the device is kept out of the reach of children.


7. Handling and shipping

- Carry the device with its original packaging during transportation and transportation.
- Do not place heavy objects on the device or its packaging. The device may be damaged.
- If the device is dropped, the device may not work or permanent damage may occur.

8. Considerations regarding proper use and warranty

Elimination of the following problems is not covered by the warranty. Warranty conditions do not apply for these cases.

- 1- Damages and malfunctions caused by usage errors,
- 2- Damages and malfunctions that occur in loading, unloading, transportation and similar situations after the delivery of the goods to the consumer,
- 3- Electricity (socket, voltage, grounding, etc.), water (water pressure, tap, etc.), natural gas, telephone, internet and similar networks and / or infrastructure (expense, ground, environment and etc.) of the place where the goods are used. damage and malfunctions,
- 4- Damages and malfunctions caused by natural events and fire, flood, etc.
- 5- Damages and malfunctions caused by the use of the product contrary to the issues in the introduction and user manuals,
- 6- In case of maintenance, repair or any other intervention to the property by unauthorized persons, the warranty given to the fork will expire.

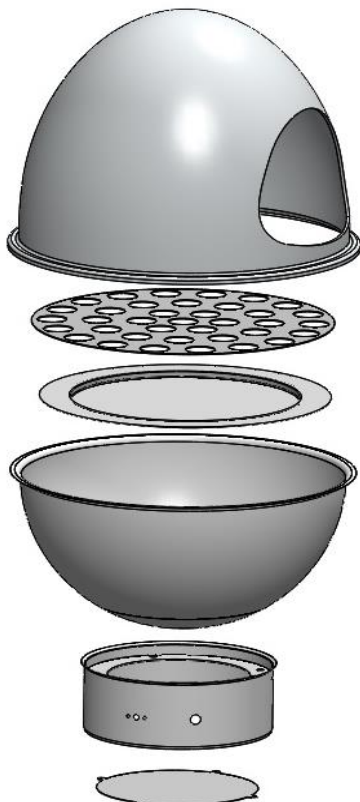



GGM Gastro International GmbH
Weinerpark 16
D-48607 Ochtrup

www.ggmgaastro.com info@ggmgaastro.com
+49 2553 7220 0