

**ggm**gastro

Microwave Oven

# INSTRUCTION MANUAL

MODEL: MWM3414

**Read these instructions carefully before using your microwave oven, and keep it carefully.**

If you follow the instructions, your oven will provide you with many years of good service.

**SAVE THESE INSTRUCTIONS CAREFULLY**

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

## ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

## Specifications

Model:	MWM3414
Rated Voltage:	230V~ 50Hz
Rated Input Power(Microwave):	1900W
Rated Output Power(Microwave):	1400 W
Oven Capacity:	34 L
External Dimensions:	553X488X343mm
Net Weight:	Approx. 21.2Kg

# WARNING

## IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (For appliances with type Y attachment)
3. WARNING – Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
4. WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person;
5. WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of any cover which gives protection against exposure to microwave energy;
6. WARNING: Liquids or other foods must not be heated in sealed containers since they are liable to explode;
7. WARNING: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container;
8. WARNING: The contents of feeding bottles and baby food jars must be stirred or shaken and the temperature checked before consumption, in order to avoid burns;

9. The minimum height of free space necessary above the top surface of the oven;
10. Only use utensils that are suitable for use in microwave ovens;
11. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;
12. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;
13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended;
14. Details for cleaning door seals, cavities and adjacent parts;
15. the oven should be cleaned regularly and any food deposits removed;
16. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation;
17. Only use the temperature probe recommended for this oven
18. **WARNING:** Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container;
19. **WARNING:** The contents of feeding bottles and baby food jars must be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

# To Reduce the Risk of Injury to Persons

## Grounding Installation

### DANGER

#### Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

### WARNING

#### Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

### CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the inside of the oven after using with a slightly damp cloth.
  2. Clean the accessories in the usual way in soapy water.
  3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
  2. If a long cord set or extension cord is used:
    - 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
    - 2)The extension cord must be a grounding-type 3-wire cord.
    - 3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

# UTENSILS

## CAUTION

### Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

### Utensil Test:

- 1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
- 2. Cook on maximum power for 1 minute.
- 3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
- 4. Do not exceed 1 minute cooking time.

## Materials you can use in microwave oven

Utensils                      Remarks

Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be placed smoothly on the ceramic board. Incorrect usage may cause the ceramic board to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

## Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

## SETTING UP YOUR OVEN


### Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Instruction Manual

1

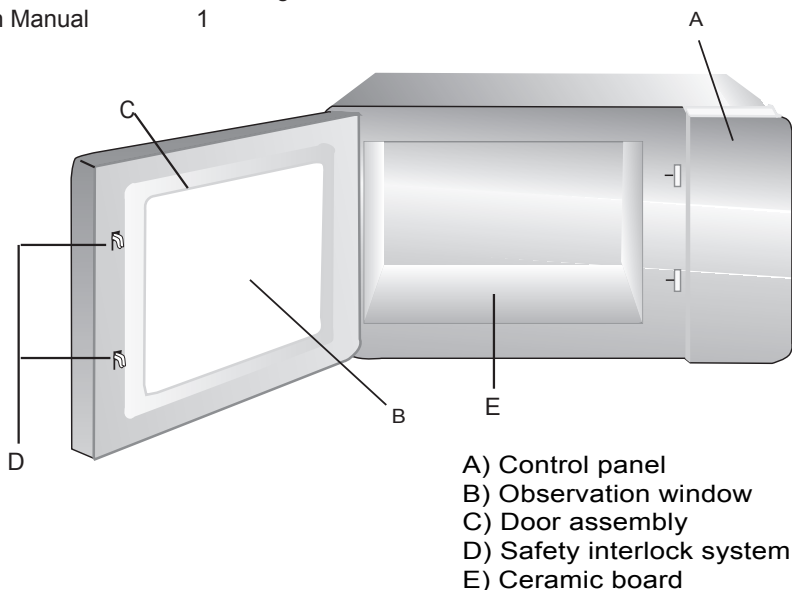

Note: 1) Don't press the ceramic board forcibly.

- 2) Take and put the utensils gently during the operation in order to avoid damage to the ceramic board.
- 3) After using, don't touch the ceramic board by hand in order to avoid high temperature scald.

## Countertop Installation


Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

**Cabinet:** Remove any protective film found on the microwave oven cabinet surface.

**Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.**


### Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents(Figure1).

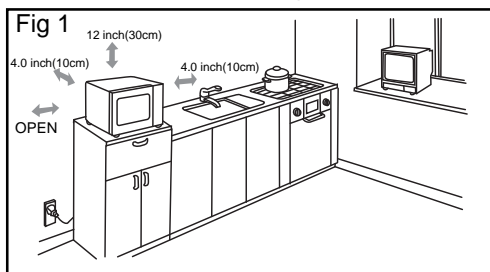

A 10-cm spacing should be kept between the appliance and right and back walls, and a 30-cm spacing kept on the top. Never dismantle the appliance's feet, nor block the air intake and exhaust opening. The left side must be open.

- 1) Blocking the intake and/or outlet openings can damage the oven.
- 2) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
- 3) Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.
- 4) Warning: The plug socket, electric appliances or the appliance which are liable effected by heat and moisture should be kept away from any vents on the oven.

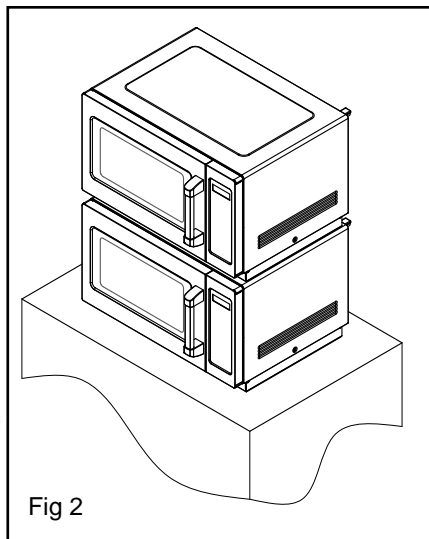

The appliance can be installed with a degree of overlap(Figure 2).The maximum overlap height is two layers.

### External Equipotential

#### **Earthing Terminal** (*export only*)

Equipment has secondary earthing terminal. Terminal provides external earthing connection used in addition to earthing prong on plug. Located on outside of oven back, terminal is marked with symbol shown below.





# Cleaning Instructions

## Always keep the oven clean

1. Cleaning the glass viewing window, the inner door panel and oven front face.

For best performance and to maintain the high degree of safety, the inner door panel and oven front face should be free of food or grease build-up. Wipe these parts with a mild detergent, rinse and wipe dry. Never use abrasive powders or pads.

2. Cleaning the control panel and plastic parts.

Do not apply a detergent or an alkaline liquid spray to the control panel and plastic parts, as this may cause damage to these parts.

Use a dry cloth (not a soaked cloth) to clean these parts.


3. Cleaning the oven interior

After use be sure to clean up spilled liquids, spattered oil and food debris as quickly as possible. If the oven is used when dirty, efficiency drops and the dirt gets stuck on the oven surface and may cause bad odours. Clean the interior with a cloth soaked in luke-warm water with a mild detergent dissolved in it, then rinse the soap off with a damp cloth.

**CAUTION:** Do Not wipe plastic and painted sections of the oven with bleach, thinners or other cleaning agents, as this may cause these parts to dissolve or change shape.

# OPERATION

## Control Panel and Features

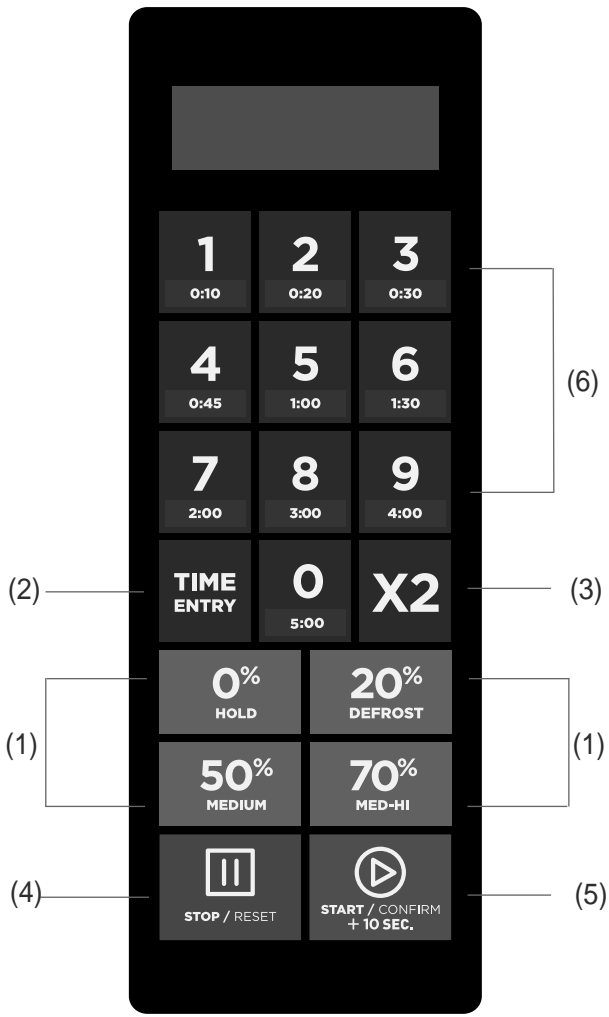

- (1) Power Buttons
- (2) Time cook Button
- (3) X2 Button
- (4) Stop/Reset Button
- (5) Start Button
- (6) Number Button

# OPERATION INSTRUCTION

Five power levels are available.

Level	High	M. High	Med.	Defrost	Hold
Power	100%	70%	50%	20%	0%
Display	100	70	50	20	00

## Appendix. A User Options

Items bolded below are the default values.


Option	Setting	Discription
1 EOC Tone	0 P :10	3 seconds beep
	OP:11	Continuous beep
	OP:12	5 quick beeps,Repeating
2 Beeper Volume	OP:20	Beeper Off
	OP:21	Low
	0 P :22	Medium
	OP:23	High
3 Beeper On/Off	OP:30	Keybeep Off
	0 P :31	Keybeep On
4 Keyboard Window	OP:40	15 seconds
	OP:41	30 seconds
	0 P :42	60 seconds
	OP:43	120 seconds
5 On the Fly	OP:50	On-the-Fly Disable
	0 P :51	On-the-Fly Enable
6 Door Reset	0 P :60	Door Reset Disable
	OP:61	Door Reset Enable
7 Max time	0 P :70	60 Minute Maximum Cook Time
	OP:71	10 Minute Maximum Cook Time
8 Manual Programming	OP:80	Manual Programming Disable
	0 P :81	Manual Programming Enable
9 Double Digit	0 P :90	Single Digit Mode-10 programs
	OP:91	Doule Digit Mode-100 programs

Appendix. B Default Cook Times

The oven shall ship with the following Preset Cook Times unless otherwise noted in the product Specification.

Button	Display (Time)	Power	Cook Factors
1	0:10	100%	80%
2	0:20	100%	80%
3	0:30	100%	80%
4	0:45	100%	80%
5	1:00	100%	80%
6	1:30	100%	80%
7	2:00	100%	80%
8	3:00	100%	80%
9	4:00	100%	80%
0	5:00	100%	80%

## 1. Power Up

" \_ \_ \_ " displays when the oven is electrified for the first time. If "  " button pressed, the oven will change to idle mode.

**STOP / RESET**

Note: Under idle mode, no button can be pressed.

## 2. Idle Mode

- 1) Entry: The oven shall enter idle mode after a set of seconds have expired in Ready Mode or Pause Mode without a keyboard press or a door open and close. The number of seconds is determined by the keyboard Timeout Window, set by User Option 4.
- 2) During idle mode, the display is blank. And there shall be no oven activity.
- 3) Opening and then closing the oven door, the oven will exit the idle mode and into ready mode.




## 3. Ready Mode

- 1) Opening and then closing the door while the oven is in Idle Mode will put the oven into Ready Mode.
- 2) During Ready Mode, "READY" displays.
- 3) From the Ready Mode, the oven can go to almost all of the other modes.
- 4) Only the fan and lamp work.



## 4. Door Open Mode

- 1) While the door of the oven is open, the oven shall be in Door Open Mode.
- 2) During this mode, the display is blank. If the door of the oven is open during cooking, "DOOR" and "OPEN" will display in turn.
- 3) When the door is closed, if User Option OP:60 is selected and the oven was running a manual or preset cook cycle, the oven shall enter Pause Mode.  
In all other cases, the oven shall be put to Door Open Mode with User Option OP:61 set, any information about a Manual or Preset Program which was running. will clear out



## 5. Pause Mode

- 1) While in Manual Cook Mode, or Preset Program Cook Mode, if the door is open and then closed, or if the " " pad is pressed, the oven will enter Pause Mode.  
STOP / RESET
- 2) While paused, the oven will display the remaining cooking time.
- 3) Only the fan and lamp work.
- 4) Pause Mode will expire back to Idle Mode in the exact fashion as Ready Mode, dependent on User Option 4. Additionally, if the " " button is pressed, the oven shall immediately enter Ready Mode. OR if press " " button, the oven will go into working mode.  
START / CONFIRM + 10 SEC.


## 6. Manual Cook Entry Mode

- 1) While the oven is in the Ready Mode, pressing the Time Entry pad on the keyboard will put the oven into Manual Cook Entry Mode.
  - 2) During this mode, "00:00" displays
  - 3) If you press " Hold ", " Defrost ", "Medium " or "Med-Hi" button to select power level, the oven will display the related power. If the same button pressed twice, the power will change to PL10. If no power chosen, "PL10" is default.  
0%      20%      50%      70%
  - 4) Only the fan and lamp work.
  - 5) During setting process, press " " to enter Manual Cook Mode.  
START / CONFIRM + 10 SEC.
- Press " " to enter Ready Mode.  
STOP / RESET


## 7. Manual Cook Mode

- 1) Pressing the " " pad will cause to the oven to begin Manual Cook Mode.  
START / CONFIRM + 10 SEC.
- 2) During this mode, remaning cooking time displays. The fan and oven lamp will work.
- 3) When cooking program finish, the oven will enter End of Cook Cycle Mode.  
If you press " " button under this mode, the oven will enter Pause Mode.  
STOP / RESET


## 8. End of Cook Cycle Mode

- 1) After the time has expired in a Manual Cook Mode, or a Preset Program Cook Mode, the oven shall go into The End of Cook Cycle Mode.
- 2) During this mode, "DONE" displays.
- 3) If either User Option OP:11 or "OP:12" is selected, the oven shall continue to sound until the user acknowledges this by either opening and then closing the door or pressing the "  "pad. If User Option OP:10 is selected, after the 3 seconds beep, the oven shall go into Idle Mode.

## 9. Preset Program Cook Mode


- 1) This mode allows cooking of food items through a one pad touch operation. While in Ready Mode, pressing one of ten digit keys on the keyboard will cause the oven to run the Preset Program associated with that key.
  - 2) The oven displays the remaining cooking time. If it is multi-stage cooking, the total remaining cooking time displays not a particular stage cooking time.
  - 3) When cooking program finish, the oven will enter End of Cook Cycle Mode.
- If you press "  " button under this mode, the oven will enter Pause Mode.

## 10. On the Fly Cooking

- 1) While the oven is cooking or under Pause Mode, if User Option OP:51 is selected press number buttons, the preset cooking program will start automatically.
  - 2) LED displays the remaining cooking time.
  - 3) When cooking program finish, the oven will enter End of Cook Cycle Mode.
- If you press "  " button under this mode, the oven will enter Pause Mode.

## 11. Programming Mode


This mode allows the user to assign cook times and power levels to the once touche button.

- 1) Open the door and press "1" for 5 seconds, the buzzer will sound once and enter to Programming Mode.
- 2) "PROGRAM" displays.
- 3) Press any number ,0 to 9, and the LED will display the saved time, then you can input the time you need.
- 4) Press " Hold " , "Defrost" , "Medium" or " Med-Hi " to input the power level.  
0% , 20% , 50% 70%
- LED will display the related power. If the same button pressed twice, the power will change to PL10. If no power chosen, "PL10" is default.
- 5) To change the cooking factors: If press "X2", LED will display "CF:XX". The default factor is 80%. "CF:80" displays. If you need to change the cooking power, just press one of the number buttons to set.
- 6) After setting the time and power, press "  " in 30s, the cooking program will be saved.

START / CONFIRM  
+ 10 SEC.

When the program saved, "PROGRAM" displays.

- 7) If all the cooking time exceeds the MAX.time User Option 7, when press

"  " to save the program, the buzzer will sound three times briefly to tell you the time  
START / CONFIRM  
+ 10 SEC.

is no use. And then LED turn back to show "PROGRAM". The time set before will be no change.


- 8) Close the door, the oven will turn back to Ready Mode.

If press "  " button during setting process, the oven turn to Door Open Mode.

STOP / RESET

The program that not saved will be lost. If there is program saved as memory procedure, press the related number button, the saved program will start. If no saved program, the buzzer will alarm when pressing number button and it will not work.

Note:

1. If the electricity is cut off, the saved program will not lost.
2. If the program need to reset , just repeat the aboved steps.
3. If press "  " at the last step, it will turn back to Door Open Mode. The setting will be no use.

STOP / RESET




## 12. Double Quantity cooking




- 1) Under ready state, press "X2" button and then press number buttons 0-9 in 5 seconds, the oven will start cooking with the quantity preset cooking time.
- 2) Press "X2", "DOUBLE" displays. When press number buttons, LED will display the quantity preset time.  
For example, number button "5" and its preset time is 1 minute. Then press "X2", then time will change to  $1:00 \times (1+0.8) = 1:48$
- 3) When cooking program finish, the oven will enter End of Cook Cycle Mode.

## 13. Stage Cooking Programming



This allows the user to cook food items at combination of various Power Levels.

- 1) Three stages can be set at most under cooking mode or memory mode.  
After setting the power and time for the first stage, press "Time Entry" to set the second stage.  
And the same step to set the third stage.
- 2) When setting the second or the third stage, press "Time Entry", "STAGE-2" or "STAGE-3" displays.
- 3) Press "  " button to start cooking.  
START / CONFIRM  
+ 10 SEC.

## 14. Use Option Mode

- 1) Open the oven door and press "2" for 5 seconds. The buzzer sounds once and enter this mode.
- 2) LED displays "OP: --".
- 3) Press any number button to enter related mode setting.  
For example: to set the voice of the buzzer to medium. Press " 2 ", "OP:22" displays.  
If you want to change, keep pressing "2", LED displays "OP:20", "OP:21", "OP:22", "OP:23", "OP:20" .....in cycle.
- 4) Press "  " to save the current setting. After saved, "OP: --" display again.  
START / CONFIRM  
+ 10 SEC.
- 5) During setting process, press "  " to enter Door Open Mode. Close the door will enter Ready Mode.  
STOP / RESET
- 6) If "  " button not pressed at the last step, the program cannot be saved but stay at previous way.  
START / CONFIRM  
+ 10 SEC.

## 15. Service Mode

- 1) Open the oven door and press "3" for 5 seconds to enter service mode.
- 2) LED displays "SERVICE".
- 3) To check the times of closing or opening the door, just press number button "3", LED will display the times.
- 4) Press number button "4" in , "4-CLEAR" displays. Press " " and "CLEARED" displays, the message will be cancelled.  
START / CONFIRM  
+ 10 SEC.
- 5) Press " " to enter Door Open Mode. Close the door will enter Ready Mode.  
STOP / RESET

## 16. Factory-default setting

In power up and ready mode, press " " and " o " to factory--default setting.  
START / CONFIRM  
+ 10 SEC.

## EXPERT COOKING GUIDE

	Item	Time	Power
1	Sandwich	40seconds	P100
2	Chicken breast	50seconds	P100
3	Pizza	3minutes55seconds	P70

# Trouble shooting


Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.


## SCHEMATIC DIAGRAM

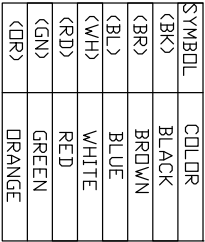

NOTE  
1.DOOR IS OPENED  
2.WIRE COLOR


**BEFORE SERVICING**

Discharge the high voltage capacitor by shorting the negative high voltage terminal of it to chassis ground

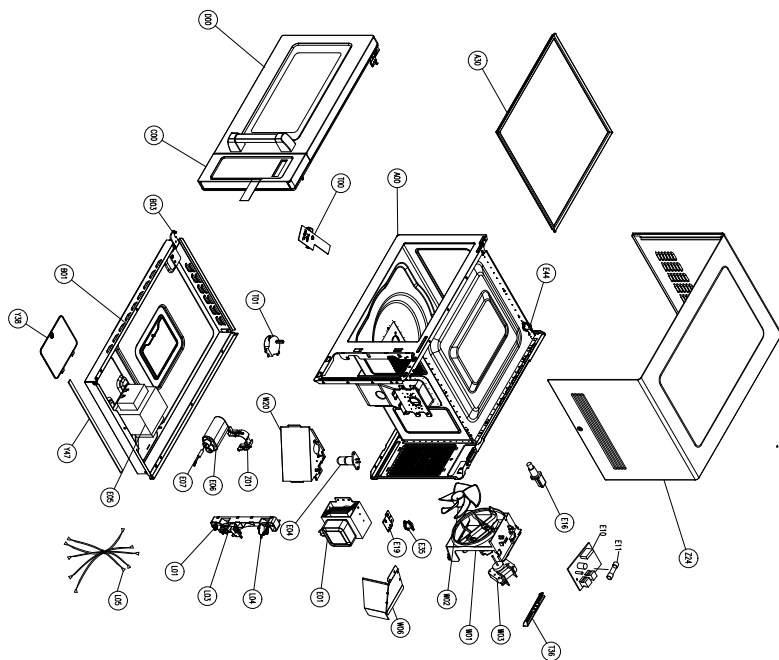

№	Наименование	Единица измерения	Количество
1	Корпус	шт.	1
2	Дверь	шт.	1
3	Ящик	шт.	1
4	Ящик	шт.	1
5	Внутренняя панель	шт.	1
6	Внутренняя панель	шт.	1
7	Внутренняя панель	шт.	1
8	Внутренняя панель	шт.	1
9	Внутренняя панель	шт.	1
10	Компрессор	шт.	1
11	Конденсор	шт.	1
12	Эватор	шт.	1
13	Панель управления	шт.	1
14	Таймер	шт.	1
15	Ручка	шт.	1
16	Петля	шт.	1
17	Панель	шт.	1
18	Панель	шт.	1
19	Крепеж	шт.	1
20	Крепеж	шт.	1
21	Саморез	шт.	1
22	Саморез	шт.	1
23	Саморез	шт.	1
24	Саморез	шт.	1
25	Саморез	шт.	1
26	Саморез	шт.	1
27	Саморез	шт.	1
28	Саморез	шт.	1
29	Саморез	шт.	1
30	Саморез	шт.	1
31	Саморез	шт.	1
32	Саморез	шт.	1
33	Саморез	шт.	1
34	Саморез	шт.	1
35	Саморез	шт.	1
36	Саморез	шт.	1
37	Саморез	шт.	1
38	Саморез	шт.	1
39	Саморез	шт.	1
40	Саморез	шт.	1
41	Саморез	шт.	1
42	Саморез	шт.	1
43	Саморез	шт.	1
44	Саморез	шт.	1
45	Саморез	шт.	1
46	Саморез	шт.	1
47	Саморез	шт.	1
48	Саморез	шт.	1
49	Саморез	шт.	1
50	Саморез	шт.	1
51	Саморез	шт.	1
52	Саморез	шт.	1
53	Саморез	шт.	1
54	Саморез	шт.	1
55	Саморез	шт.	1
56	Саморез	шт.	1
57	Саморез	шт.	1
58	Саморез	шт.	1
59	Саморез	шт.	1
60	Саморез	шт.	1
61	Саморез	шт.	1
62	Саморез	шт.	1
63	Саморез	шт.	1
64	Саморез	шт.	1
65	Саморез	шт.	1
66	Саморез	шт.	1
67	Саморез	шт.	1
68	Саморез	шт.	1
69	Саморез	шт.	1
70	Саморез	шт.	1
71	Саморез	шт.	1
72	Саморез	шт.	1
73	Саморез	шт.	1
74	Саморез	шт.	1
75	Саморез	шт.	1
76	Саморез	шт.	1
77	Саморез	шт.	1
78	Саморез	шт.	1
79	Саморез	шт.	1
80	Саморез	шт.	1
81	Саморез	шт.	1
82	Саморез	шт.	1
83	Саморез	шт.	1
84	Саморез	шт.	1
85	Саморез	шт.	1
86	Саморез	шт.	1
87	Саморез	шт.	1
88	Саморез	шт.	1
89	Саморез	шт.	1
90	Саморез	шт.	1
91	Саморез	шт.	1
92	Саморез	шт.	1
93	Саморез	шт.	1
94	Саморез	шт.	1
95	Саморез	шт.	1
96	Саморез	шт.	1
97	Саморез	шт.	1
98	Саморез	шт.	1
99	Саморез	шт.	1
100	Саморез	шт.	1
101	Саморез	шт.	1
102	Саморез	шт.	1
103	Саморез	шт.	1
104	Саморез	шт.	1
105	Саморез	шт.	1
106	Саморез	шт.	1
107	Саморез	шт.	1
108	Саморез	шт.	1
109	Саморез	шт.	1
110	Саморез	шт.	1
111	Саморез	шт.	1
112	Саморез	шт.	1
113	Саморез	шт.	1
114	Саморез	шт.	1
115	Саморез	шт.	1
116	Саморез	шт.	1
117	Саморез	шт.	1
118	Саморез	шт.	1
119	Саморез	шт.	1
120	Саморез	шт.	1
121	Саморез	шт.	1
122	Саморез	шт.	1
123	Саморез	шт.	1
124	Саморез	шт.	1

№	Наименование	Единица измерения	Количество
1	Саморез	шт.	1
2	Саморез	шт.	1
3	Саморез	шт.	1
4	Саморез	шт.	1
5	Саморез	шт.	1
6	Саморез	шт.	1
7	Саморез	шт.	1
8	Саморез	шт.	1
9	Саморез	шт.	1
10	Саморез	шт.	1
11	Саморез	шт.	1
12	Саморез	шт.	1
13	Саморез	шт.	1
14	Саморез	шт.	1
15	Саморез	шт.	1
16	Саморез	шт.	1
17	Саморез	шт.	1
18	Саморез	шт.	1
19	Саморез	шт.	1
20	Саморез	шт.	1
21	Саморез	шт.	1
22	Саморез	шт.	1
23	Саморез	шт.	1
24	Саморез	шт.	1
25	Саморез	шт.	1
26	Саморез	шт.	1
27	Саморез	шт.	1
28	Саморез	шт.	1
29	Саморез	шт.	1
30	Саморез	шт.	1
31	Саморез	шт.	1
32	Саморез	шт.	1
33	Саморез	шт.	1
34	Саморез	шт.	1
35	Саморез	шт.	1
36	Саморез	шт.	1
37	Саморез	шт.	1
38	Саморез	шт.	1
39	Саморез	шт.	1
40	Саморез	шт.	1
41	Саморез	шт.	1
42	Саморез	шт.	1
43	Саморез	шт.	1
44	Саморез	шт.	1
45	Саморез	шт.	1
46	Саморез	шт.	1
47	Саморез	шт.	1
48	Саморез	шт.	1
49	Саморез	шт.	1
50	Саморез	шт.	1
51	Саморез	шт.	1
52	Саморез	шт.	1
53	Саморез	шт.	1
54	Саморез	шт.	1
55	Саморез	шт.	1
56	Саморез	шт.	1
57	Саморез	шт.	1
58	Саморез	шт.	1
59	Саморез	шт.	1
60	Саморез	шт.	1
61	Саморез	шт.	1
62	Саморез	шт.	1
63	Саморез	шт.	1
64	Саморез	шт.	1
65	Саморез	шт.	1
66	Саморез	шт.	1
67	Саморез	шт.	1
68	Саморез	шт.	1
69	Саморез	шт.	1
70	Саморез	шт.	1
71	Саморез	шт.	1
72	Саморез	шт.	1
73	Саморез	шт.	1
74	Саморез	шт.	1
75	Саморез	шт.	1
76	Саморез	шт.	1
77	Саморез	шт.	1
78	Саморез	шт.	1
79	Саморез	шт.	1
80	Саморез	шт.	1
81	Саморез	шт.	1
82	Саморез	шт.	1
83	Саморез	шт.	1
84	Саморез	шт.	1
85	Саморез	шт.	1
86	Саморез	шт.	1
87	Саморез	шт.	1
88	Саморез	шт.	1
89	Саморез	шт.	1
90	Саморез	шт.	1
91	Саморез	шт.	1
92	Саморез	шт.	1
93	Саморез	шт.	1
94	Саморез	шт.	1
95	Саморез	шт.	1
96	Саморез	шт.	1
97	Саморез	шт.	1
98	Саморез	шт.	1
99	Саморез	шт.	1
100	Саморез	шт.	1
101	Саморез	шт.	1
102	Саморез	шт.	1
103	Саморез	шт.	1
104	Саморез	шт.	1
105	Саморез	шт.	1
106	Саморез	шт.	1
107	Саморез	шт.	1
108	Саморез	шт.	1
109	Саморез	шт.	1
110	Саморез	шт.	1
111	Саморез	шт.	1
112	Саморез	шт.	1
113	Саморез	шт.	1
114	Саморез	шт.	1
115	Саморез	шт.	1
116	Саморез	шт.	1
117	Саморез	шт.	1
118	Саморез	шт.	1
119	Саморез	шт.	1
120	Саморез	шт.	1
121	Саморез	шт.	1
122	Саморез	шт.	1
123	Саморез	шт.	1
124	Саморез	шт.	1

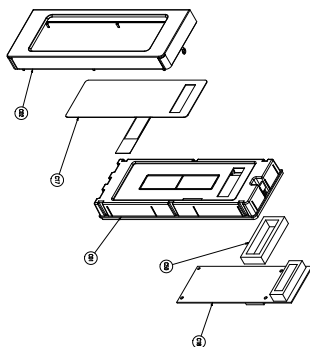

Year	2000	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030	2031	2032	2033	2034	2035	2036	2037	2038	2039	2040	2041	2042	2043	2044	2045	2046	2047	2048	2049	2050	2051	2052	2053	2054	2055	2056	2057	2058	2059	2060	2061	2062	2063	2064	2065	2066	2067	2068	2069	2070	2071	2072	2073	2074	2075	2076	2077	2078	2079	2080	2081	2082	2083	2084	2085	2086	2087	2088	2089	2090	2091	2092	2093	2094	2095	2096	2097	2098	2099	2100
Year	2000	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030	2031	2032	2033	2034	2035	2036	2037	2038	2039	2040	2041	2042	2043	2044	2045	2046	2047	2048	2049	2050	2051	2052	2053	2054	2055	2056	2057	2058	2059	2060	2061	2062	2063	2064	2065	2066	2067	2068	2069	2070	2071	2072	2073	2074	2075	2076	2077	2078	2079	2080	2081	2082	2083	2084	2085	2086	2087	2088	2089	2090	2091	2092	2093	2094	2095	2096	2097	2098	2099	2100



GGM Gastro International GmbH  
Weinerpark 16  
D-48607 Ochtrup

[www.ggmgaastro.com](http://www.ggmgaastro.com)      [info@ggmgaastro.com](mailto:info@ggmgaastro.com)  
+49 2553 7220 0