


RICE COOKER

Instruction Manual

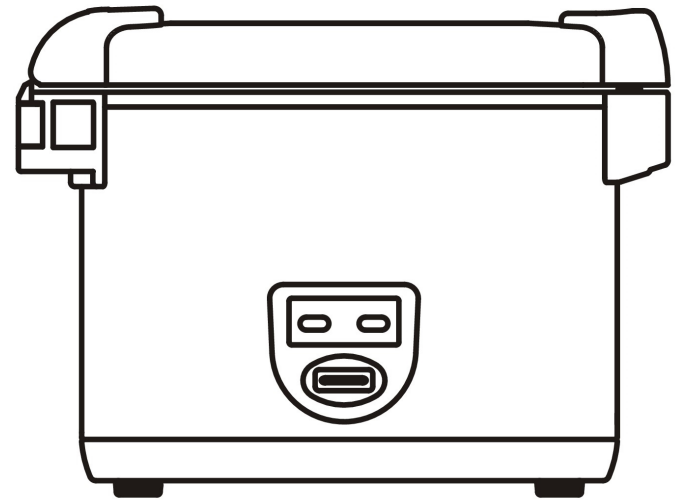

RKV16

DELUXE SPECIAL RICE COOKER INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

PARTS IDENTIFICATION




CAUTION

1. Be sure to use a properly wired wall outlet. Use only with rated voltage.
2. Be sure to keep the bottom of the pan and heating plate clean of foreign matter, or the condition might cause. Insufficient cooking or even blowing off the thermal fuse.
3. Do not use the cooker on a wet surface or near a stove. Deformation or failure may take place.
4. Do not immerse the body in water. It will cause a leak or other trouble.
5. To reduce the risk of electric shock. Cook only in removable container.

Dew collector

- * To remove
Take hold of the sides of the dew collector and pull.
- * To attach
Adjust the upper frame with the groove in the dew collector and push in securely.

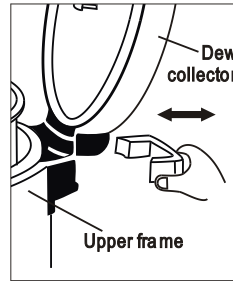


Remove and empty dew collector AFTER EVERY USE.

OPERATION

1. Measure out rice and wash in a separate bowl.
2. Empty the washed rice into the pan and add proper amount of water. As a rule of thumb, the ratio of 1.5 cups of water to 1 cup of rice is preferable.

3. Place the pan in the body and turn it slightly to the right and left to make sure that it is properly located on the heating plate.

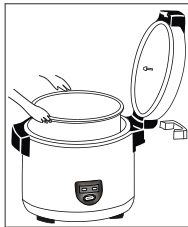


4. Instill the inner lid to the outer lid by pressing the inner lid over the inner lid shaft. If properly, the outer lid will not close.
5. Lower the outer lid until the lid latch engages with the lid catch in a definite click.
6. Insert the AC cord firmly into the socket and plug the power cord to a wall outlet.
7. Press down the switch button. The 'Rice Cooking' lamp lights up. If the pan is not placed in the body, the cooker cannot be switched ON even the switch button is pressed down.
8. When the rice is cooked, the switch is turned OFF automatically with 'Rice Cooking' lamp goes OFF. And 'keep warm' lamp comes ON.

9. Keep the lid on for another 15 minutes to ensure that the rice is thoroughly cooked.
10. The cooker will keep the rice warm automatically. When the rice temperature cools down, the Rice Cooking lamp lights up indicating the heat preservation proceeds. When this is not required, unplug the power cord.

CLEANING

1. Be sure to unplug the power cord and wait until the body is cooled off.
2. Clean the body with mild detergent and a damp cloth. Wipe dry using a clean, soft cloth.
3. Remove the pan and inner lid from the body and clean them in soap water and rinse completely; dry with a soft cloth.
4. Do not use abrasive powder or steel wool for cleaning the lid and the pan. It will cause scratching.
5. Grains of rice or other foreign matters may stick to the heating plate. These must be removed to prevent improper cooking. To remove the cooked rice on the heating plate, you may use a soft steel wool. Then smooth out and polish the spot for good contact between the heating plate and the bottom of the pan.

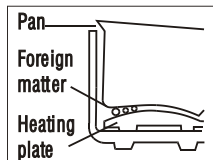

1. Read all instructions before use.
2. Do not touch the hot surface. Use the handle on the top lid or two ears on the top of the body.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or (state specific part or parts in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning, allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance multifunction, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repairing or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use it outdoors.
9. Do not let cord hang over the edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug, cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
12. Do not use the appliance for than intended use.
13. To reduce the risk of electric shock, cook only in removable container.

SAVE THESE INSTRUCTIONS